

Assembly Instruction


DESCRIPTION:

3 DOOR WARDROBE WITH MIRROR

2,0 hr

APPROXIMATE ASSEMBLY TIME

2 PERSON ASSEMBLY

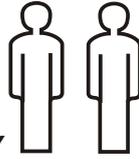


FLOOR AREA
2,5 M x 2,5 M




REQUIRED ASSEMBLY SPACE

REQUIRED ASSEMBLY TOOLS

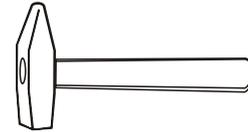

ASSEMBLED DIMENSIONS

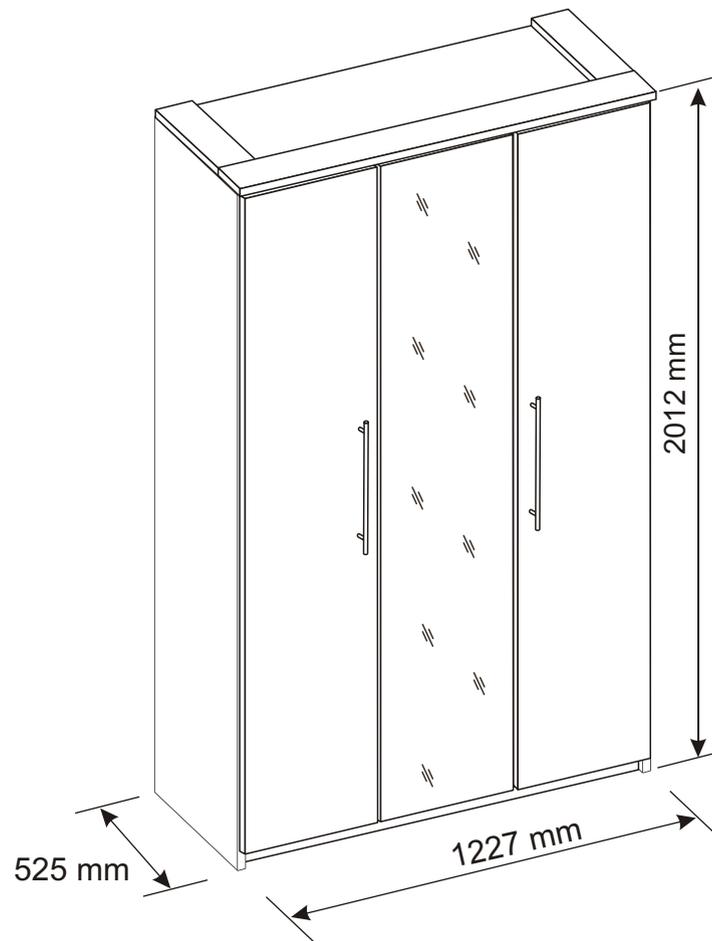


Assembly Instruction

DESCRIPTION:

3 DOOR WARDROBE WITH MIRROR

PARTS LIST

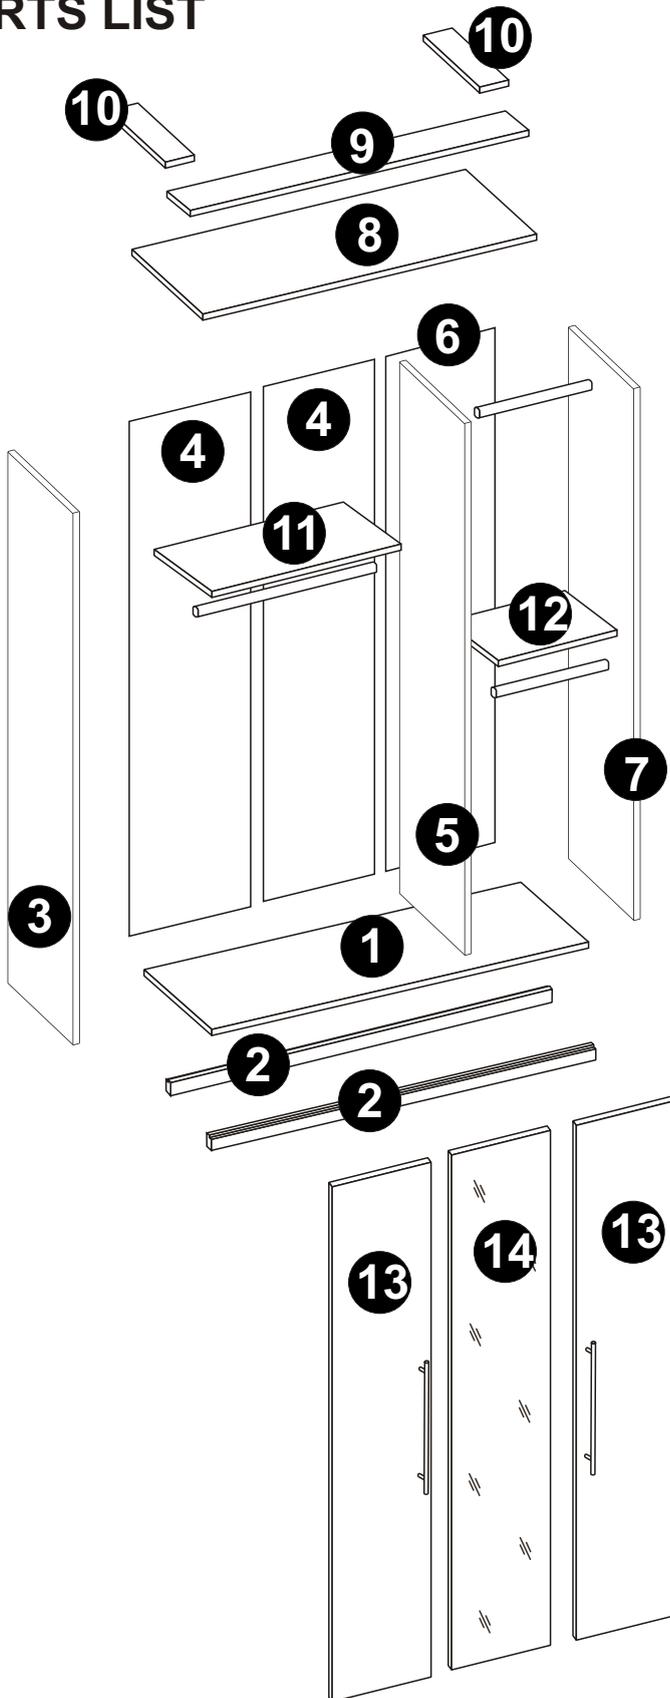

NO. PART LIST

QTY

(1) LOWER TOP PANEL	1
(2) PLINTH	2
(3) LEFT SIDE PANEL	1
(4) BACK PANEL 1916x399mm	2
(5) VERTICAL DIVIDER	1
(6) BACK PANEL 1916x398mm	1
(7) RIGHT SIDE PANEL	1
(8) UPPER TOP PANEL	1
(9) FRONT CROWN	1
(10) SIDE CROWN	2
(11) HORIZONTAL DIVIDER	1
(12) SHORT HORIZ. DIVIDER	1
(13) DOORS WITHOUT MIRROR	2
(14) DOOR W/ MIRROR	1

PACK 1 CONSISTS OF PARTS :

1, 2, 8, 9, 10, 11, 12,

Al, Fittings .

PACK 2 CONSISTS OF PARTS :

3, 5, 7.

PACK 3 CONSISTS OF PARTS :

4, 6, 13, 14.














Assembly Instruction

DESCRIPTION:

3 DOOR WARDROBE WITH MIRROR

HARDWARE LIST

DO NOT MIX CONTENT OF HARDWARE BOXES

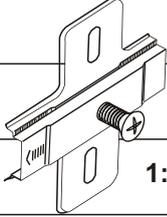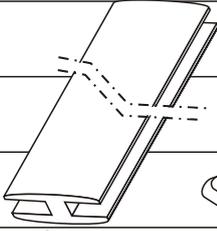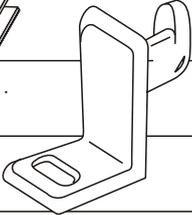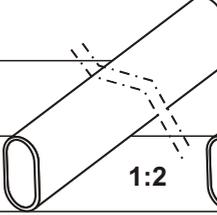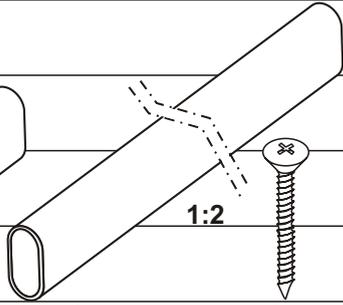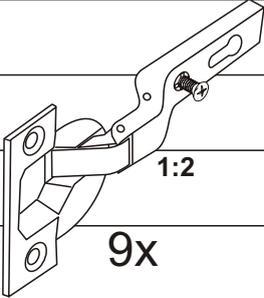							
	1:2					1:2	
	1x	8x	12x	6x	6x	9x	18x
					3,0x13mm		6,3x13mm
	A	B	C	D	E	F	G
	GLUE	PASS THROUGH	SHORT	CLOTHES BAR	SCREW	HINGE PLATE	SCREW
	BAG 1	BOLT	BOLT	SUPPORT	BAG 2	BAG 3	BAG 3
		BAG 1	BAG 1	BAG 2			
							
					1:2		1:2
	1x	4x	4x	7x	2x	1x	9x
	L=1902mm		4,2x13mm	4x35mm	L=380mm	L=782mm	3,0x20mm
	H1	H	I	J	K	K1	L
	BACK PANEL	BACK PANEL	SCREW	SCREW	CLOTHES BAR	CLOTHES BAR	SCREW
	CONNECTOR	SUPPORT	BAG 1	BAG 1			BAG 1
		BAG 1					
							
	1:2		1:2	1:6,5			
	9x	18x	2x	2x	4x	6x	
		4x13mm		L=256mm	M4x40mm		
	M	M1	N	O	P	Q	
	HINGE	SCREW	LEVELLING WEDGE	HANDLE	SCREW	SILICON PEG	
	BAG 3	BAG 3	BAG 2	BAG 4	BAG 4	BAG 2	


Assembly Instruction

DESCRIPTION:

3 DOOR WARDROBE WITH MIRROR

HARDWARE LIST

DO NOT MIX CONTENT OF HARDWARE BOXES

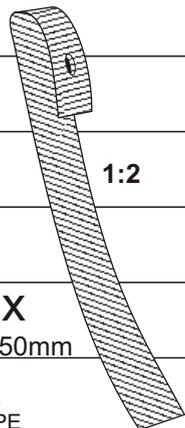


2x
10x150mm

R
TAPE
BAG 5



4x
Ø15mm

S
WASHER
BAG 5



2x
3,5x13mm

T
SCREW
BAG 5



Top Tips before you start!

1. Please check that all parts are present before you start the assembly of your furniture, as once assembled, the furniture is exempt from our home approval policy.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product .

Care and Maintenance of your Furniture

Please periodically check all fittings and re-tighten as necessary.

Please do not jump on your furniture.

To clean your item, please use a damp cloth and wipe clean.

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.


Assembly Instruction

DESCRIPTION:


3 DOOR WARDROBE WITH MIRROR

1

0,5h

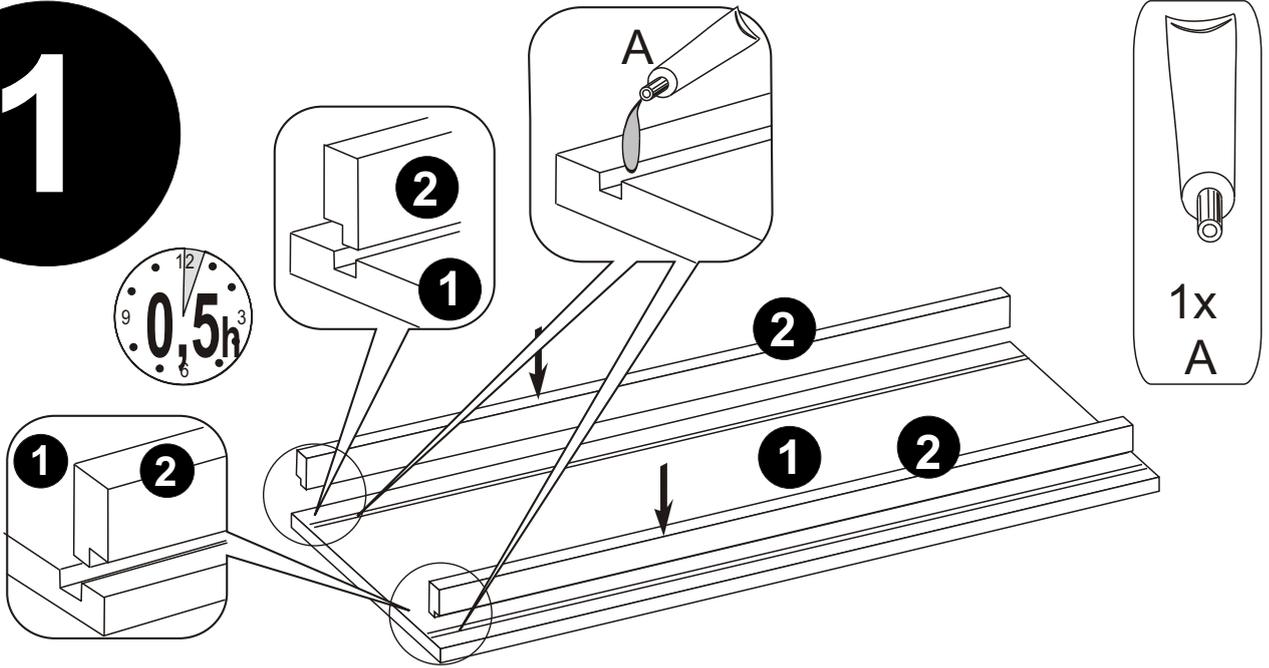

2

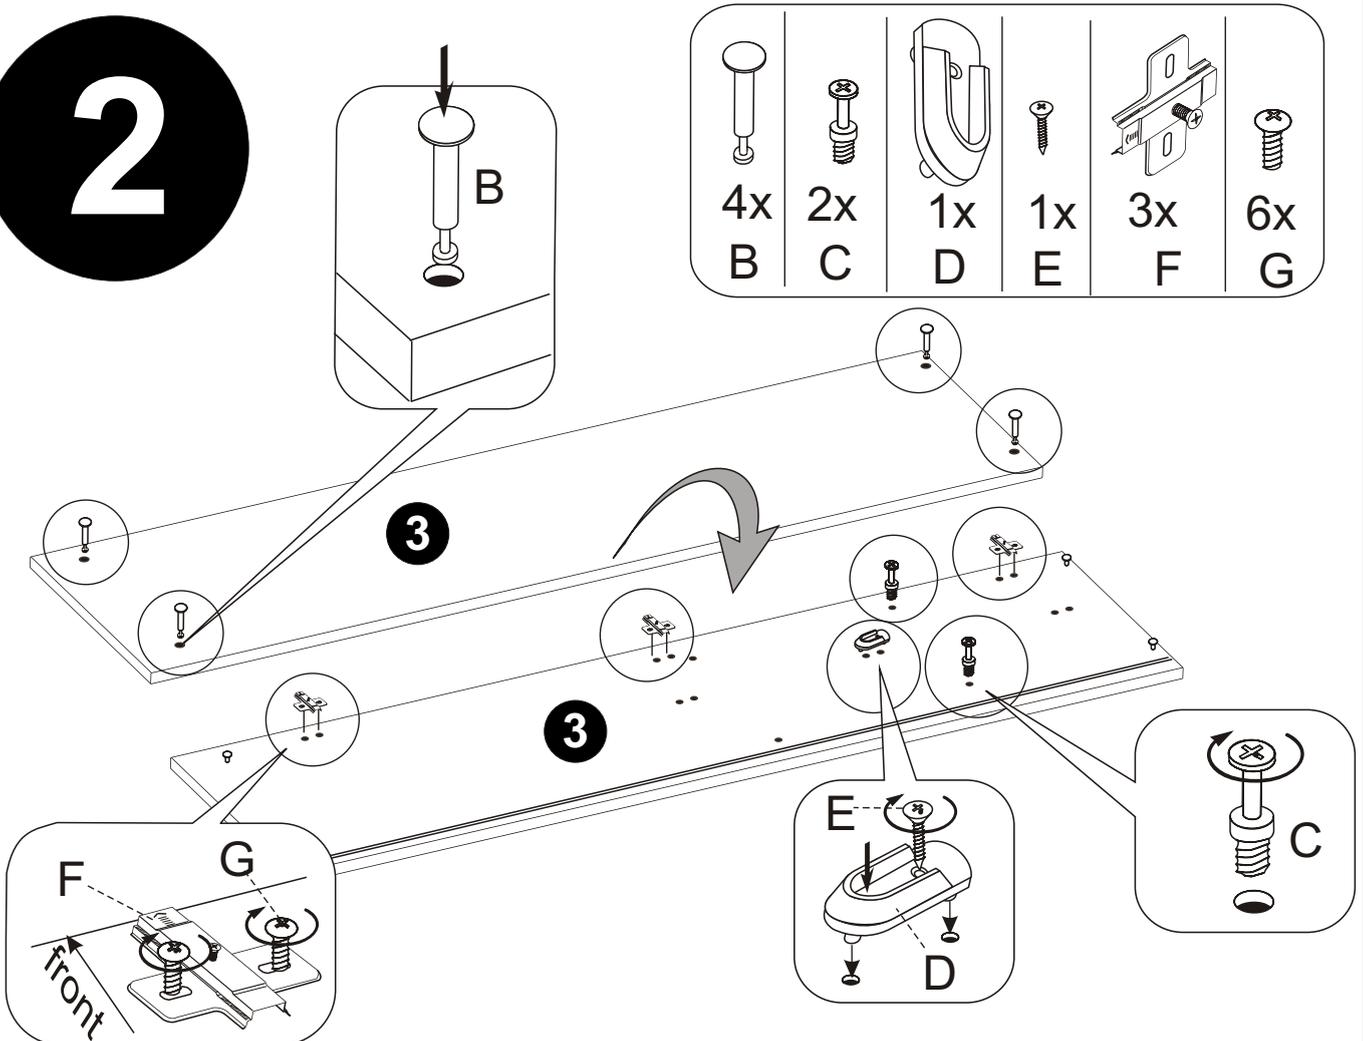


Assembly Instruction


DESCRIPTION:

3 DOOR WARDROBE WITH MIRROR

3

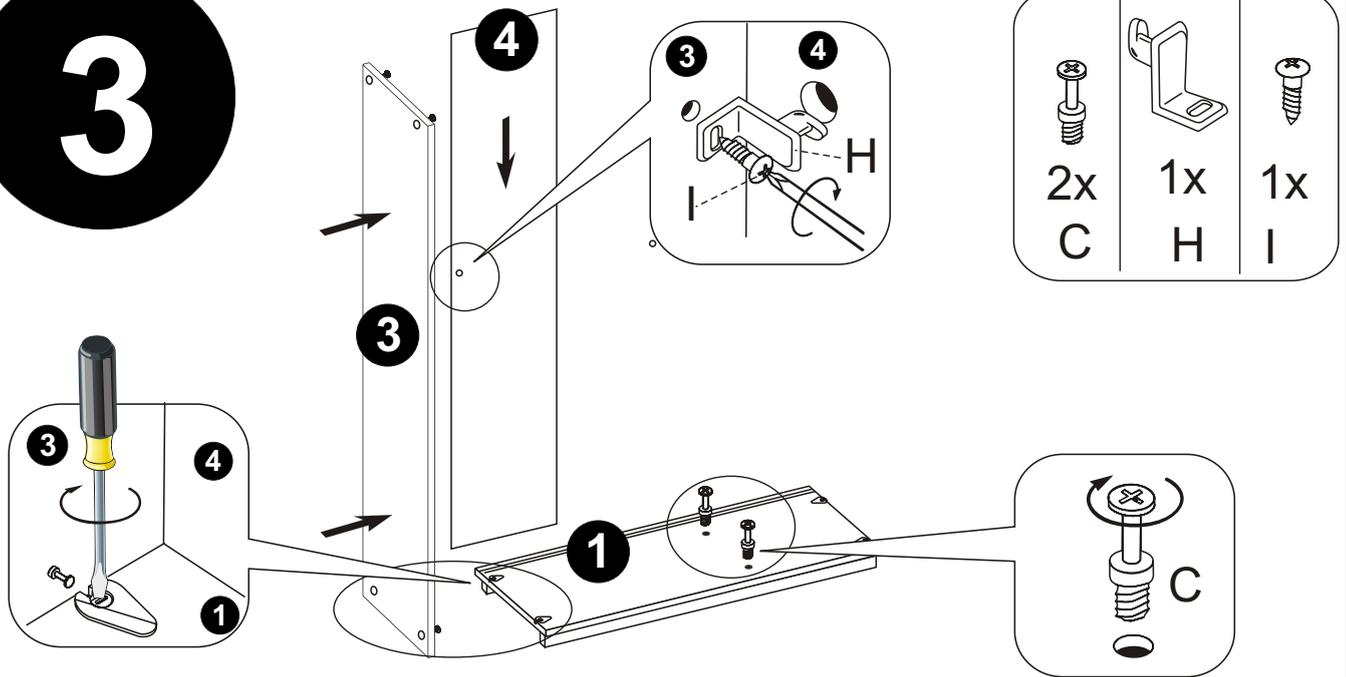

4

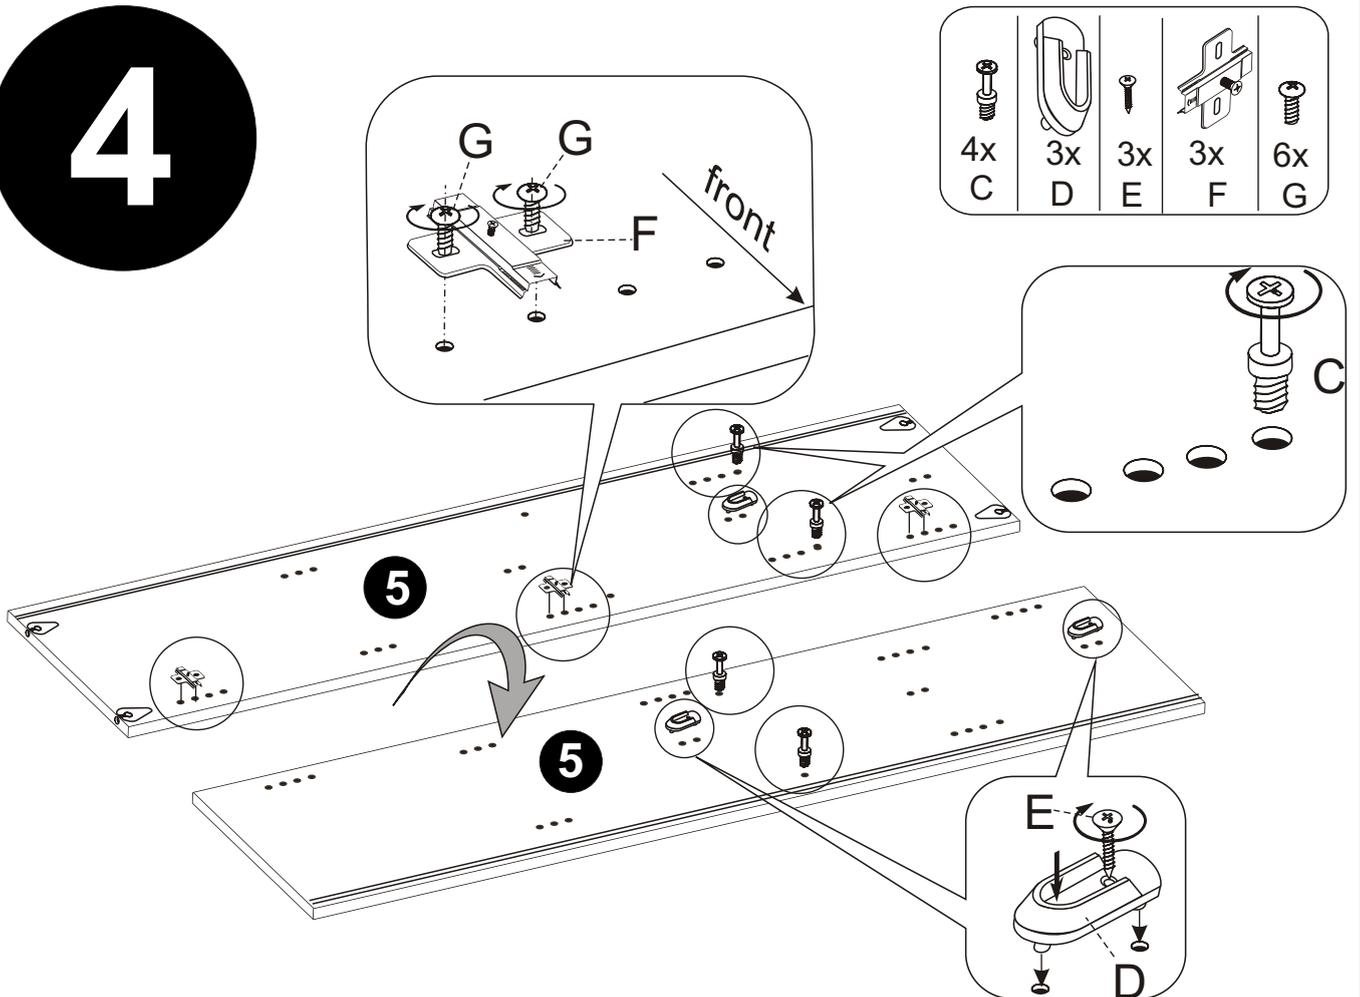


Assembly Instruction


DESCRIPTION:

3 DOOR WARDROBE WITH MIRROR

5

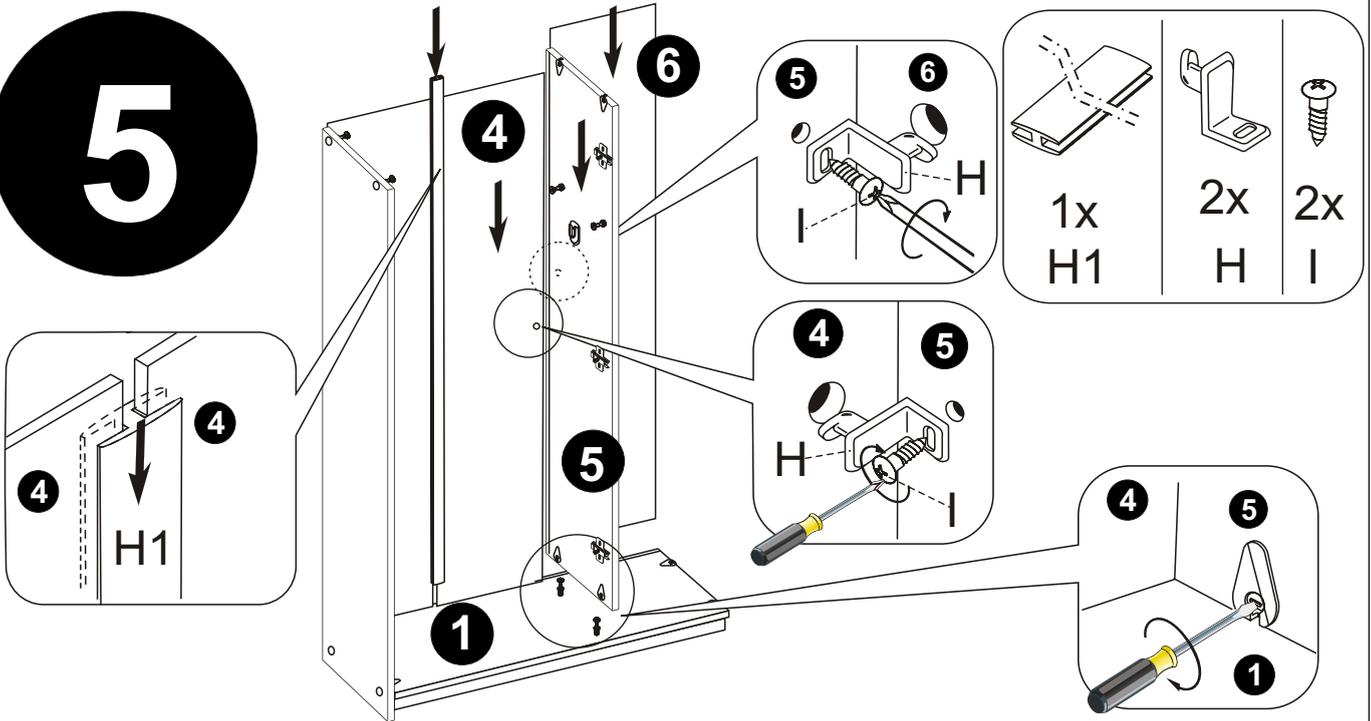

6


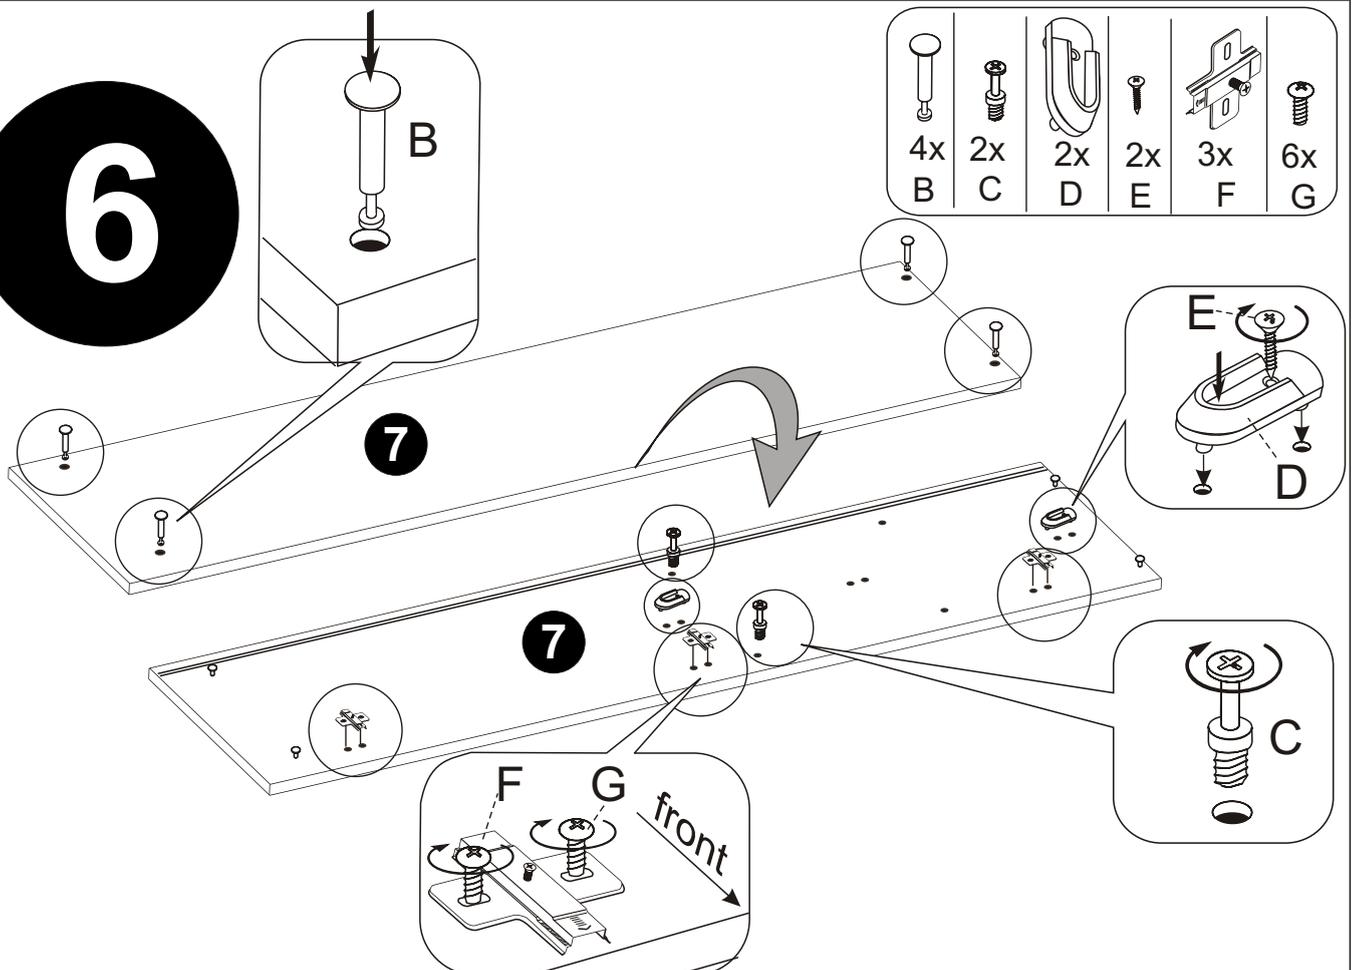


Assembly Instruction



DESCRIPTION:

3 DOOR WARDROBE WITH MIRROR

7

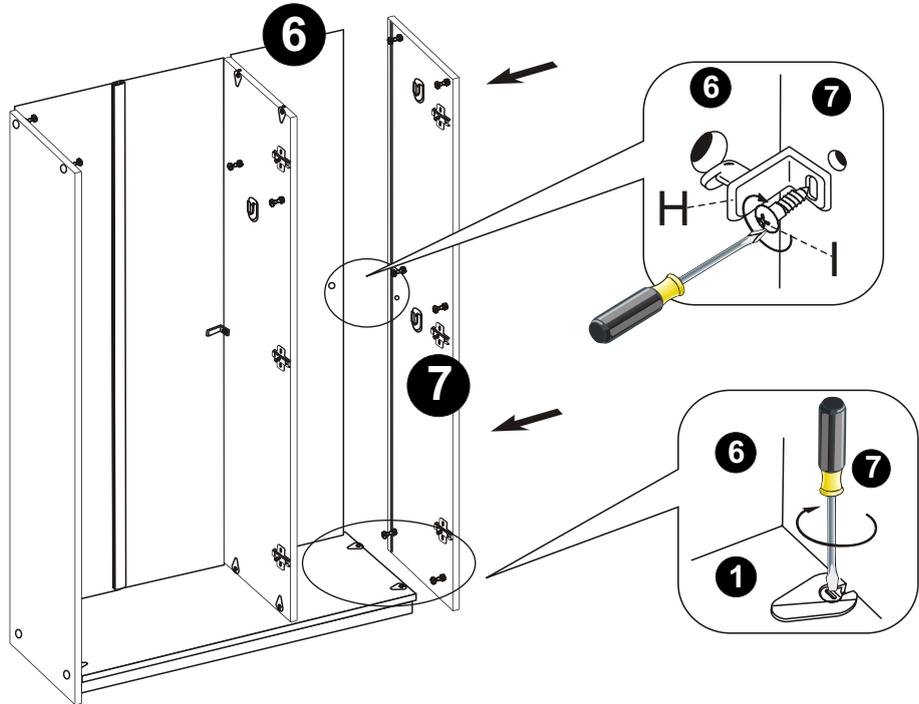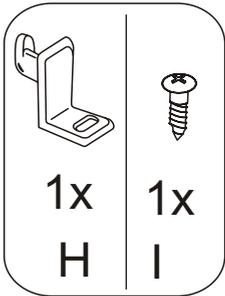

8

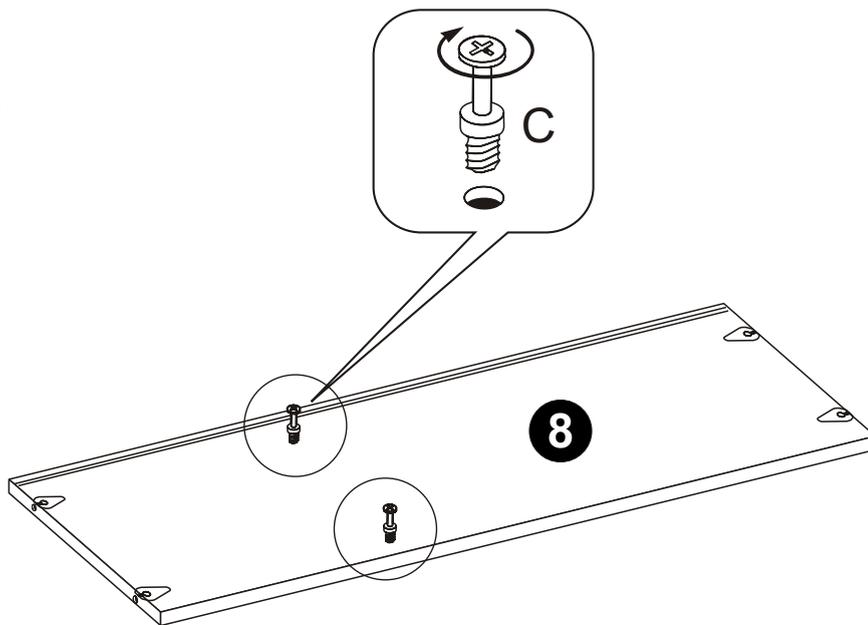
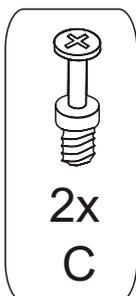


Assembly Instruction





DESCRIPTION:

3 DOOR WARDROBE WITH MIRROR

9

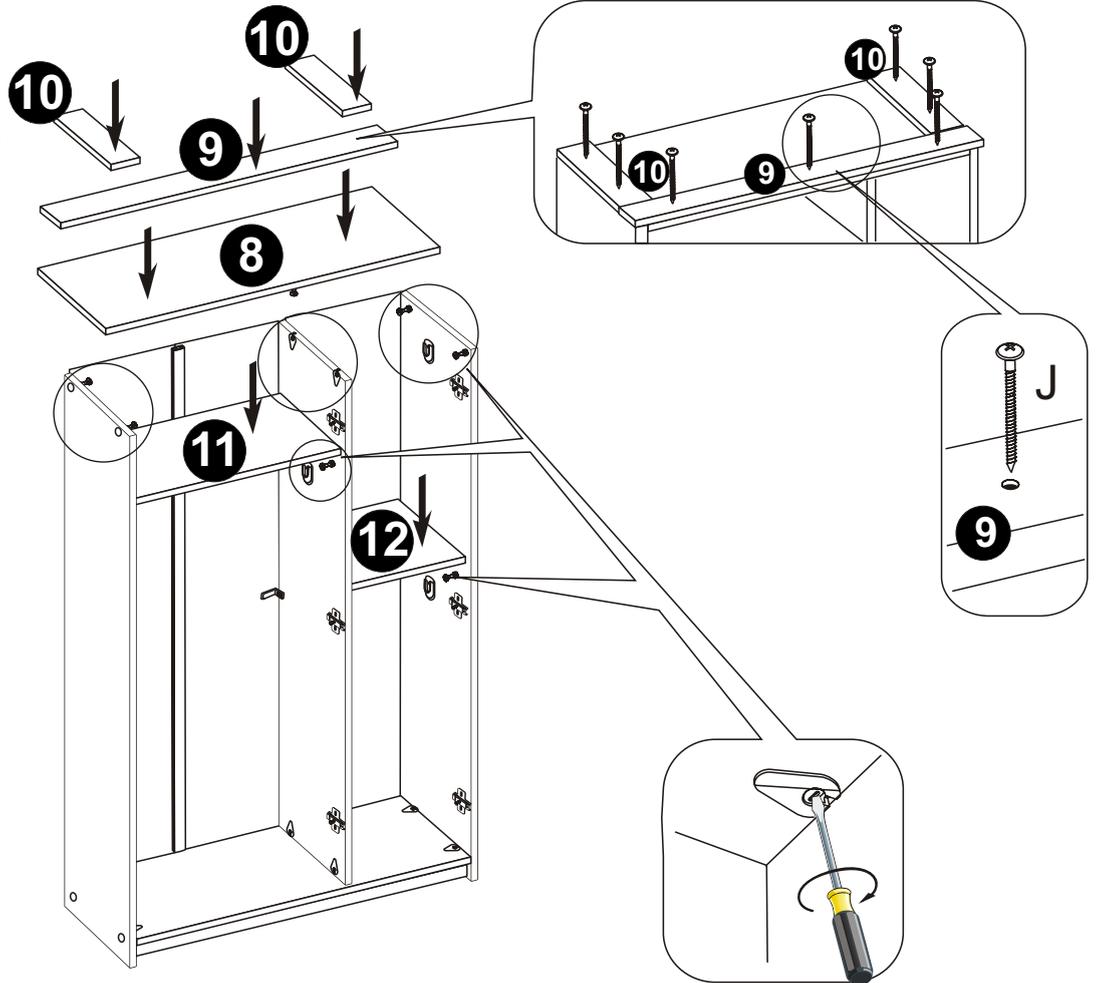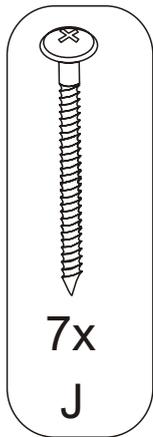

10

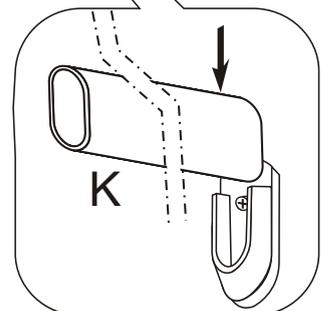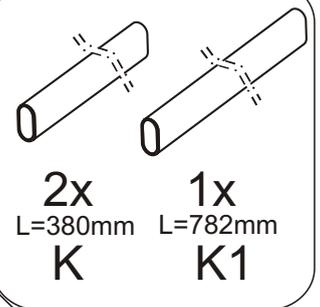
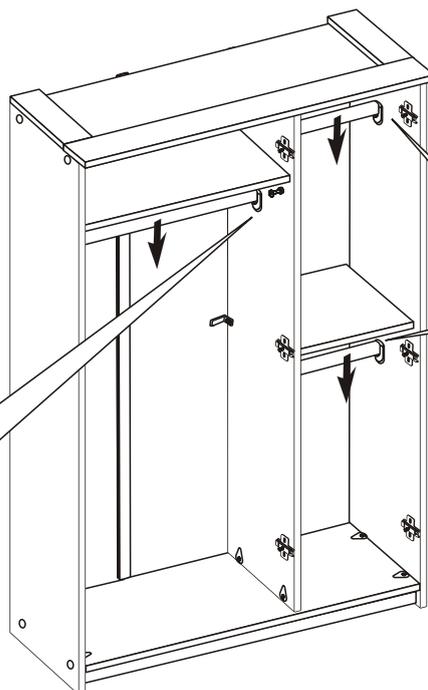
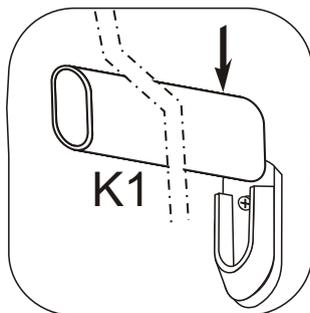


Assembly Instruction




DESCRIPTION:

3 DOOR WARDROBE WITH MIRROR

11

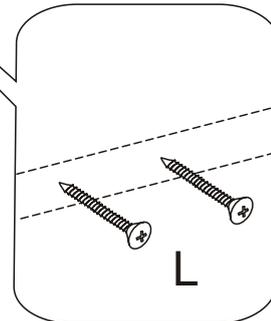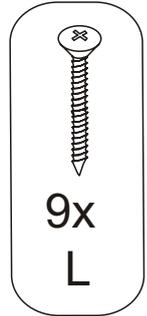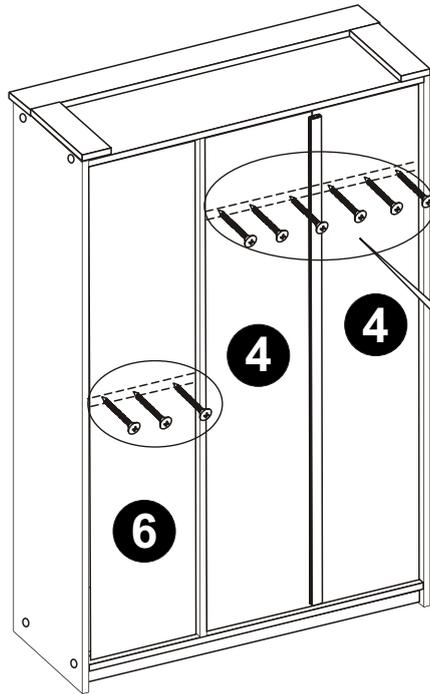

12


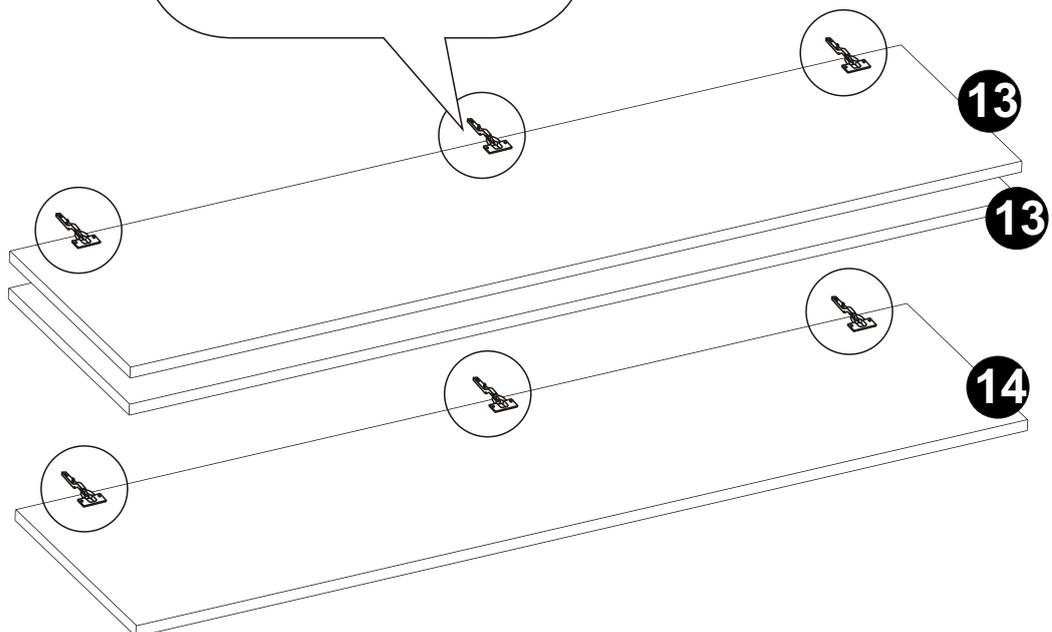
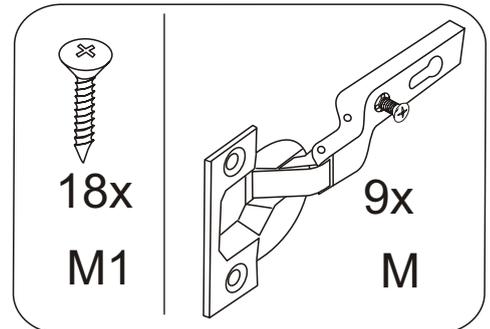
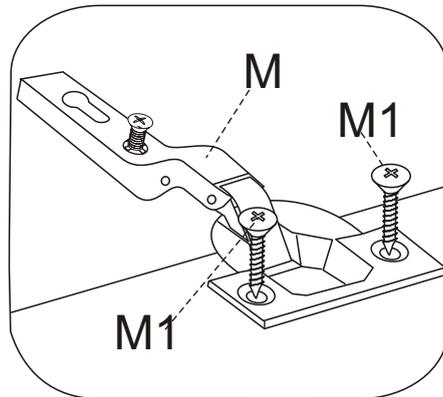


Assembly Instruction




DESCRIPTION:

3 DOOR WARDROBE WITH MIRROR

13

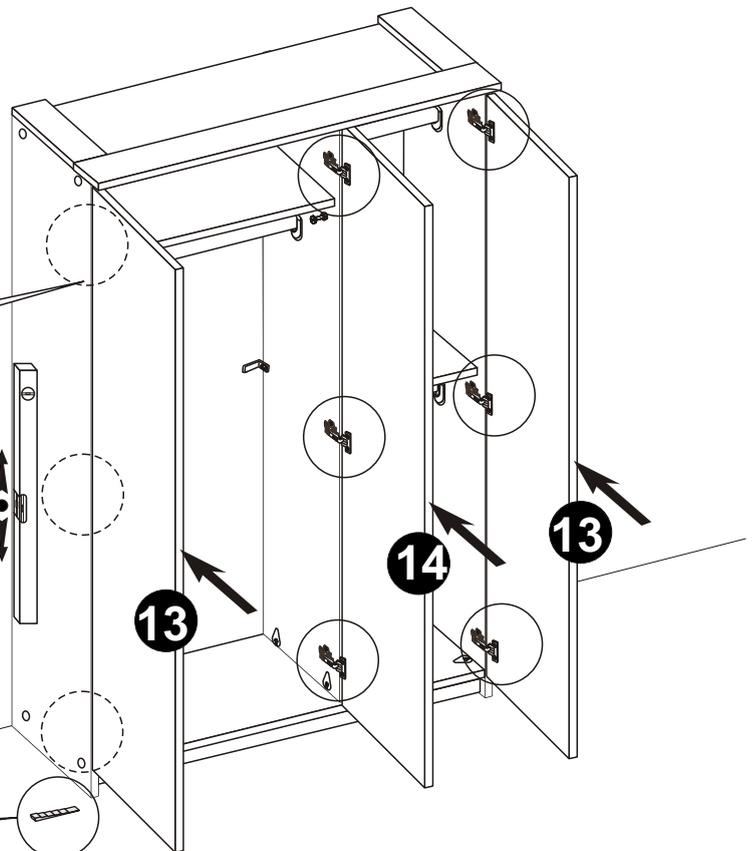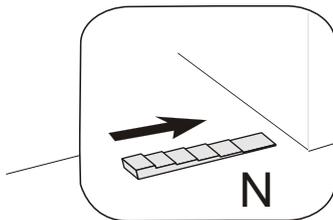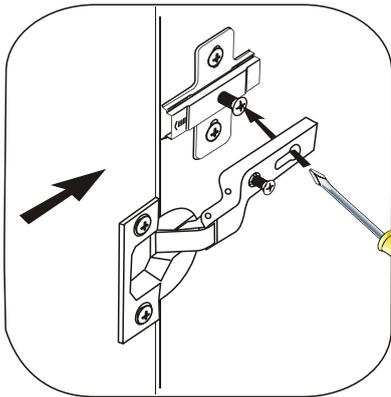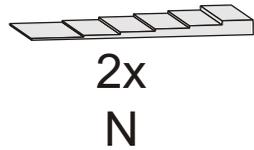

Hinges Adjustment Facilities

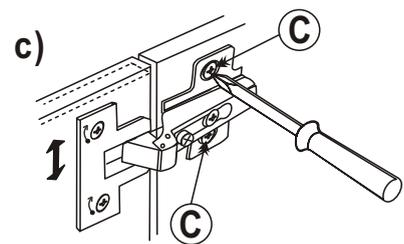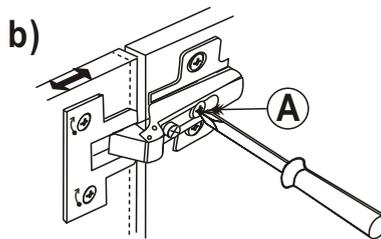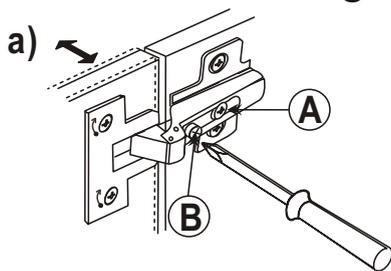

a) Side adjustment:
Loosen fixing screw "A", adjust gap with screw "B" and retighten screw "A".

b) Depth adjustment:
Loosen fixing screw "A", push hinge arm forwards or backwards, re-tighten screw "A", fix screw "B" with a 1/4-turn in clock-wise direction.



c) Height adjustment:
Loosen screw "C", adjust height, re-tighten screw "C".

Assembly Instruction

DESCRIPTION:

3 DOOR WARDROBE WITH MIRROR



14

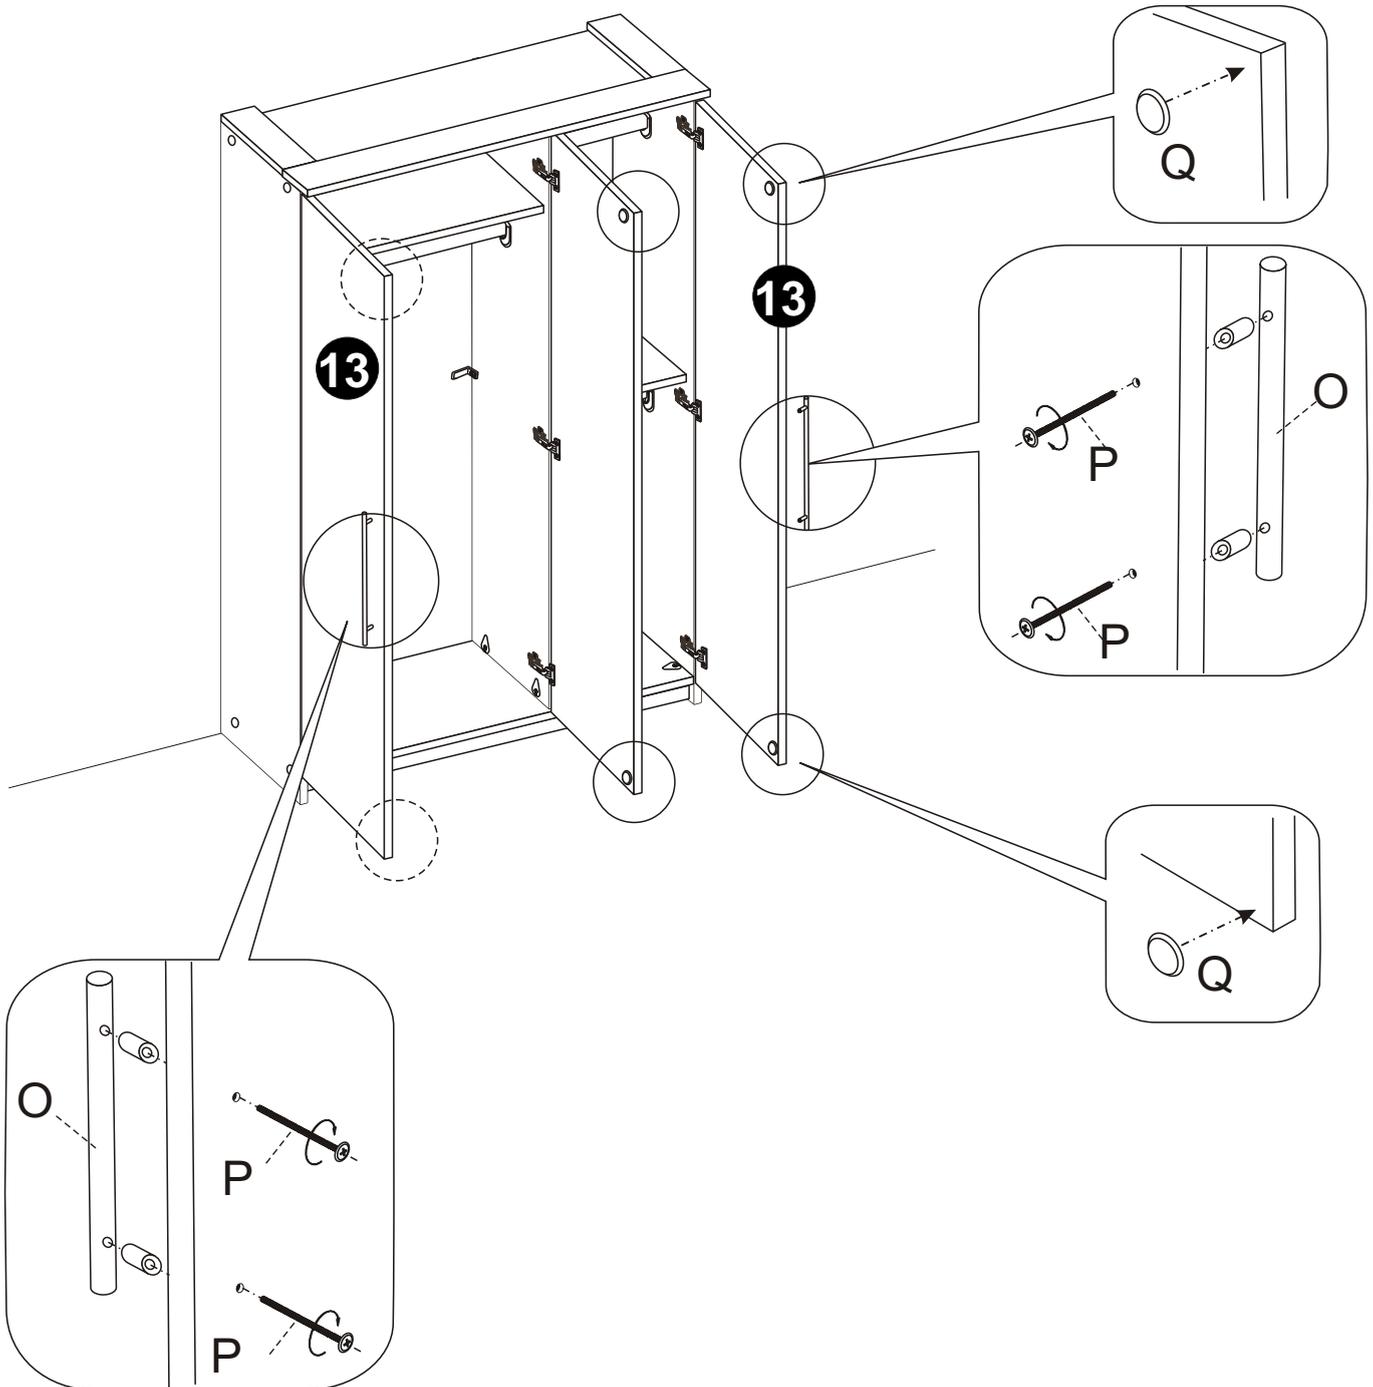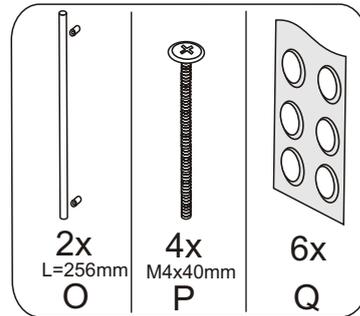


Assembly Instruction

DESCRIPTION:



15

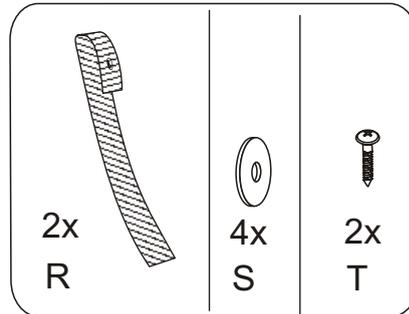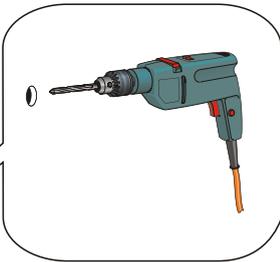


STEP 1

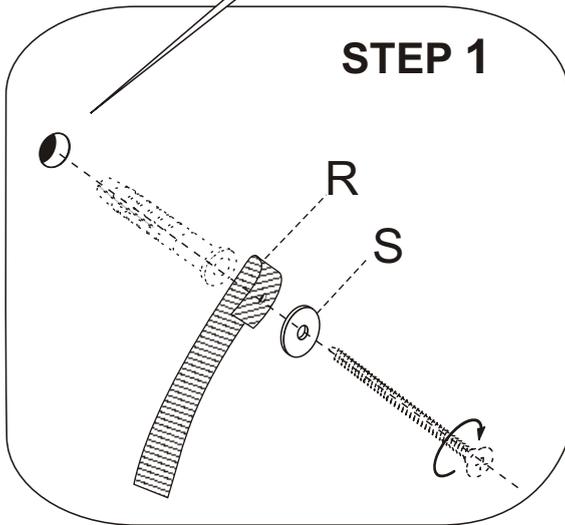

STEP 2

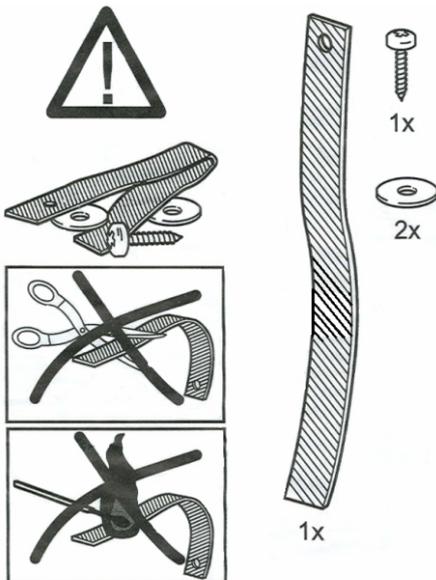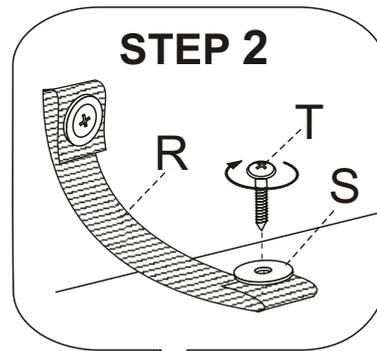

For units above 75cm in height.

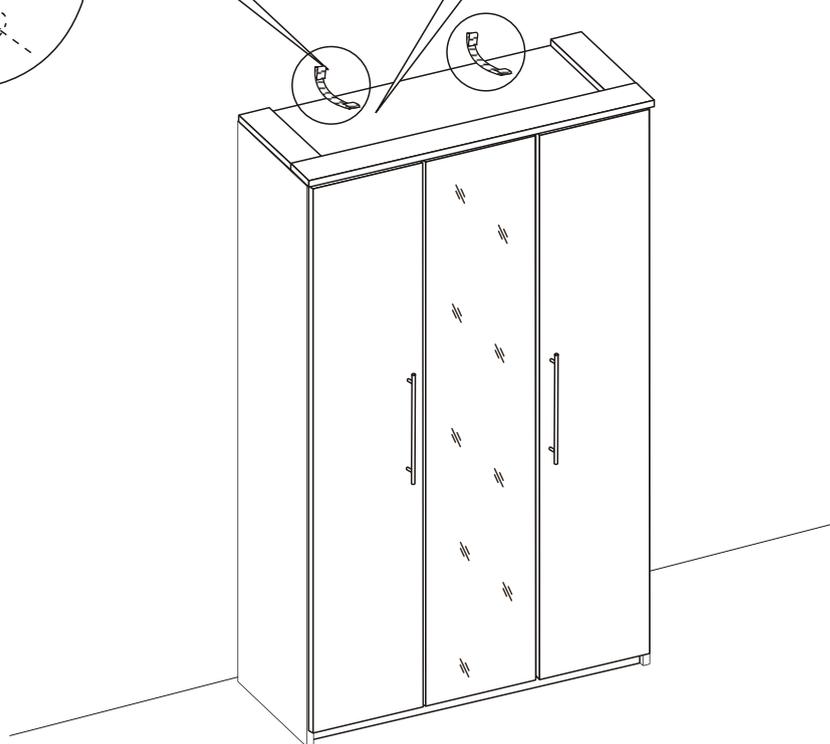

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices(such as Rawl plugs used on brick work).You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater than the diameter of the mounting hole on the product and that the fixing is safe and secure before use.