


PROCEDURES

TOOLS REQUIRED

Phillips screwdriver

1. Unpack cordset and cord wind bracket.
Arrange and organize related hardware as shown.
2. Fasten cord wind bracket to cordset with the phillips screws.
3. Fasten cordset/bracket assembly to table through mounting bolts

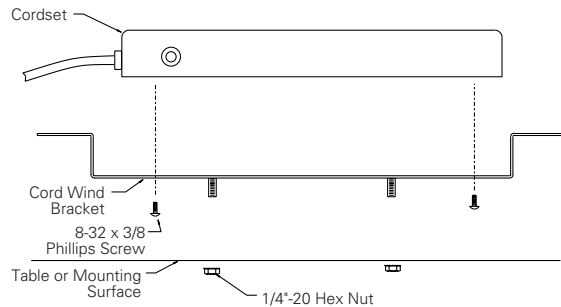

Cordset Specifications

Electrical Rating	125 VAC
Max. Surge Voltage	6,000 volts
Max. Surge Dissipation	50 Joules
Max. Spike Current	45,000 amps @ 25° C.
Max. Clamping Ratio	1.2:1
Clamping Voltage	175 Volts
Clamping Response Time	< 10 nanoseconds
Temperature Range	-40 C to + 80 C

The
POWER *In*
PRESENTATION PRODUCTS



DA-LITE

Assembly Instructions for **ADVANCE E6S2 CORDSET**

DA-LITE SCREEN COMPANY, INC.

3100 North Detroit Street
Post Office Box 137
Warsaw, Indiana 46581-0137
Phone: 574-267-8101
800-622-3737
Fax: 574-267-7804
www.da-lite.com
e-mail: info@da-lite.com