


P®LYWOOD Intelligent Design™


Model: CLC71 & CMC71

Step 5


Attach all sections together using

B - (6) capnuts C - (2) 1 1/2" chair bolts D - (4) 3 1/4" chair bolts

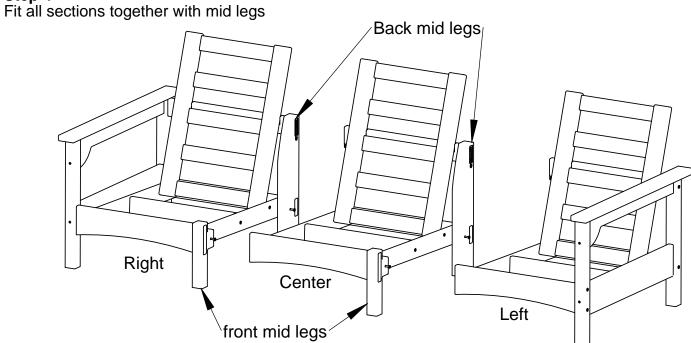

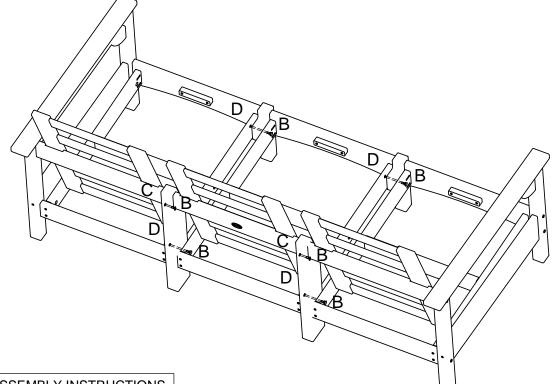

Step 4

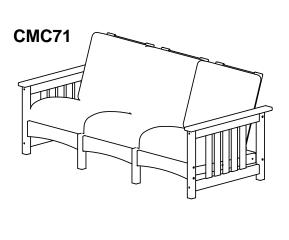

ASSEMBLY INSTRUCTIONS

9/14/2012