



Intelligent Design™

Model:
TGD200, TGD201, TGD202

Step 1



Attach back of arm by threading the dowel screw attached to the arm into the pilot hole until the arm is snug against the back leg.

- (1) CHAIR
- (2) ARM ASMB (LH/RH)
- (1) HARDWARE PACK

Step 2


Attach (A) bolts thru the seat frame into the insert nuts on the arm supports

TOOLS NEEDED

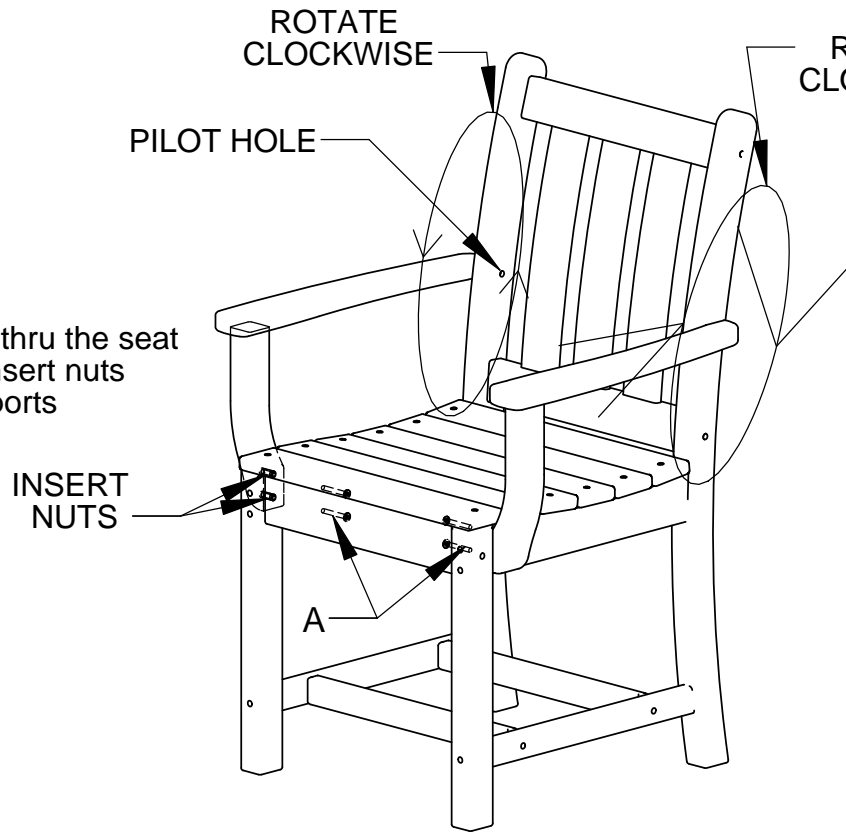


TGD200

ROTATE
CLOCKWISE

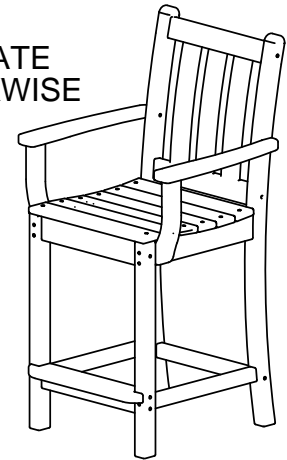

TGD201

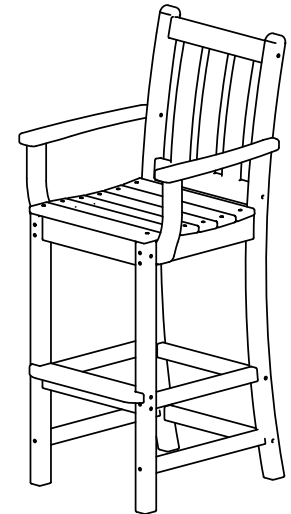

TGD202

Qty. Description

