


Operating Your Unit


Converting to Sofa

Standing at the side of the unit (from bed position), lift backrest to the desired position and secure in place by releasing to the sound of a click.

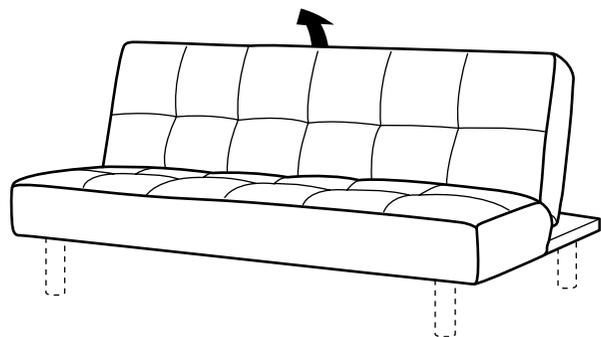


Converting to Lounger

In bed position, lift backrest upwards with each click sound until the desired lounge position is reached.

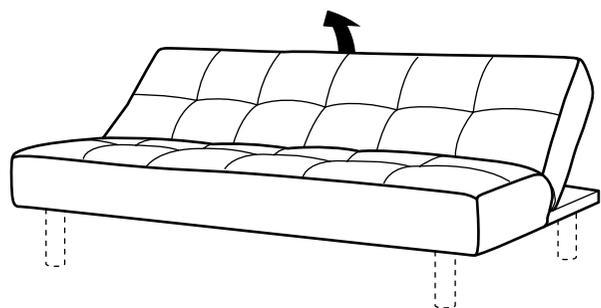

Converting to Bed

From sofa or lounge position, lift backrest all the way upwards until the last click is heard which unlocks the mechanism and carefully return to a flat position.

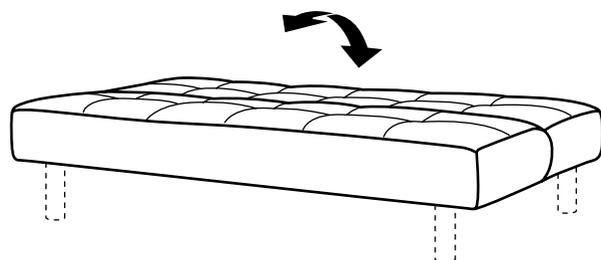

Model: _____

Lot No: _____


Date of Purchased: _____

PUZZLE BODY




Your Puzzle unit comes in separate boxes. This box contains ONLY the body unit. Depending on your unit, you will require two to three more boxes to complete assembly of the sofa convertible - legs, upholstery cover and armrests (if applicable). Please refer to the assembly instructions accordingly.


BODY




LEGS

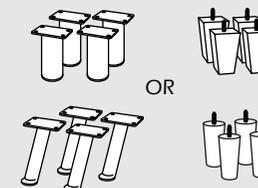

ARMRESTS (OPTIONAL)

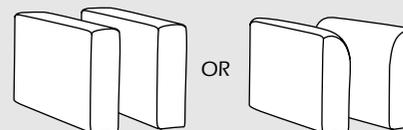

UPHOLESTRY COVER

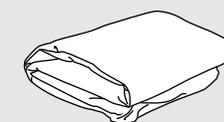

ADULT ASSEMBLY REQUIRED

If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free customer service number and have this assembly manual open to the parts list ready to provide the model name, and part name or number.



Customer Service

1-877-864-5752

8:30 AM PST - 4:30 PM PST (Monday - Friday)


Website: www.dwellhom.com

Missing Parts: parts@dwellhom.com

Warranty Information: www.dwellhom.com/warranty

WARNING: This Product contains small components, please ensure they are kept away from small children.

Parts and Hardware



Allen Key



Long Bolt
1x




Short Bolt
4x




Nut
1x



Washer
1x

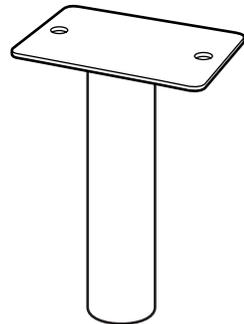


Support Leg
2x

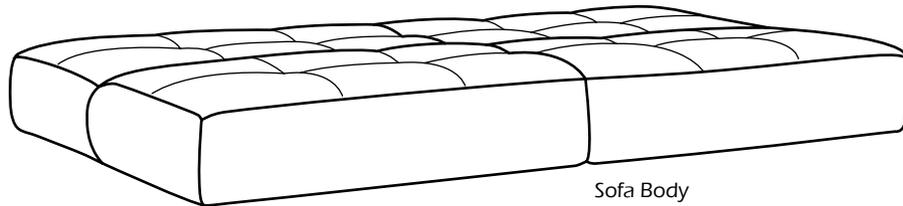


Sofa Body

ASSEMBLY INSTRUCTIONS

- 1 Carefully place sofa body unit on a clean flat surface as shown and unpack hardware from the zipped storage compartment.


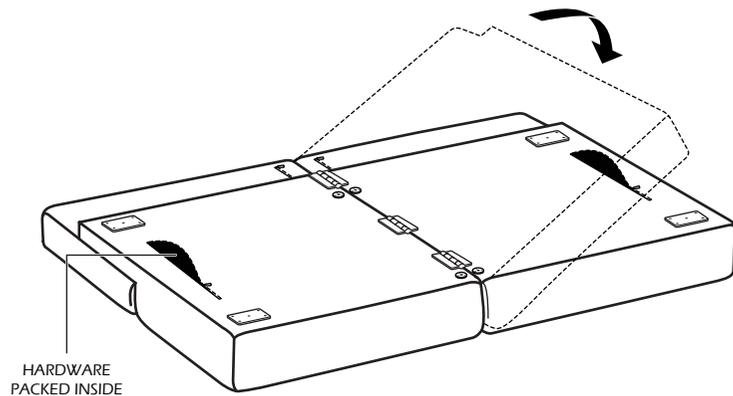


- 2 Align both support legs onto the metal plates and secure with two short bolts each using the Allen key.

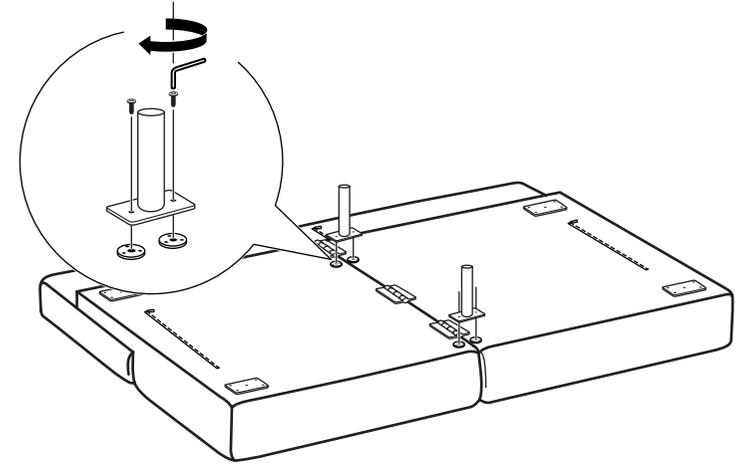

- 3 Unzip and align both backrest sections. Locate the pre-drilled holes inside. Secure with the long bolt and washer with nut from inside with Allen key and avoid overtightening.

IMPORTANT: Skip this step if you have the Comet, to feature its splitback function.

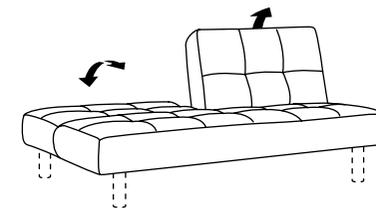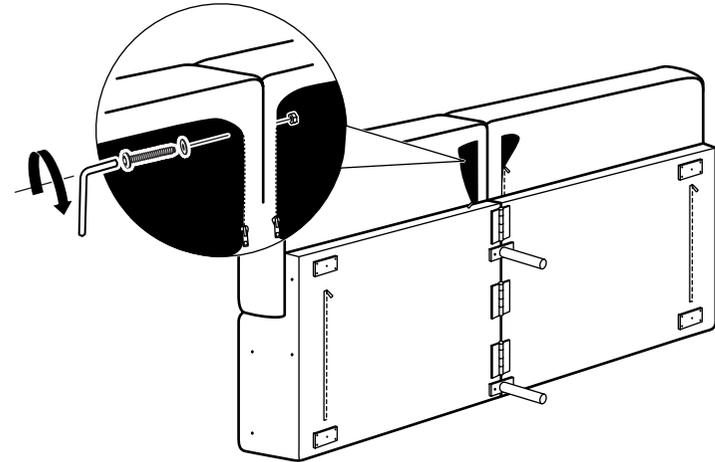

SPLITBACK FUNCTION