

PARTS & ASSEMBLY SHEET

Fixture Name: Mayfair 7116-3P LC

This fixture	assembled PO:	Date:	

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note onthis sheet and contact the place of purchase to arrange for replacement parts.

PARTS LIST	Company Name:		Co. Account #:	
PARISLISI	to be filled out by retail	ler		
Canopy	Mounting Screws		Тор Іоор	
1ea ∅5-3/4"*H1-1/2"	2ea 8#32-IP*1"		1ea 1/8-IP*H60mm	
Chain	Wire connectors		Nipple	
lea 6ft ∅3.8	3ea P3 Orange		1ea 1/4-IP*H60mm	<u> </u>
Chain connector	Canopy loop with Collar		Mounting strap	
2ea ∅5.8*H61mm	lea Ø1-1/8"*H42mm		lea W4-1/8"*E1"*H5mm	00
Nipple	Metal washer & Plastic washer		Deco Screw	
1ea 1/8-IP*H120mm	2ea 1-1/2-IP*H2mm		3ea 5/32-IP*H9mm	
Bottom cap	Hex Nut		Finial	
1ea ∅3-1/4"*H25mm	1ea 1/8-IP*H4mm		1ea 1/8-27-IP*H39mm	
Part Needed	Quantity			
Part Needed			Quantity	
Reason why Comments (missing, scratched	d, broken glass, bent,	, bad finish)		


FIXTURE ASSEMBLY INSTRUCTIONS


Read and review installation instruction sheet before assembling the fixture.

ASSEMBLING THE FIXTURE (Fig.1)

- 1. Feed the fixture wires through the Top loop (J) and pull the wires until taut.
- 2. Then screw the Top Loop (J) to the threaded center column of Frame (M) until tight.
- 3. Gently spread the arms until evenly spaced if arms are packed closed.
- 4. Align the top of Scroll arm over the arm connector holes (X) at top of socket assembly and secure in place with the Deco screws (U).

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.



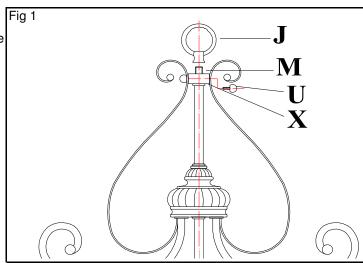

PARTS & ASSEMBLY SHEET

Fixture Name: Mayfair 7116-3P LC


ASSEMBLING THE FIXTURE (Fig.2)

- 5. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain (C2) then remove the excess Chain (C2) and discard it.
- 6. Use one chain connector (E2) to attach one end of the chain to the Top loop (J) and close the chain connector.
- 7. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.
- 8. Slip Canopy loop collar (B2) over the chain, then do the same with the canopy.
- 9. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (A2) and close the chain connector. Make sure the weight of the chandelier is supported by the chainnot the electrical wire.
- * You may now install the fixture.

Note: Complete these remaining steps after the fixture is hung.

- 10. Thread the threaded rod/nipple (N) onto the socket assembly coupler, secure with a hex nut.
- 11. Install the light bulbs in accordance with the fixture's specifications.
- 12. Thread on the Nipple (N) in this order: hex nut, metal washer (O), plastic washer (P), glass shade (S) thread the nipple through the hole in bottom of glass shade, plastic washer (X), metal washer (Y), hex nut (T), bottom cap (V) and secure in place with the finial (Z).

(DO NOT EXCEED MAXIMUM WATTAGE RATING)

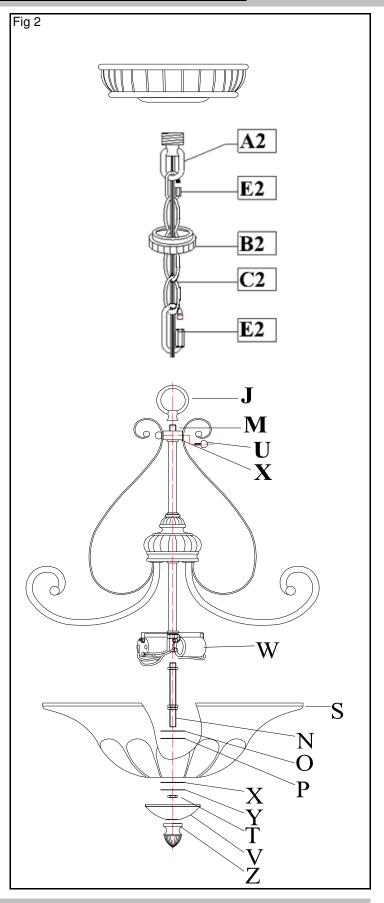

For Customer Service, contact the place of purchase to arrange for replacement parts.



INSTALLATION INSTRUCTIONS

Fixture Name: Mayfair 7116-3P, 6, GM4, ND3, 9, D5, M1LLC

For Chandelier Light Fixture

WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig 1)


- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
- 3. Thread Nipple(C) into Canopy Loop (F) until snug.
- 4. Thread other end of the Nipple (C) with Canopy Loop attached into Mounting Strap (D).
- 5. Place Lock Washer (B) over end of Nipple (C) protruding through Mounting Strap (D) and thread Hex Nuts (A) onto Nipple until tight.
- 6. Take this mounting strap assembly and mount to ceiling junction box with junction box Screws (E). Tighten screw securely with screw driver.
- 7. Unscrew the Canopy loop collar(H) from the Canopy loop. Take the canopy and pass over the Canopy loop. approximatly one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. *the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy lock collar.
- 8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
- 9.Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.


CONNECTING THE WIRES (Fig 2)

- 10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 11. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (D) or connect both wires together using the correct size of wire connectors.

NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.

- 12. Tuck these wire connections neatly into the Junction Box.
- 13. Raise Canopy (G) to the ceiling and secure in place by tightening the Canopy loop collar (H) into the Canopy Loop (F)
- 14. Install the light bulbs and glass shade as per the fixture assembly sheet.

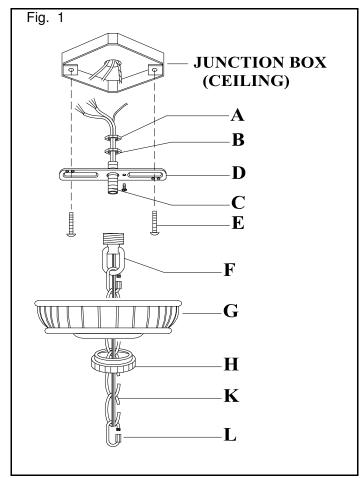

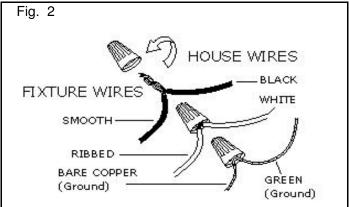

YOUR INSTALLATION IS NOW COMPLETE. RETURN POWER TO THE JUNCTION BOX AND TEST THE FIXTURE.