

DBB

HIGH PERFORMANCE
FURNITURE FOR YOUR
HOME THEATER



5/2007

RevoTM 9980

Assembly Instructions

Revo™ Home Theater Furniture

Your Revo™ Home Theater Furniture is engineered for easy assembly. Carefully follow this procedure to prevent any damage.

Placement and Maintenance

Revo™ Home Theater Furniture is designed for indoor use on level floors. Clean glass with glass cleaner. Clean steel parts and wood veneer with a moist cloth.

Step 1

Unpack and identify the parts listed.


The assembly workspace should be a non-marring surface such as carpet.

For missing hardware pieces, please contact BDI Customer Service at:

customerservice@bdiusa.com

All other concerns please contact your local BDI Retailer.

Install Shelf Pins (B) and Glass Shelves (A).

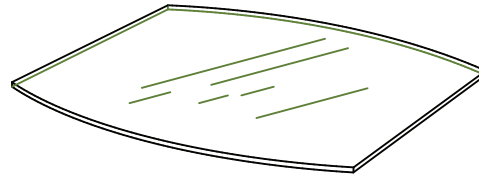


A - Glass Shelf x 2




B - Shelf Pin x 8




C - Retention Clip x 8

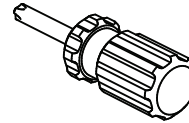


Phillips Screwdriver x 1



Allen Wrench x 1
(Only required for
disassembly of unit)

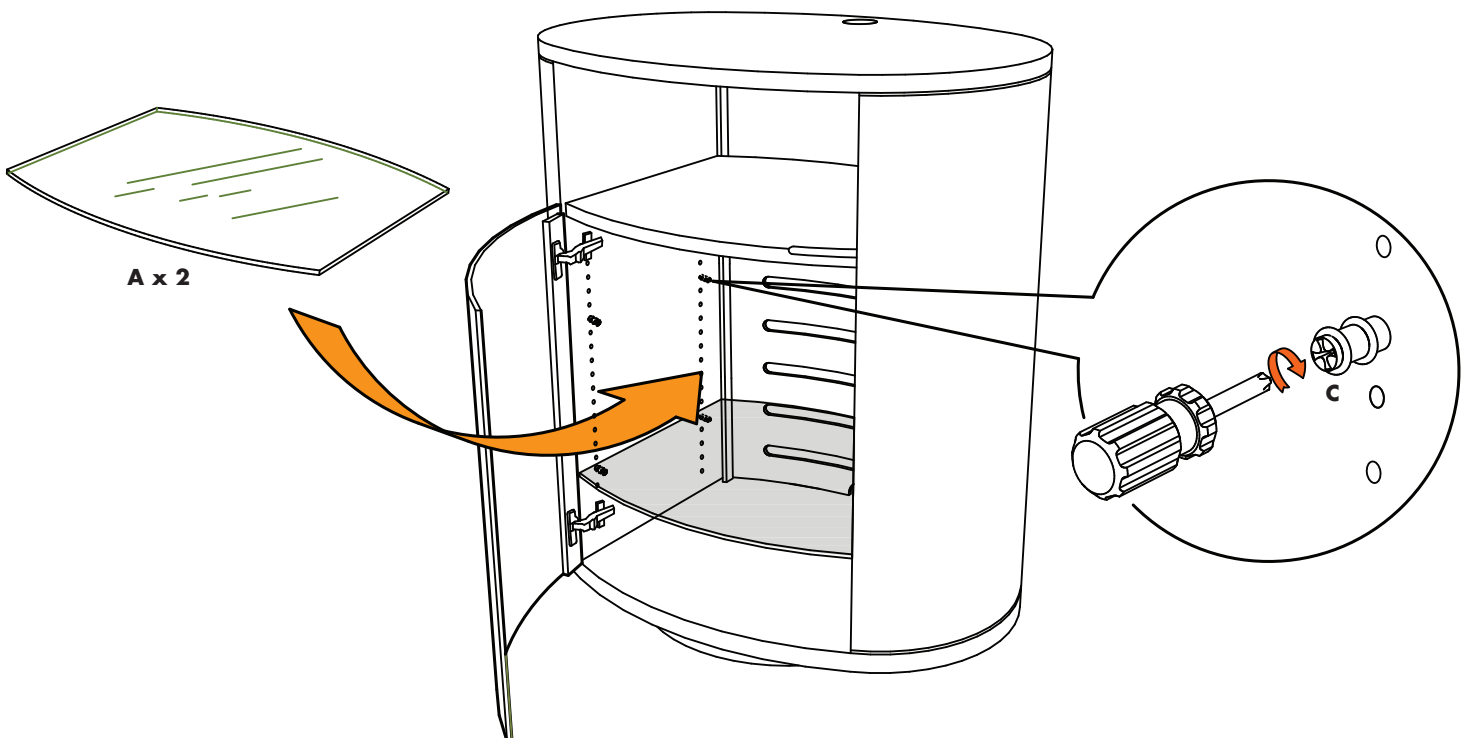




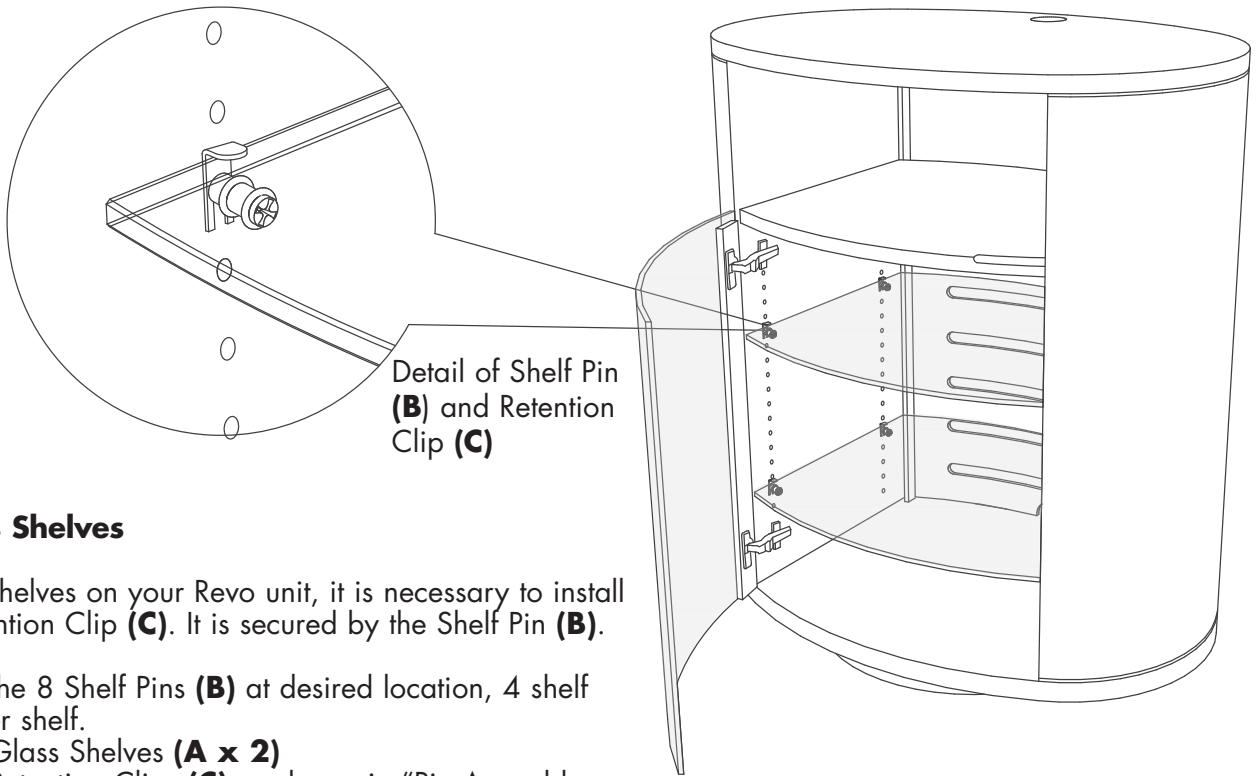


Detail of Shelf Pin (B) and Retention Clip (C)

Step 2 Secure Glass Shelves

To secure the shelves on your Revo unit, it is necessary to install the Glass Retention Clip (C). It is secured by the Shelf Pin (B).

1. Install the 8 Shelf Pins (B) at desired location, 4 shelf pins per shelf.
2. Install Glass Shelves (A x 2)
3. Install Retention Clips (C) as shown in "Pin Assembly Diagram"
4. Secure by tightening the Shelf Pin (B) with Phillips Screwdriver.

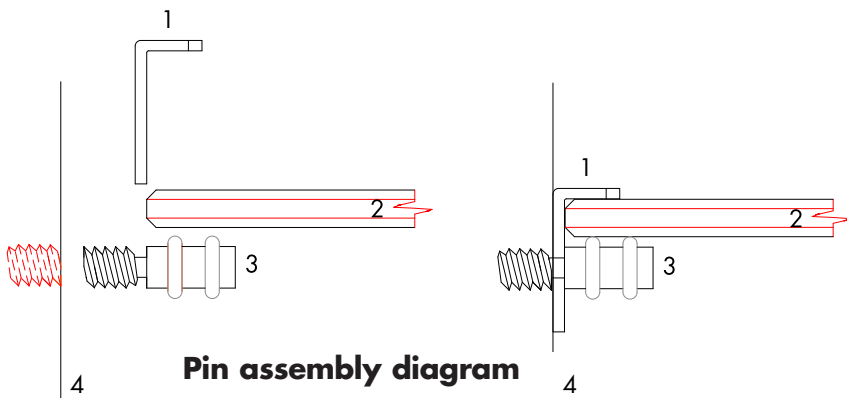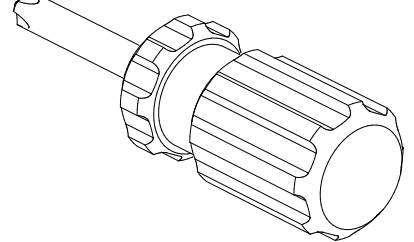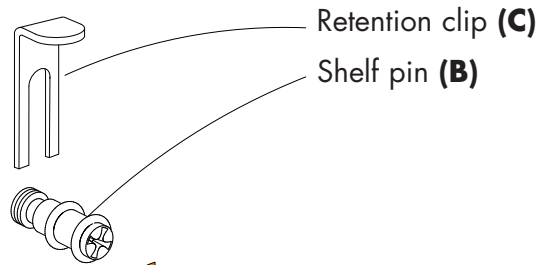



Pin assembly diagram

- 1 : Retention clip (C)
- 2 : Glass Shelf (A)
- 3 : Shelf Pin (B)
- 4 : Cabinet wall

Step 3
Install Back Panel.

The back panel comes pre-installed. Follow illustrations below for installation and removal.

NOTE: Mouse hole is on bottom edge of back panel. It aligns with pre-installed Velcro strap for wire management.

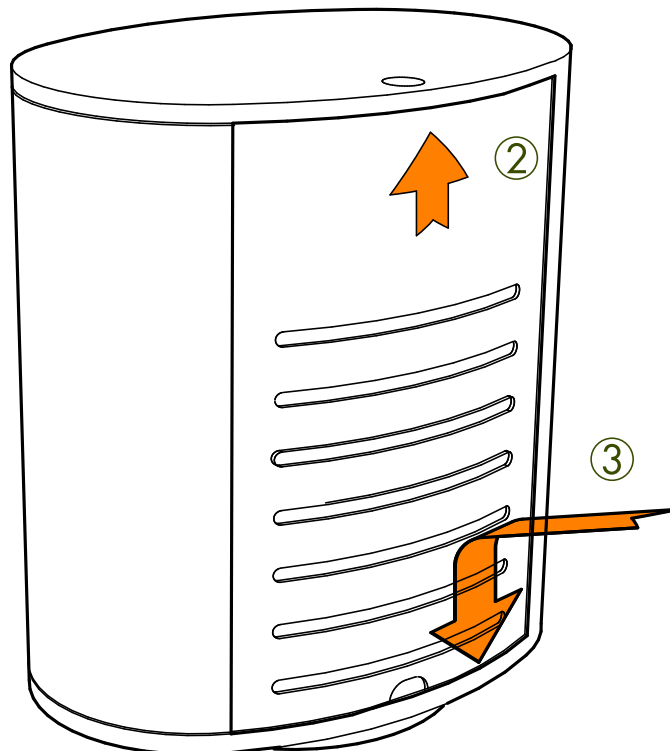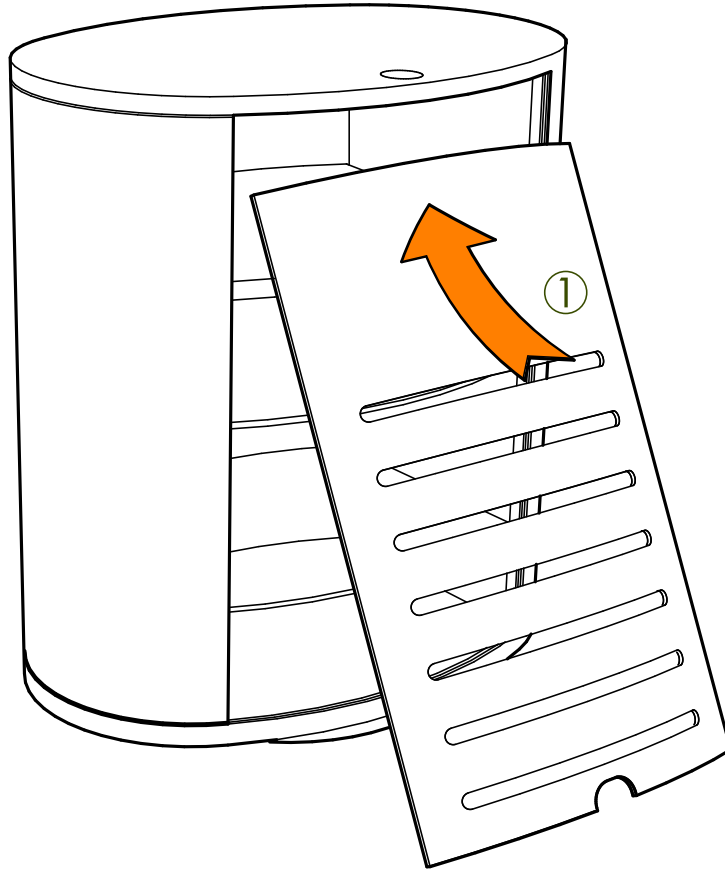

Designed by Louis Lara.

'Revo' is a trademark of Becker
Designed, Inc.
All rights reserved. ©2006
Becker Designed, Inc.