

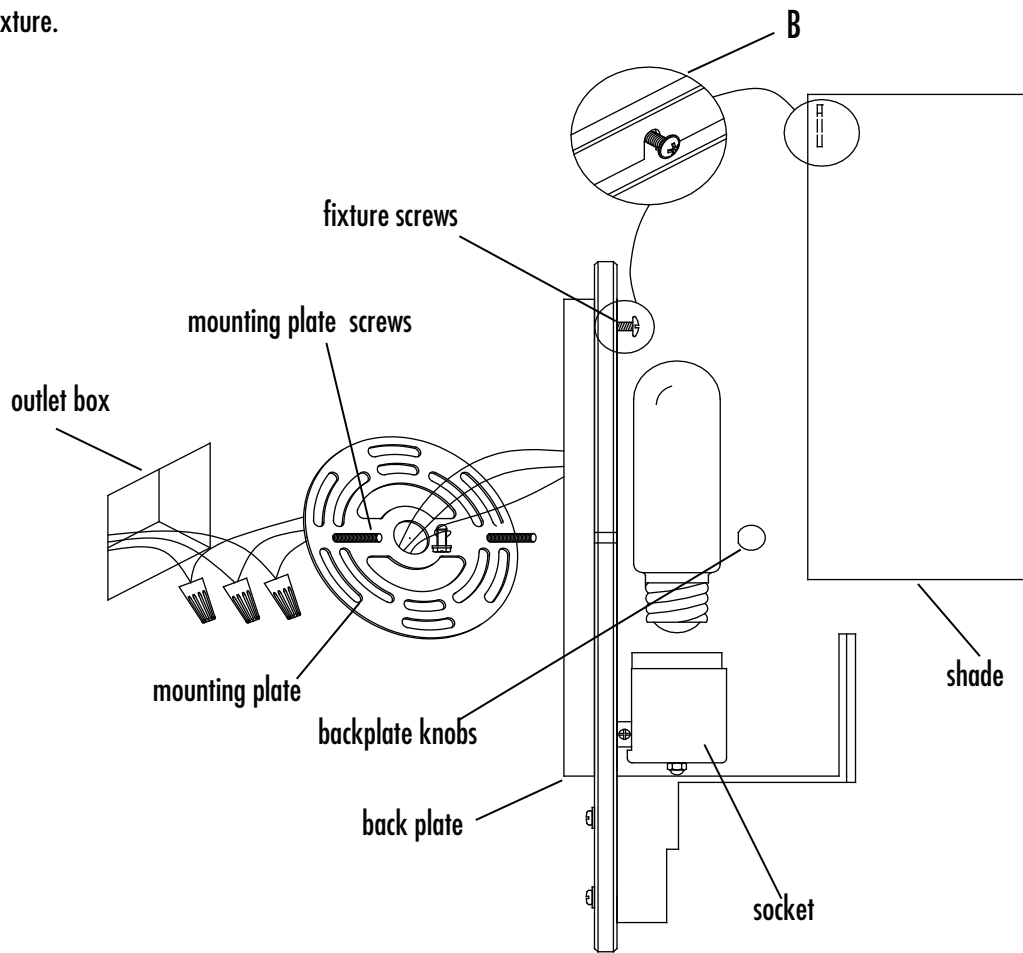


**Important: Always disconnect the power before installing or replacing bulb and before cleaning or other maintenance.**

This light should be installed by a licensed electrician

## Assembly & Installation Instructions

1. Shut off power to outlet box (Fig A).
2. Make appropriate electrical connections using wire nuts:
  - a. Connect the fixture's hot wire (black) to the black outlet box wire.
  - b. Connect the fixture's neutral wire (white) to the white outlet box wire.
  - c. Connect fixture's ground wire (green or uncoated) to the ground outlet box wire. If no ground is present in outlet box, connect fixture's ground wire to the mounting plate using the green screw (included).
  - d. Carefully place connections in outlet box.
3. Place mounting plate over outlet box and secure with outlet box screws.
4. Attach the backplate over the mounting plate and tighten with the backplate knobs.
5. 1951,1952 - Insert medium base bulb (not included).  
1951F,1952F - Insert 18W quad CFL G24q-2 base (not included)
6. Attach shade to the fixture screws .(Fig B)
7. Restore power to fixture.

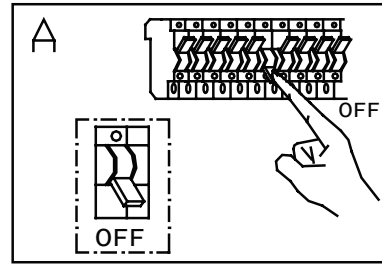

1952 ADA Sconce

1951