

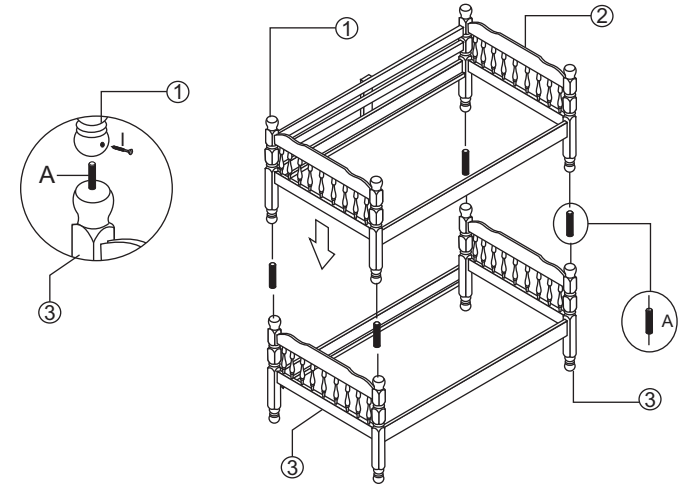





6° th
Step:

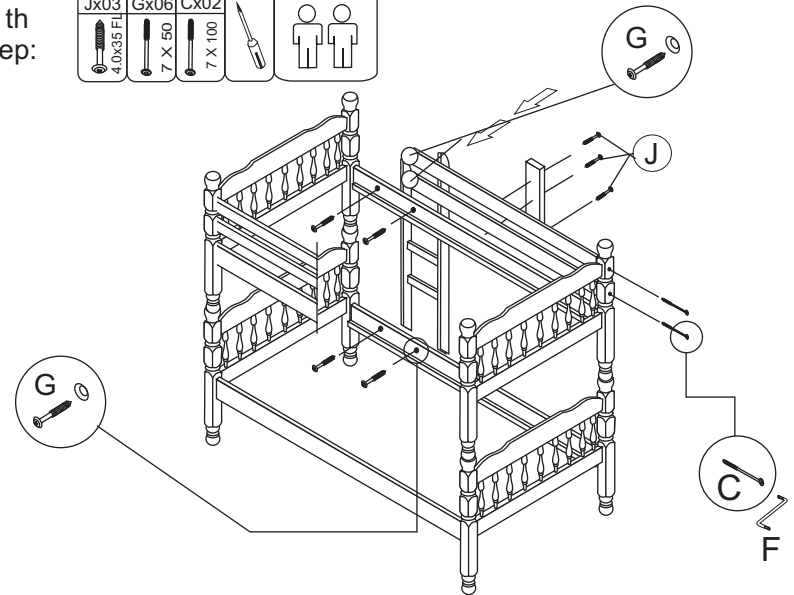


7° th
Step:



8° th
Step:

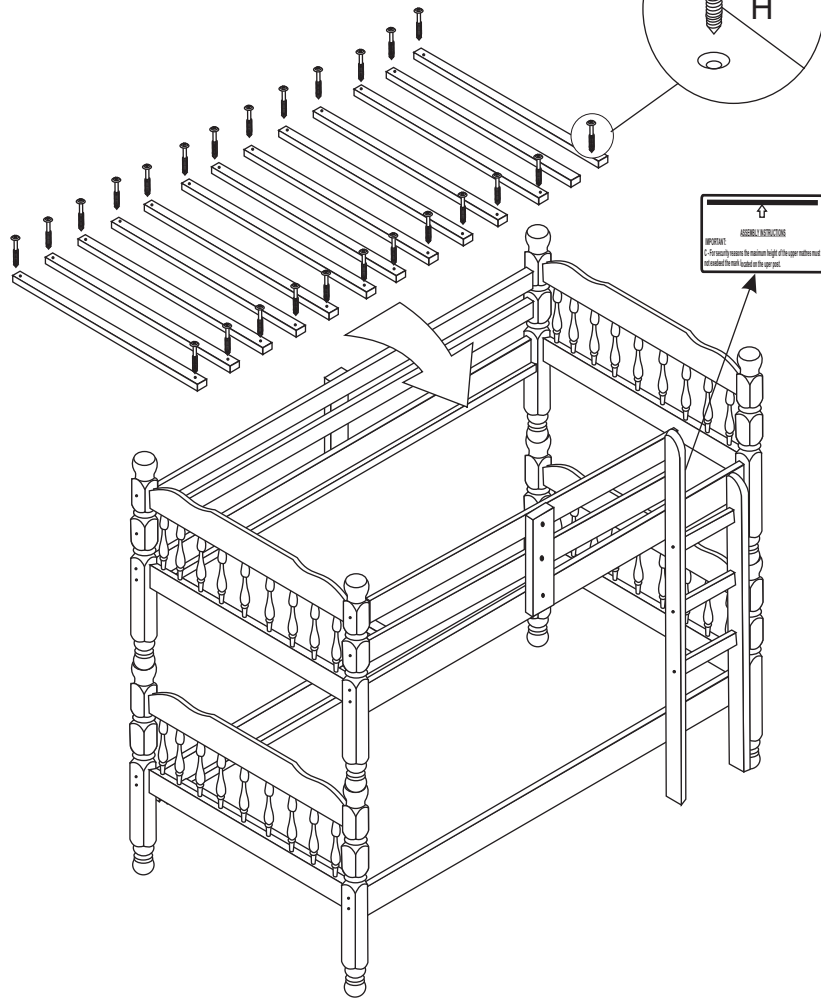

BUNK BED 65x65

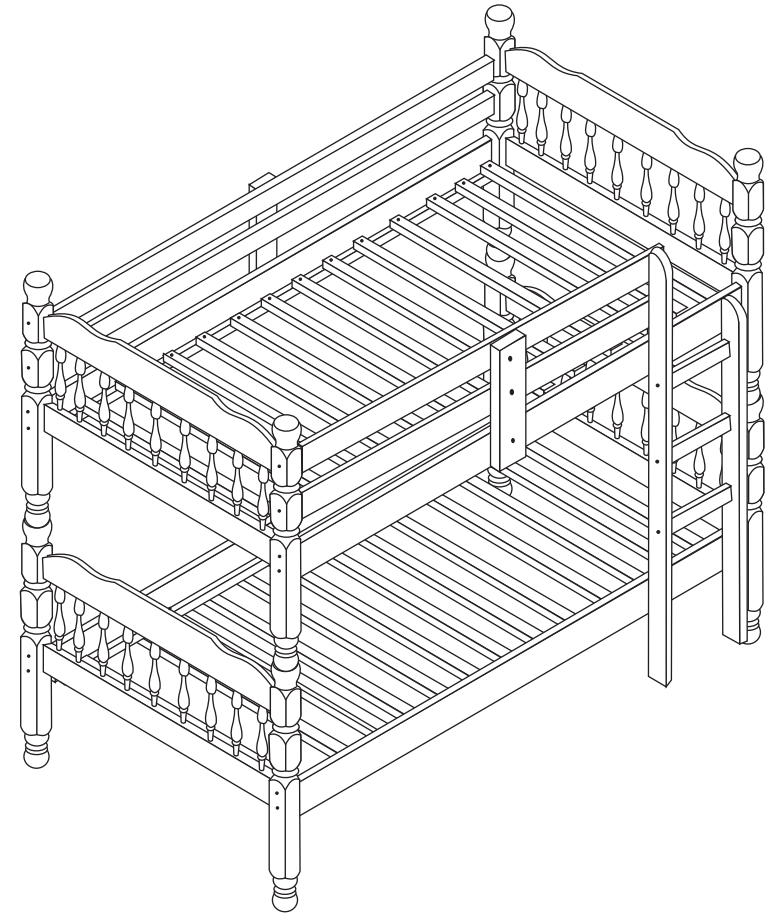


ASSEMBLY INSTRUCTIONS



IMPORTANT:

- A - Product agreeable to security norms "NF EN 747 Part 1, Part 2".
- B - Bedding in height children less than six years old is not proper.



1° th Step:

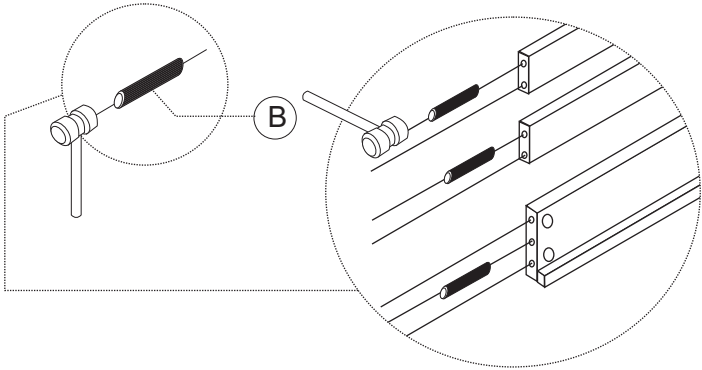



2° th Step:

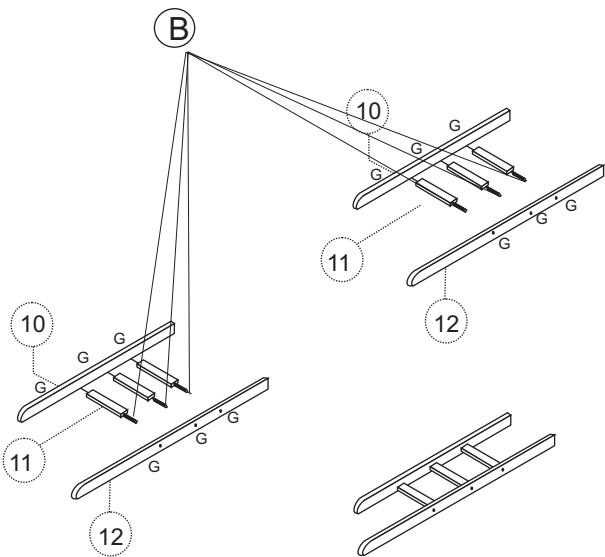



3° th Step:

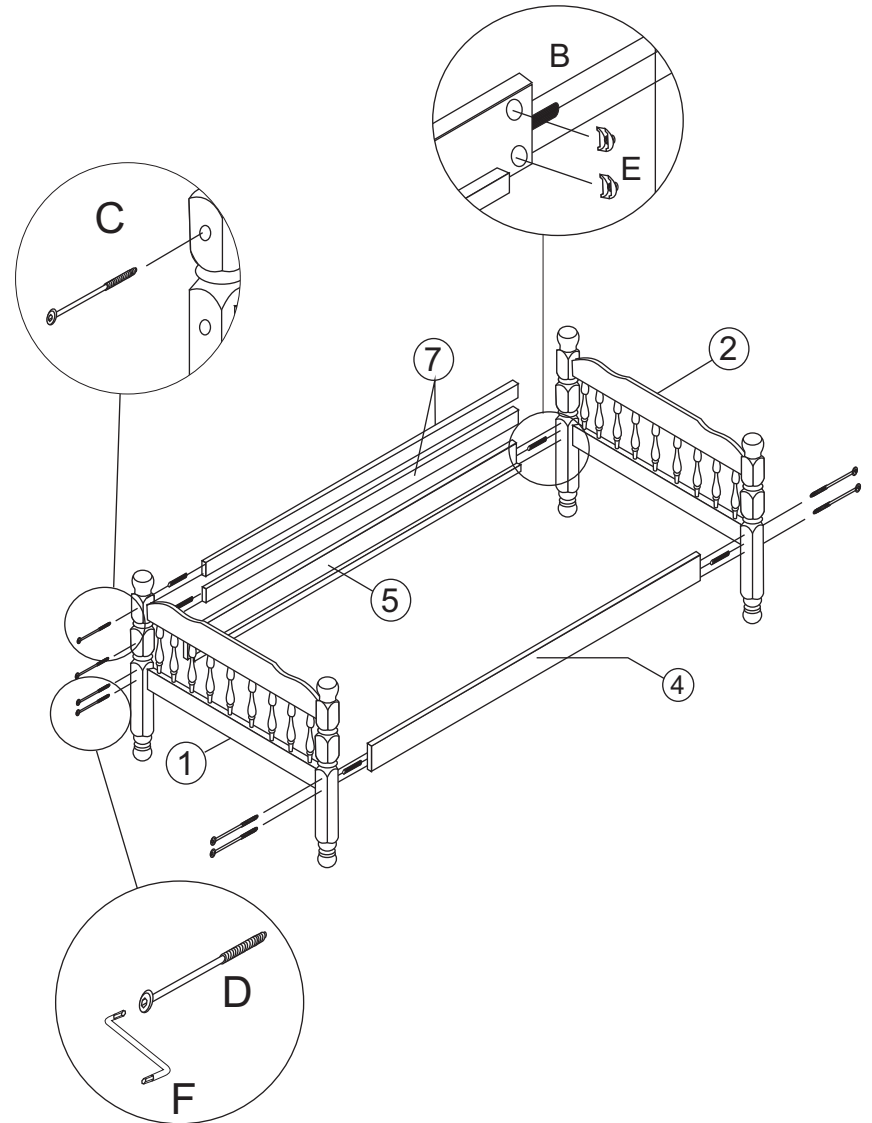

4° th
Step:

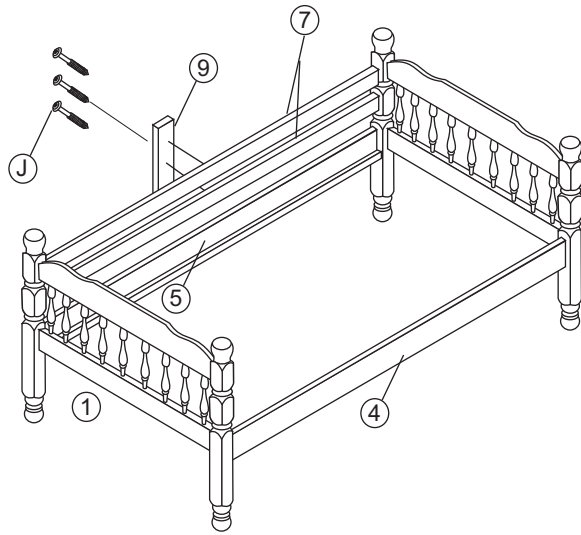

5° th
Step:

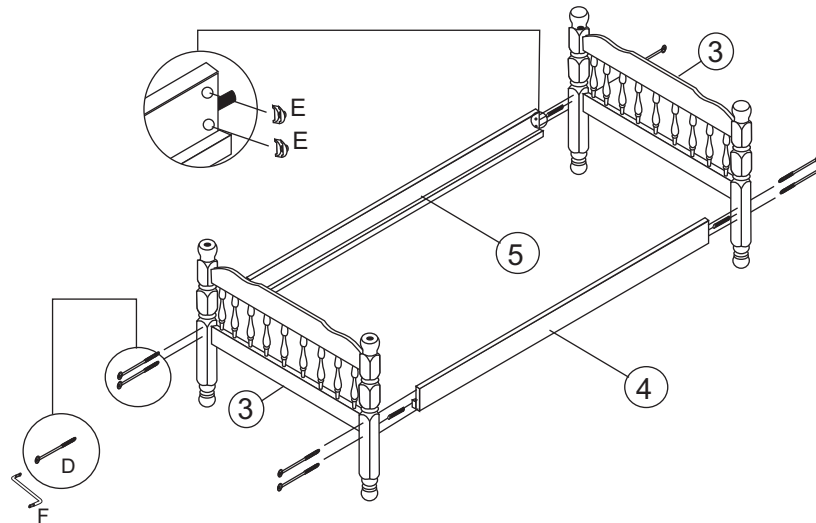

Ax04




15x90

Bx20




10x40

Cx06



7x100

Dx16



1/4x110

Ex16




1/4

Fx01




Gx12




7x50

Hx52




CC 4,0x35

Ix08




CP 4,0x25

Jx06



FL 4,0x35

Kx02



YOU WILL NEDD

