



Parts Listing

A
Seat
1 Unit

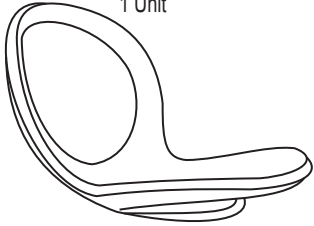

B
Base
1 Unit

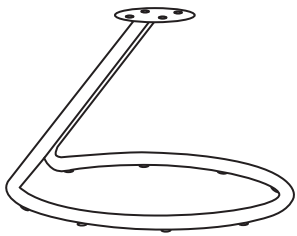

C
Plastic Cap
1 Unit




D
8x25mm Screw
4 Units



E
8mm Nut
4 Units



F
Allen Wrench
1 Unit

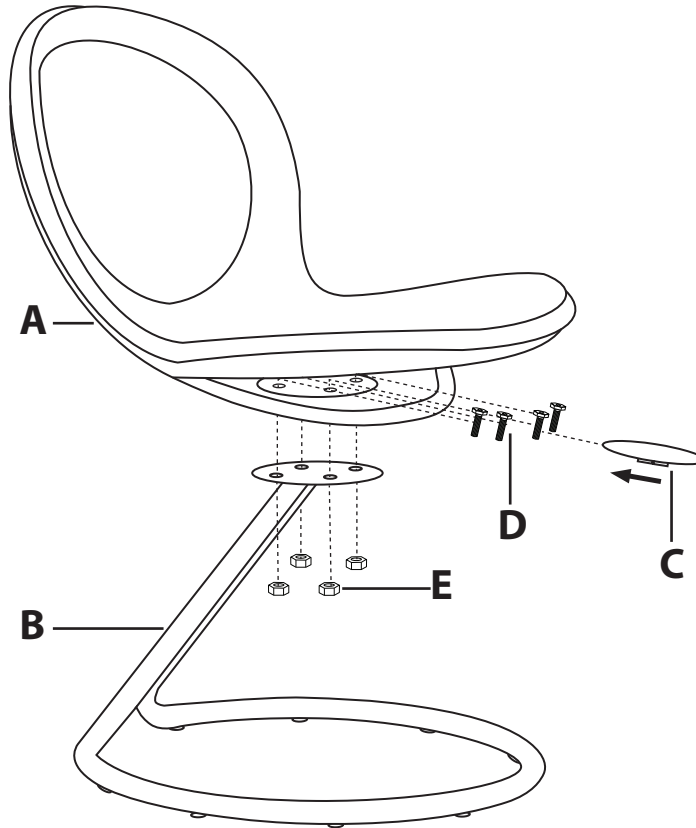

Assembly Instructions



Tools Needed: Adjustable Wrench and supplied Allen Wrench
Please read all instructions before assembly.

Step 1: Attach Base (B) to Seat (A) by aligning the holes between the two. Now insert 8x25mm Screws (D) under metal mesh of Seat (A) and down through holes. Attach the 8mm Nuts (E) on the bottom of 8x25mm Screws (D). Using the Allen Wrench (F), tighten all screws securely only when all four have been attached.

Step 2: Cover 8x25mm Screws (D) under mesh with Plastic Cap (C).

WEIGHT CAPACITY: 300 lbs.

Assembly Notes:

During assembly, hand tighten screws only. When all screws are in place, you may then tighten all screws completely.

CAUTION:

1. Do not use this chair as a step ladder.
2. Check for loose screws and tighten them every 6 months.

ofm
Furniture For The Real Office™

161 Tradition Trail, Holly Springs, NC, 27540
800-520-7471 (voice) 919-362-4765 (fax)
919-303-6389 (voice) www.ofminc.com
support@ofminc.com