

Aqua 6 Glide Quadrant and **Off-set Quadrant Enclosure**

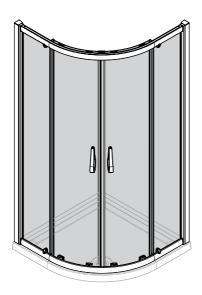

- Instruction suitable for both Quadrant & Off-set Quadrant variations.
- Instruction suitable for both Right and Left Hand fixing variations on Off-set Quadrants.

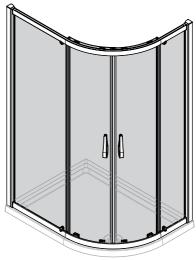






Before You Start

- Check that the tray has been installed correctly and that it is level (Fig. A), tiled down onto and sealed to the manufacturer's guidelines. Please Note: All product supplied without tray.
- Ensure the product is fitted to a non-porous surface ie. tiled. Check that the wall surface is flat
- Unpack and check the product is complete and undamaged.
- Fixings are supplied for solid walls only. Ensure that the correct fixings are used for the wall type

 if in doubt seek professional advice.
- · Ensure the area is clean, dry and dust free.
- · Read the instructions in full.
- Have the correct tools available, (as shown below, see 'Tools Required').
- It is recommended to situate the showerhead and door adjacent to each other in order to allow any water spray to be on the side panel or upstanding wall.

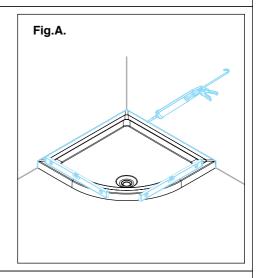

Safety

- Handle all glass with care support on cardboard to avoid risk of breakage.
- This product is heavy and requires 2 people to carry and install it.
- When drilling walls check first for hidden pipes and cables.
- All glass is toughened it cannot be reworked or replaced by ordinary glass.
- · Use safety eyewear when drilling.
- Use safety evewear when handling glass.
- · Keep all small parts away from children.


Disclaimer


- Please notify the retailer immediately of any damage or faults. The manufacturer cannot be held responsible for any installation costs that may arise from damaged or faulty product being installed.
- Please dispose of all packaging with due regard to the environment.

Tools Required (not supplied)




















* Ensure drill bit used is suitable for wall surface




Lines open: 8.30am - 5.00pm Monday to Friday Standard National call charge rate from BT landlines Please notify the retailer immediately of any damage or faults. The manufacturer cannot be held responsible for any installation costs that may arise from a damaged or faulty product being installed.





* Off-set Quadrant Variant: Glass Panel supplied one long , one short

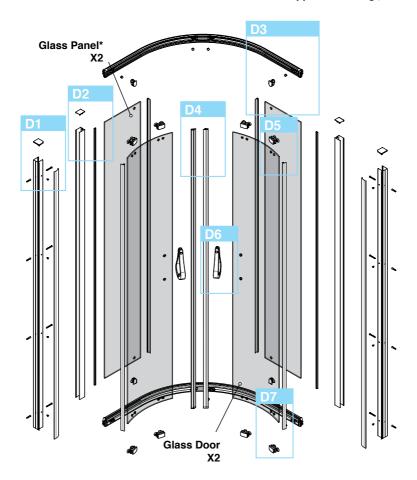





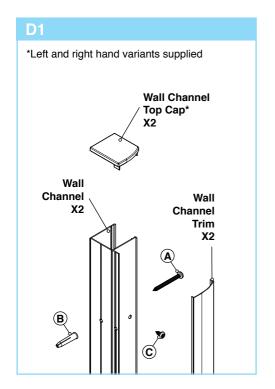

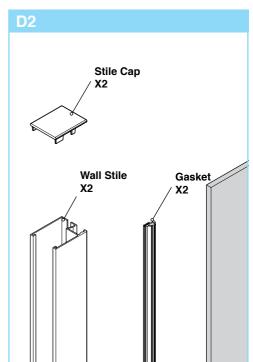


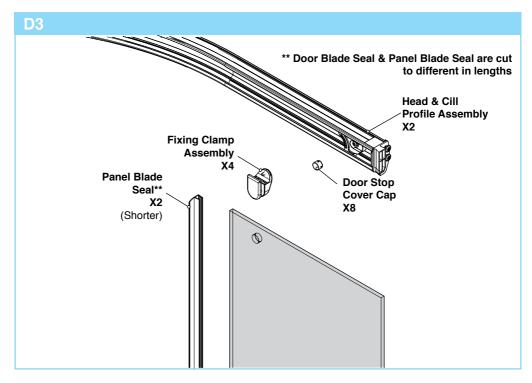


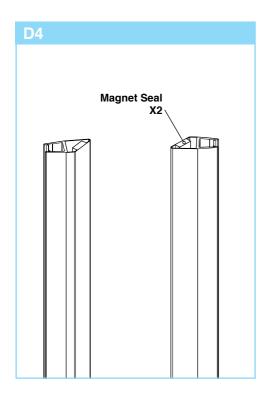


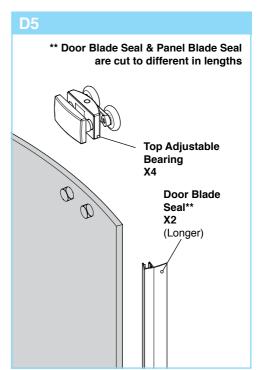





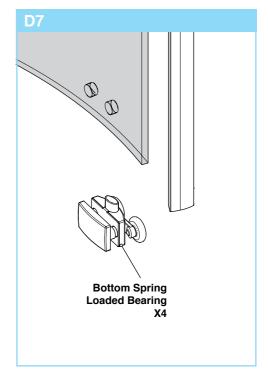


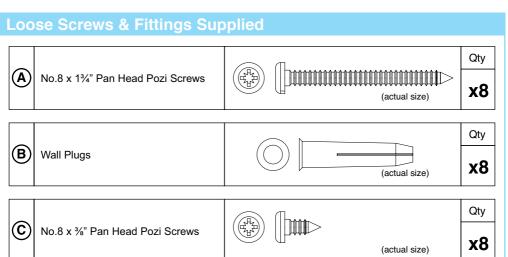


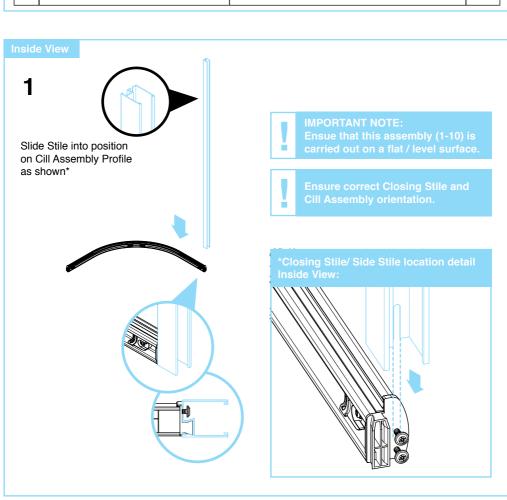


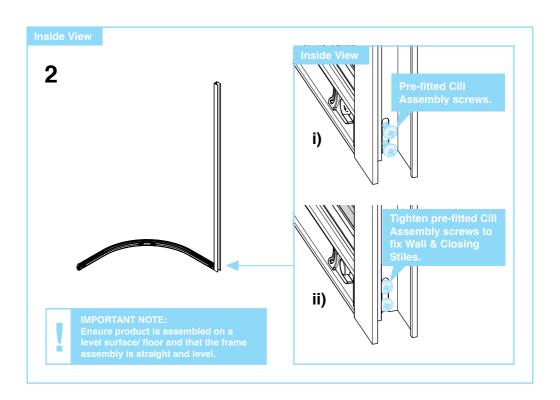


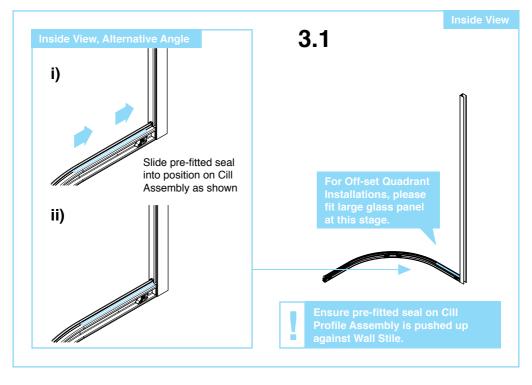


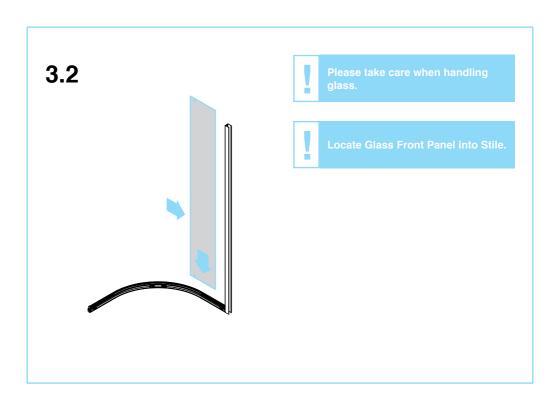


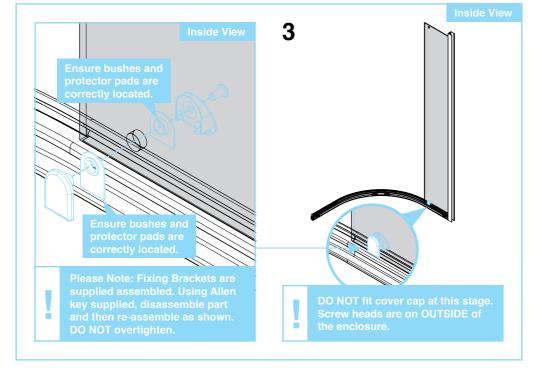


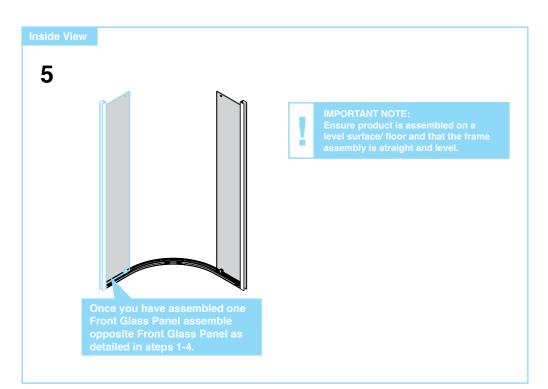


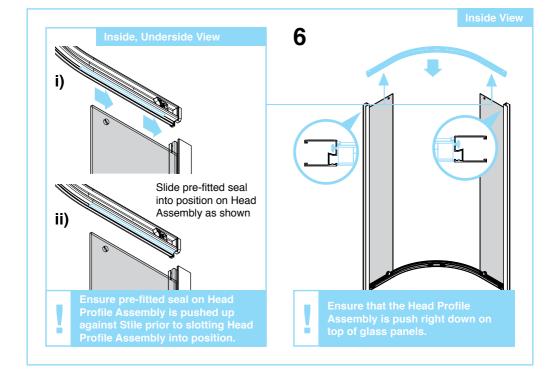

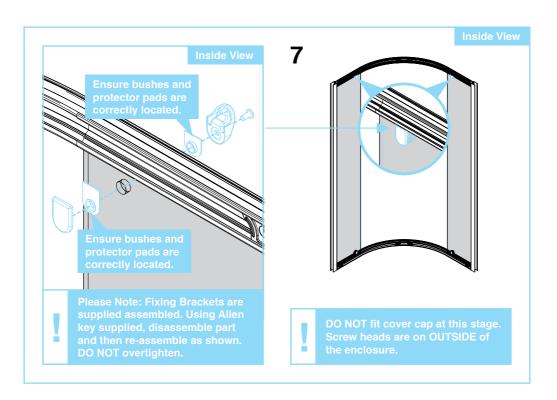


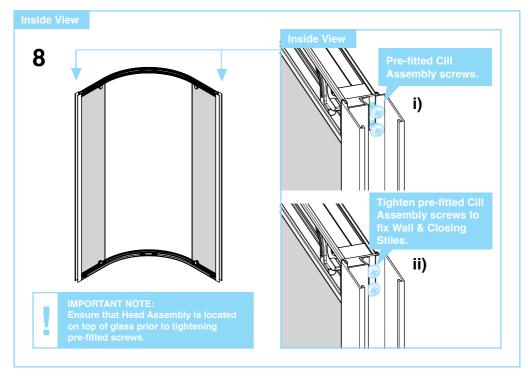

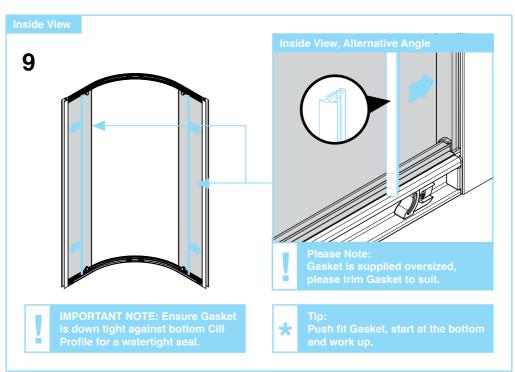


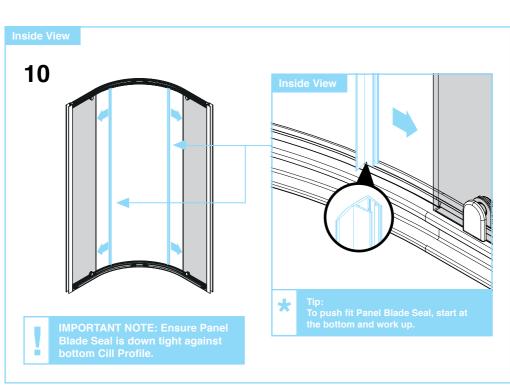


11.1

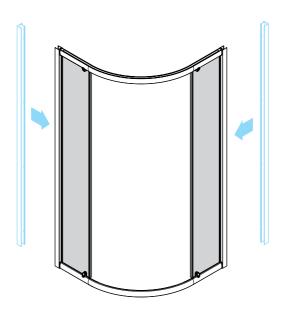


11.2

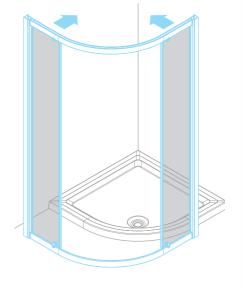

11.3

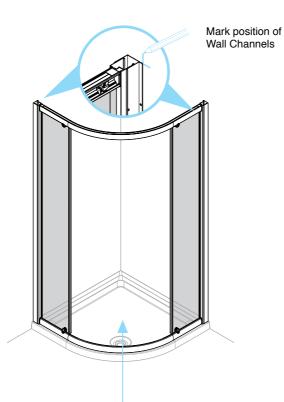

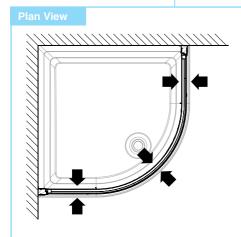

IMPORTANT NOTE

Ensure radius of enclosure matches tray.

DO NOT push frame fully into Wall Channel, allow a suitable gap to ensure adjustment and fixing.





Wall plugs supplied are for solid walls only. Ensure correct wall plug for wall type is used. If in doubt seek professional advice.



Position Wall Channel on wall as shown, ensure Wall Channel is fixed level.

12

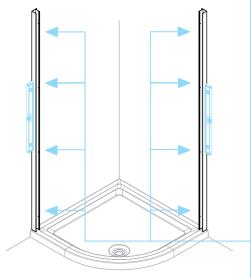


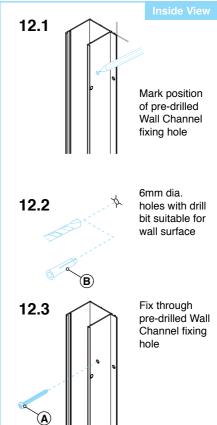




Tip: When drilling tiles apply masking tape to surface to stop drill bit slipping.



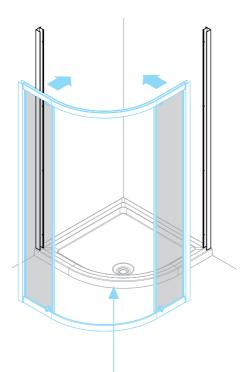



Plan View

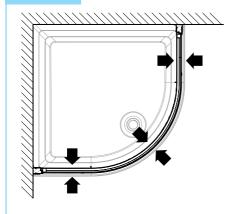



IMPORTANT NOTE


Ensure radius of enclosure matches tray.
DO NOT push frame fully into Wall Channel, allow a suitable gap to ensure adjustment and

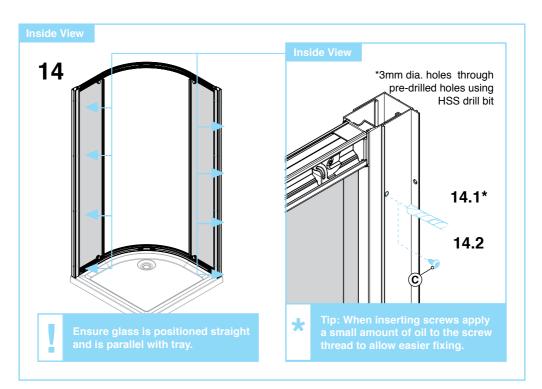


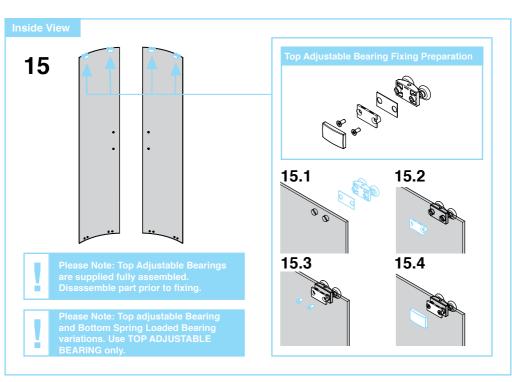


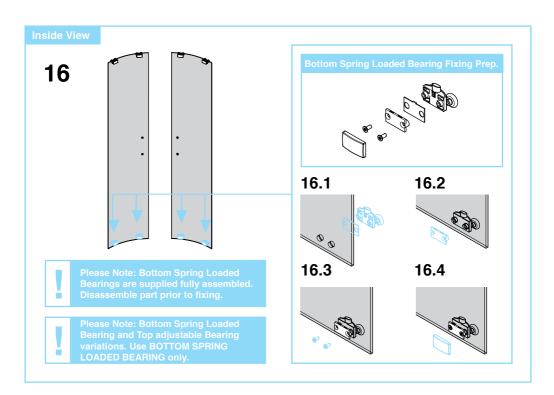


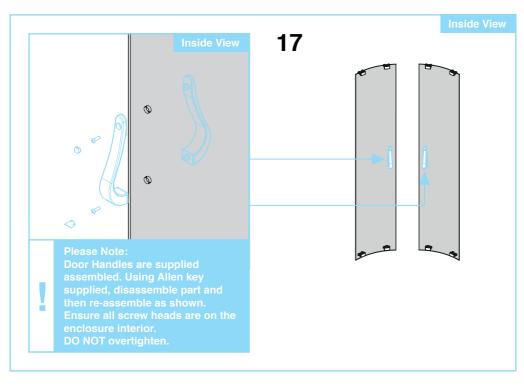


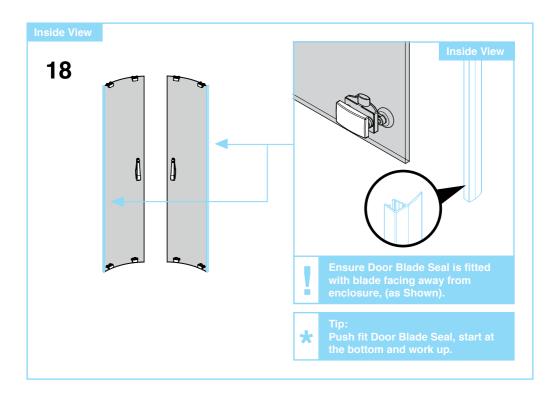


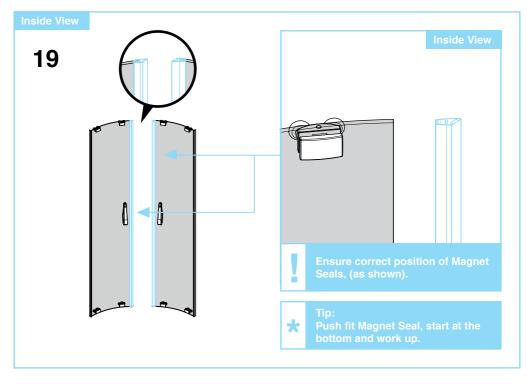


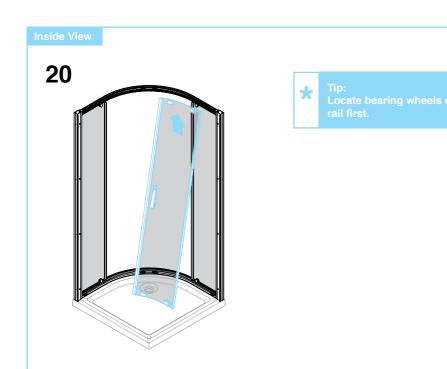


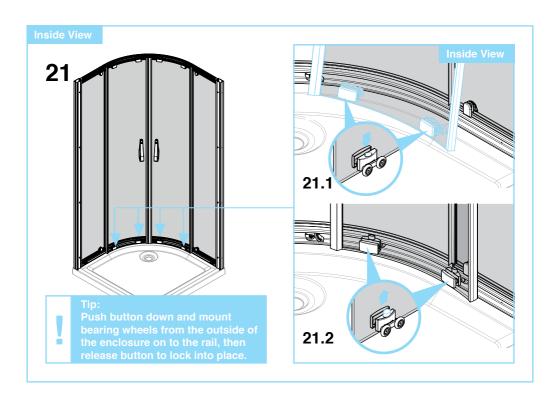


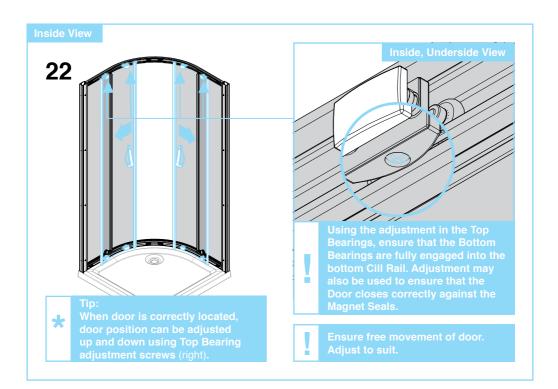

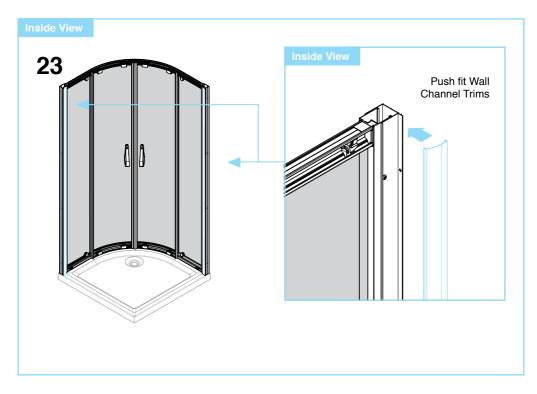

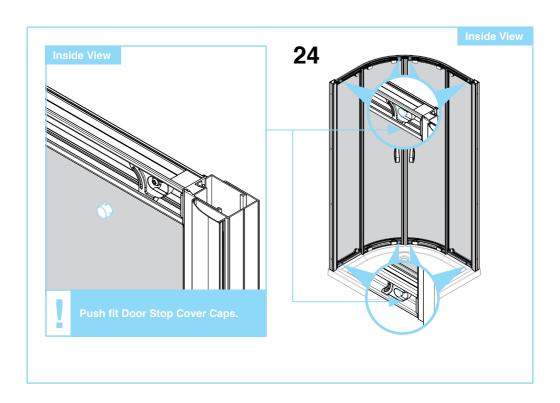


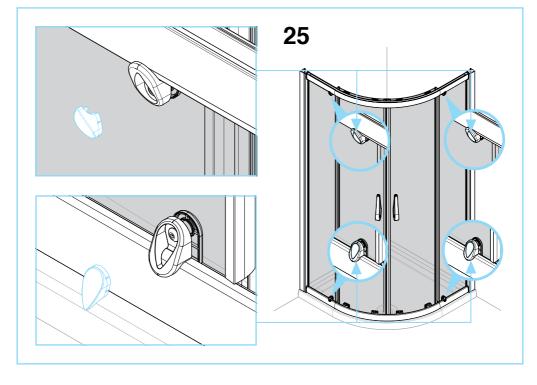

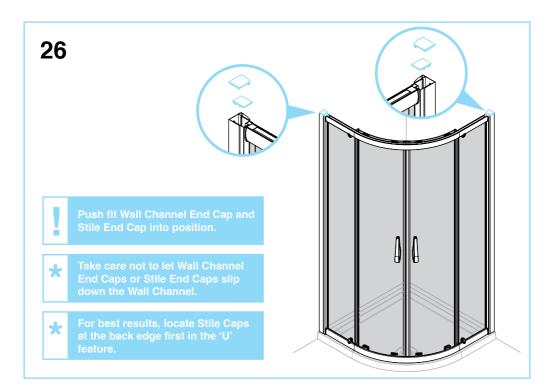

Inside View

27

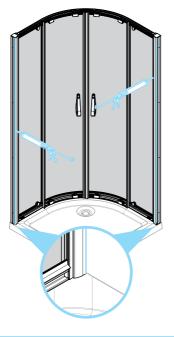




Apply Silicone Sealant, (not supplied) vertically between wa channel and wall only.



Apply Silicone Sealant, (not supplied).

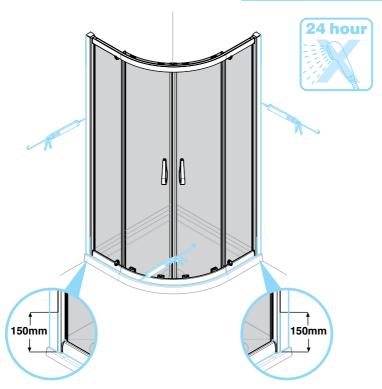



Product Care:

Use a non-abrasive cleaner. Water marks may be removed with a proprietary limescale remover or household vinegar.

Notes:	
	:səlon