


PARTS

- (A) MIRROR
- (B) FRAME
- (C) LEG
- (D) HANDLES (2)
- (E) SHORT MACHINE SCREWS (2)
- (F) LONG MACHINE SCREW
- (G) PLASTIC SPACERS (2)

HARDWARE ILLUSTRATION

Tools required: Wrench (not included)

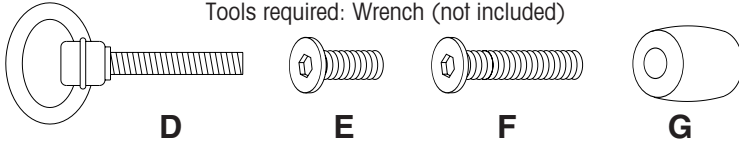


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify, and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, phone, fax, or mail to our Customer Service Department. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

ATTENTION: SOME NUMBERED PARTS LISTED ON THE INSTRUCTION SHEET MAY NOT BE IN PARTS BAG AS THEY MAY ALREADY BE ASSEMBLED. CAREFULLY CHECK PARTS AND PACKING MATERIALS PRIOR TO ORDERING REPLACEMENTS.

IMPORTANT NOTE: Follow instructions listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

1. Place parts on a soft cloth. Insert Short Machine Screws (E) through Flange attached to Leg (C) and tighten into Frame (B). Insert Long Machine Screw (F) through underside of Leg (C) and tighten into Frame (B). (See ill #1)
2. Insert Handles (D) through sides of Frame (B), Plastic Spacers (G) and tighten into sides of Mirror (A). (See ill #2)
3. To preserve your hand painted finish, wipe with a soft damp cloth. DO NOT use cleaners or abrasives as they may damage the finish.

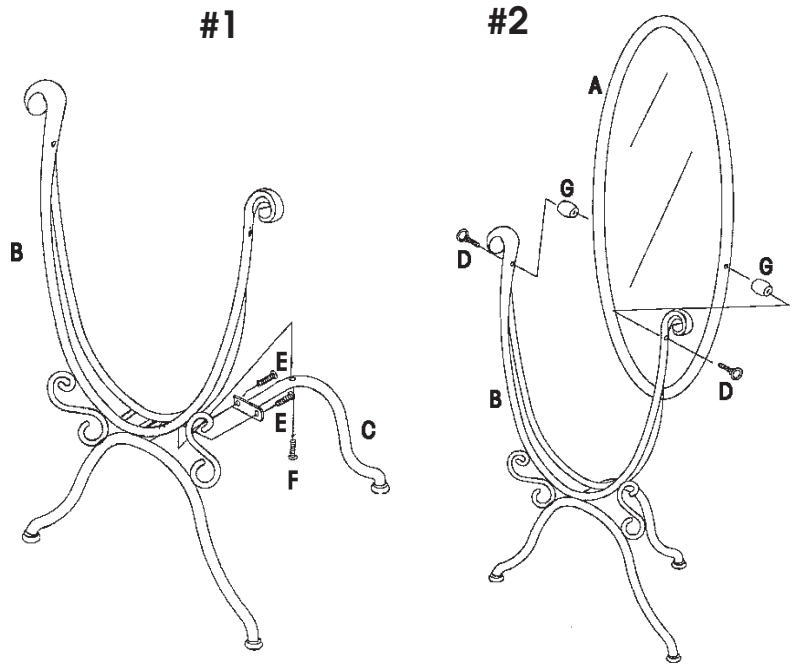

IF YOU HAVE A PROBLEM, WE WANT TO HAVE THE OPPORTUNITY TO MAKE IT RIGHT!

Should there be any missing or defective part(s),

FAX this form to (310) 841-0842

or call Customer Service at (310) 204-2224

Have your model number and part code letter handy.

MODEL NO. 147

© 2000 Powell

Part Letter	Description	Quantity

Name _____

Address _____

Daytime Phone () _____

Reason for Replacement _____

Place of Purchase _____