




# Installation Instructions

# iPad® Mount

75x75mm Adaptor

## Component Checklist

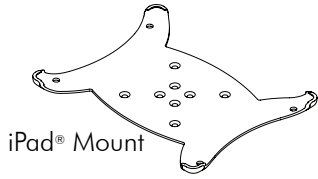

### Tools Required:

Philips head  
Screwdriver

## IMPORTANT INFORMATION


- ! **IMPORTANT - Install as per Installation Instructions**
- ! Compatible with any Atdec product with a VESA 75 x 75mm (3"x3") mounting hole configuration.
- ! The Manufacturer accepts no responsibility for incorrect installation.

## Step 1. Check Components

Check you have received all parts against the Component Checklist.


### Step 2a. Attach iPad® mount to ATDEC Focus Range

Insert the M5 screws through the adaptor into the Focus flexistar head. Secure the M5 nuts and tighten firmly using the phillips head screwdriver.

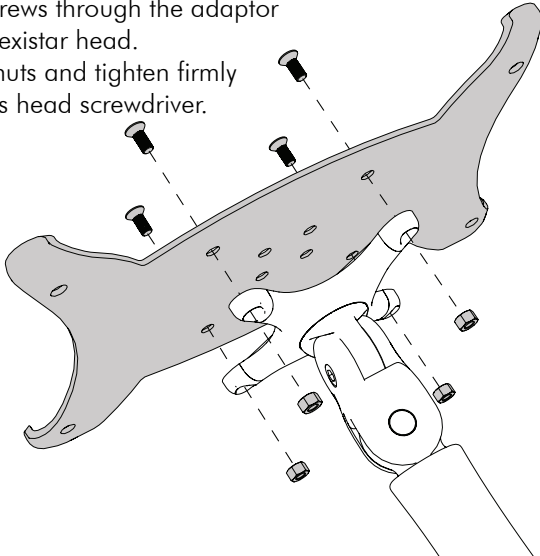

### Step 2b. Attach iPad® mount to ATDEC Spacedec QR VESA Plate or Telehook VESA plate.

Insert the M5 screws through the adaptor into the VESA mount plate. Attach the M5 star washer and then secure in place with the M5 nuts. Using the phillips head screwdriver, tighten firmly.

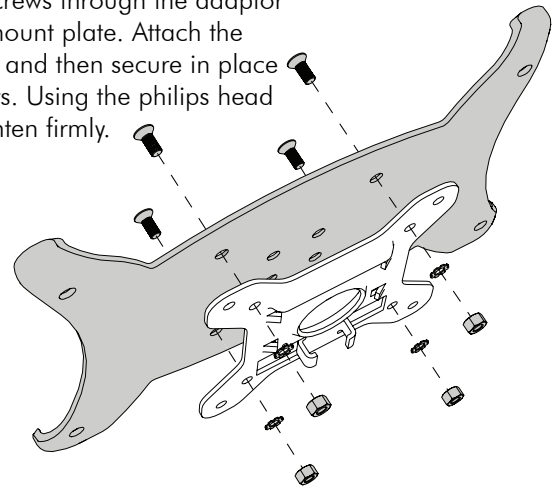

## Step 3. Attach iPad® to iPad® Mount

1. Position the iPad® in bottom half of the Mount.

2. Push the iPad® into top half of the Mount and press firmly in each corner.

When you hear each corner CLICK into place the iPad® is secured.

