



**DREAM ON ME**  
219 36TH STREET  
BROOKLYN, NY 11232  
718-768-5500



TODDLER  
BED WITH DRAWER  
STYLE NO: 651

**MADE IN CHINA**

**CAUTION: ANY MATTRESS USED IN THIS TODDLER BED MUST BE AT LEAST 51-5/8 INCHES (131CM) BY 27-1/4 INCHES ( 69CM ) WITH A THICKNESS OF AT LEAST 4 INCHES ( 10CM ) AND NOT EXCEEDING 6 INCHES ( 15CM ).**



## **WARNING:**

**\*\*\*\* KEEP INSTRUCTIONS FOR FUTURE USE \*\*\*\***

**READ ALL INSTRUCTIONS BEFORE ASSEMBLY**

CAUTION: BEFORE USING THIS TODDLER BED, RECHECK ALL SCREWS TO BE SURE THAT THEY ARE TIGHTENED SECURELY. A PERIODICAL CHECK SHOULD BE MADE OF ALL SCREWS & NUTS TO BE SURE THEY REMAIN TIGHT.



## **WARNING:**

FAILURE TO FOLLOW THESE WARNINGS AND THE ASSEMBLY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

THE GUARDRAILS PROVIDED **MUST** BE USED

**STRINGS CAN CAUSE STRANGULATION ! DO NOT PLACE**  
**ITEMS WITH A STRING AROUND A CHILD'S NECK SUCH AS**  
**HOOD STRINGS OR PACIFIER CORDS**  
**DO NOT SUSPEND STRINGS OVER THE TODDLER BED OR**  
**ATTACH STRINGS TO TOYS**  
**DO NOT PLACE THE TODDLER BED NEAR A WINDOW**  
**WHERE CORDS FROM BLINDS OR DRAPES CAN STRANGLE**  
**A CHILD. DO NOT TIE PACIFIER, NECKLACES, OR ANY OTHER**  
**ITEMS AROUND A CHILD'S NECK OR ON THE TODDLER BED**  
**PARTS. THIS COULD CAUSE STRANGULATION.**

**BEFORE EACH USAGE OR ASSEMBLY, INSPECT THE**  
**TODDLER BED FOR DAMAGED HARDWARE, LOOSE**  
**JOINTS, MISSING PARTS, OR SHARP EDGES. DO NOT USE**  
**THE TODDLER BED IF ANY PARTS ARE MISSING OR**  
**BROKEN. ASK YOUR DEALER OR WRITE TO DREAM ON**  
**ME, FOR REPLACEMENT PARTS AND INSTRUCTIONAL**  
**LITERATURE IF NEEDED. DO NOT SUBSTITUTE ANY**  
**PARTS.**

**IF REFINISHING, USE A NON TOXIC FINISH SPECIFIED FOR**  
**CHILDREN'S PRODUCTS. TO CLEAN, WASH WITH MILD**  
**SOAP AND A DAMP CLOTH.**  
**TO STORE, KEEP IN A COOL, DRY PLACE.**

**DO NOT USE WITH LESS THAN 12 INCHES(31CM) OF**  
**SPACE BETWEEN THE TODDLER BED AND SOLID OBJECTS**  
**AS A WALL OR DRESSER. A CHILD COULD SLIDE INTO A**  
**SMALL SPACE AND SUFFOCATE.**  
**DO NOT USE THE TODDLER BED FOR INFANTS. THIS**  
**TODDLER BED IS NOT A SUBSTITUTE FOR A CRIB. THE**  
**TODDLER BED IS INTENDED FOR A CHILD BETWEEN THE**  
**AGE OF 15 MONTHS TO 5 YEARS WITH A MAXIMUM**  
**WEIGHT OF 50 POUNDS(23KG).**

**DO NOT USE A WATER MATTRESS WITH THIS PRODUCT.**

## HARDWARE AND TOOL DIAGRAM



(a) Bolt 2 1/2" 10 PCS




(b) Bolt 2 1/8" 2 PC




(c) Barrel Nut 12 PC



(d) Allen Wrench 1 PC




e-1 Bolt 1 2/5 " 2 PC



e-2 Bolt 1 3/5 " 2 PC




(f) Wood Dowel 8 PCS



(g) Cam Bolts 52 PCS



(h) Cams 12 PCS



(i) WOOD SCREW 1 PC

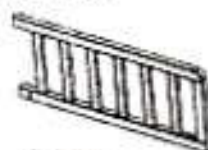
## Component Parts



(A) Headboard 1PC



(B) Footboard 1PC



C1 RIGHT



C2 LEFT

(C) Bed Rail 2 PCS



D1 RIGHT



D2 LEFT

(D) Side Bar 2 PCS



(E) Cross Middle Bar 1 PC



(F) Cross Bar 6 PCS



(G) Drawer Front Panel 1PC



H2 LEFT

H1 RIGHT

(H) Drawer Left /Right Panel 2PCS



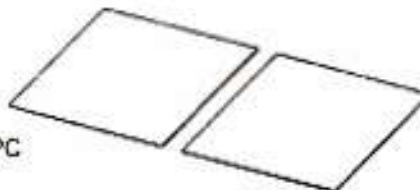
(I) Drawer Back Panel 1PC



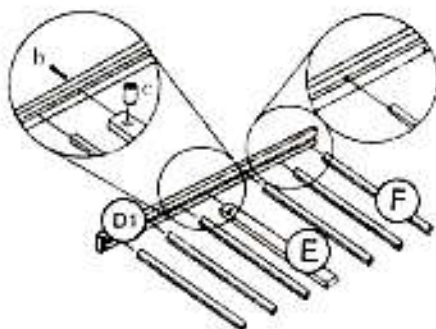
(J) Drawer Middle Panel 1PC



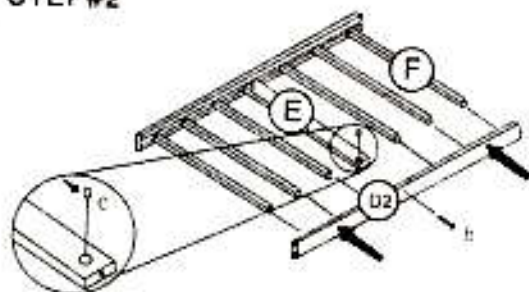
(K) Drawer Bottom Support Bar 1PC



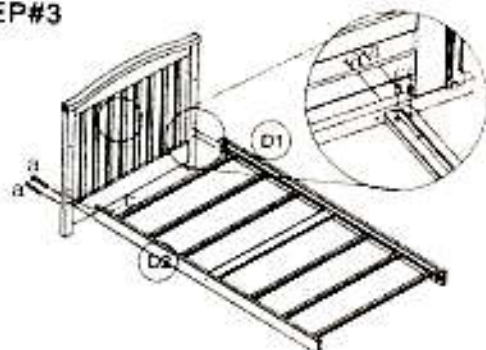
(L) Drawer Bottom Panels 2PCS

**STEP#1**

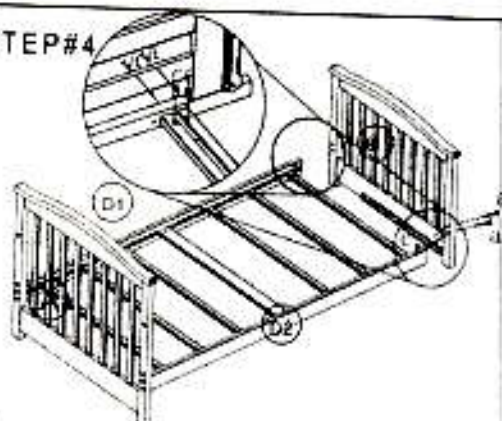
Connect Cross middle bar (E) to the Side bar (D1) using barrel nuts (c) and bolts (b). Attach cross bar (F) to Side bar (D1). Please note: dowel end should fit into hole in the groove.

**STEP#2**

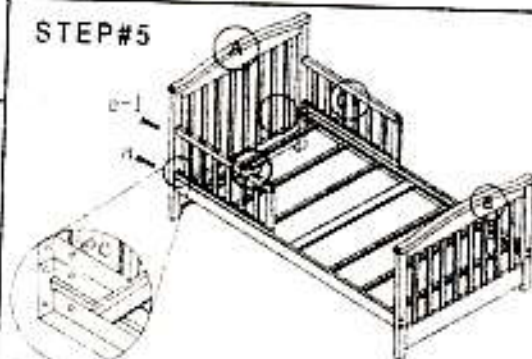
Connect the other Side bar (D2) to the Cross middle bar (E) using barrel nuts (c) and bolts (b). Make sure cross bar (F) are connected to the grooving on Side bar (D2).

**STEP#3**

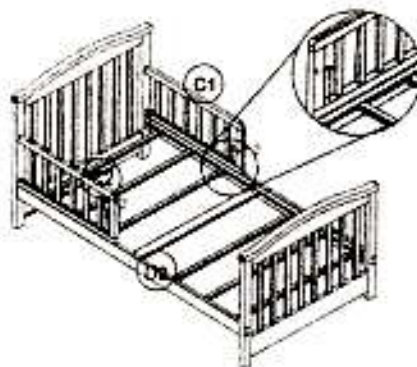
Attach Side bar (D) to the headboard (A) using barrel nuts (c) and bolts (a). Make sure that the holes on the side bar (D) are facing up, and nearer the headboard (A).

**STEP#4**

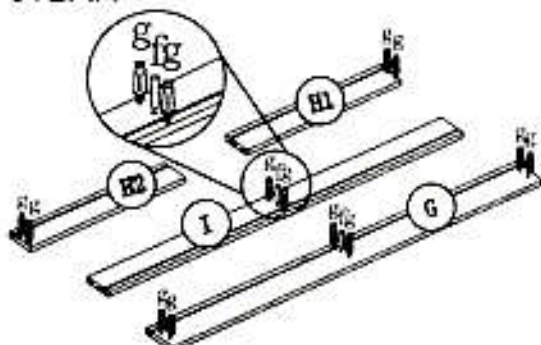
Repeat step 3 for the footboard (B) as shown.

**STEP#5**

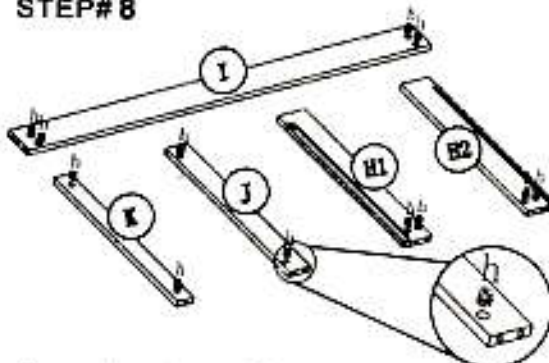
To assemble the bed rail (C). Connect the bottom rail to the headboard (A) using barrel nuts (c) and bolts (a). Make sure that the holes for nuts (c) are inside the bed and can not be visible from outside. Connect the top rail to headboard (A) using bolts (e-1 with bigger head). Do not over tighten bolts.

**STEP#6**

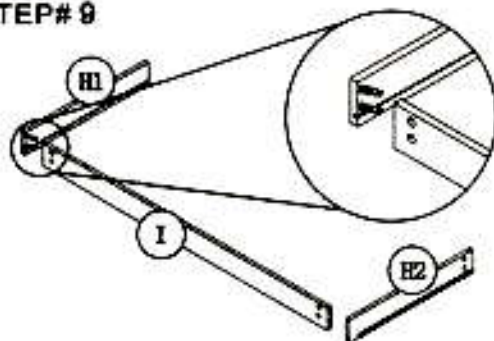
Bolt bottom side rail into Side bar (D) using bolt (e-2 with smaller head) as shown.

**STEP#7**

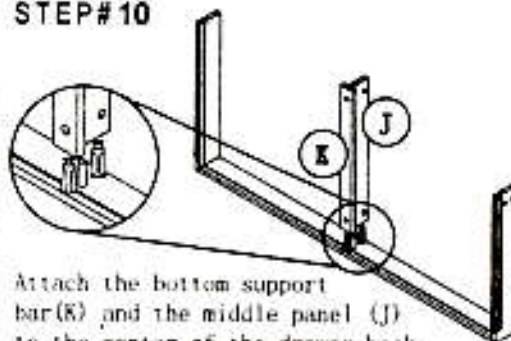
Thread cam bolts(g) and dowels(f) into the pre-drilled holes on the front (G), side (H) and back panel (I)

**STEP#8**

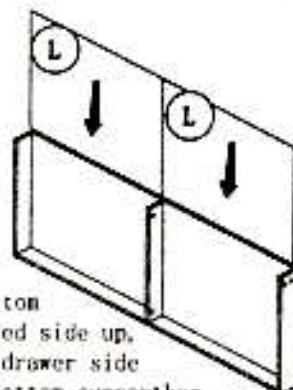
Inserting the cams(h) into the holes on the side (H), the back panel (I), the bottom support bar(K) and the middle panel (J).

**STEP#9**

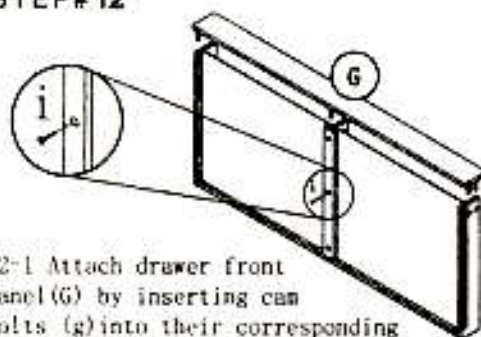
Attach both drawer right side (H-1) and drawer left side (H-2) to the drawer back panel (I) by inserting the cam bolts (g) to the end holes of the drawer back panel (I) as shown. Make sure the grooves line up and face inside. Lock the cams (h) in the drawer back panel (I) by turning them

**STEP#10**

Attach the bottom support bar(K) and the middle panel (J) to the center of the drawer back panel (I) in the same way as shown.

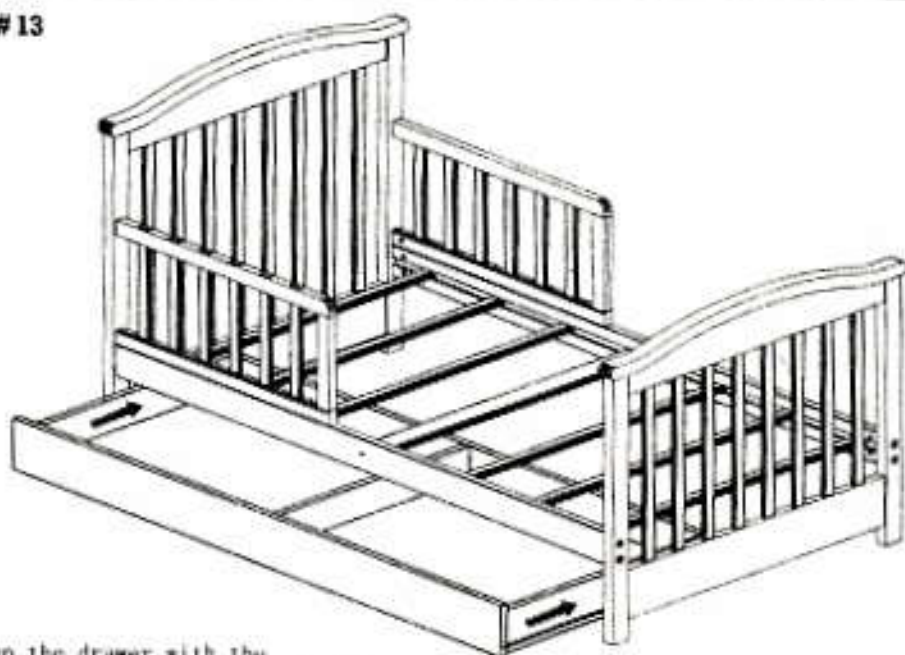
**STEP#11**

Slide drawer bottom panels (L) painted side up, into grooves of drawer side panels (H), the bottom support bar (K) and the middle panel (J) as shown.

**STEP#12**

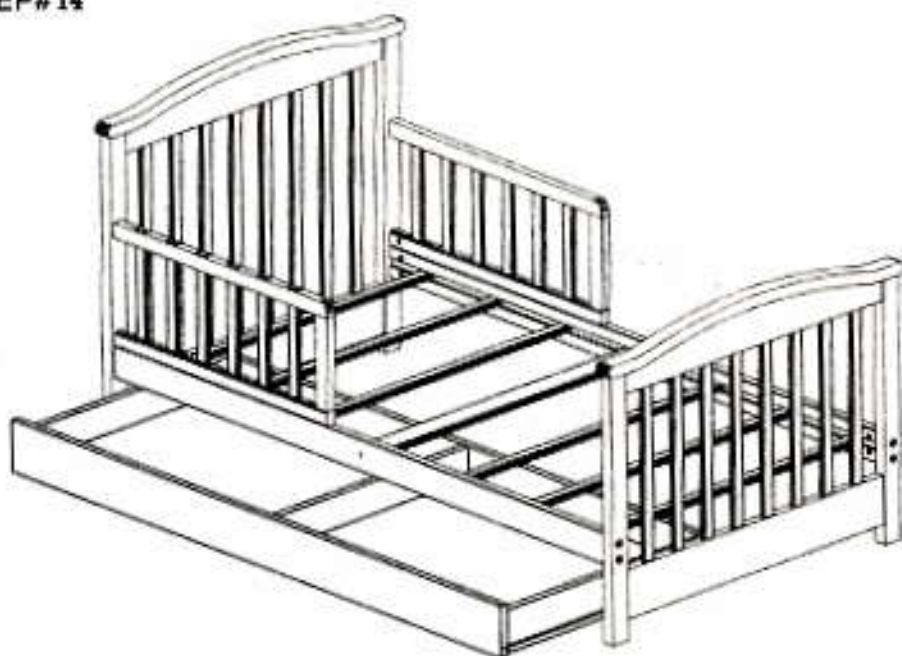
12-1 Attach drawer front panel(G) by inserting cam bolts (g) into their corresponding cam bolts holes on ends of drawer side panels (H), the bottom support bar(K) and the middle panel (J). Make sure the drawer bottom panels (L) are also inserted into grooves of drawer front panel (G). Lock cams (h) by turning them clockwise.  
12-2 Place the whole drawer flat on the floor with the back up. Screw the screw(i) from the middle of the bottom support bar (K) to the middle panel (J), as the image shown.

**STEP#13**



Line up the drawer with the wheels and metal tracks on each side. With the front slightly elevated, slide into the track on the bed, lowering the front as it rolls into place under the toddler bed.

**STEP#14**



Congratulations, your toddler bed with drawer is ready to use.