



9608,9611,9615,9908,9911,9915,9919 INSTALLATION INSTRUCTIONS

GENERAL


- To insure the success of the fixture installation, the following instructions and diagram(s) should be read and understood.
 - All electrical connections must be made in accordance with the National Electric code and local codes and ordinances.
If you are uncertain of the methods of installing electrical wiring and lighting fixtures secure the services of a qualified licensed electrician.
 - TOOLS NEEDED:** Blade screwdriver, phillips screwdriver, slip joint pliers or small adjustable wrench, wire cutter/stripper, electrical current tester, stepladder, electrical tape and (if installed outdoors) weatherproof caulking or silicone sealant.
- NOTE:** The important safeguards and instructions outlined on this sheet are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that cannot be built into any product. Caution and care must be supplied by the person(s) installing, operating and maintaining this lighting fixture.
- NOTE:** If fixture is installed outdoors, for your safety be certain that the circuit breakers controlling outdoor lighting and equipment be GFI breakers.

INSTALLATION PREPARATION


- TURN OFF THE ENTIRE ELECTRICAL CIRCUIT TO WHICH THE LIGHTING FIXTURE IS TO BE ATTACHED.**
Move the appropriate circuit breaker to the "off position or completely remove the fuse controlling the circuit.
- If an existing fixture is being replaced, remove it and note to which of the wires in the outlet box the fixture was attached. **DO NOT SEPARATE ANY OTHER WIRES THAT MAY BE IN THE BOX. DO NOT DAMAGE THE INSULATION OF OLDER WIRING.** In regular circumstances the BLACK wire will be the "Hot" lead and the WHITE wire will be the "Neutral" or "Common" lead. A GREEN or BARE COPPER wire is the "Ground". In older buildings it is always good practice to reconfirm the polarity of the wiring.
- This fixture is designed to be mounted on a standard round or octagon box. The box must be securely mounted to the structure of the building.

FIXTURE INSTALLATION

- Remove the fixture, glass and parts bag(s) from the carton.
Before discarding the carton, double check packing to make certain that all parts are found.
- Remove the nuts holding the crossbar to the fixture.
- Pull the wires through the stems(3", 6", 12" & 2@18"), twist the swivel onto the stem to hold the canopy.
- Pull the wires in the outlet box through the center hole of the crossbar.
Attach the crossbar to the outlet box.
(The green ground screw should face out).
- Fasten the green fixture wire to the green or bare copper wire in the box or fasten it to the mounting cup with green screw provided.
NEVER FASTEN THE GROUND WIRE TO THE BLACK OR "HOT" WIRE!
FAILURE TO FOLLOW THIS INSTRUCTION COULD RESULT IN SERIOUS INJURY OR DEATH!
- Fasten the white fixture wire to the white wire in the outlet box. Fasten the wires to together with an approved fastener (wire nut). Starting about 1" below the fastener, tightly wrap connection with electrical tape so that the tape seals the end of the fastener.
Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!

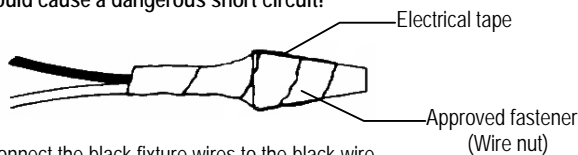

- Connect the black fixture wires to the black wire in the outlet box. Fasten the joined wires as in step 6.
- Place the fixture over the crossbar and fasten it in place with the ball nuts.
- Lock the shade(9608 serie with glass shade, 9908 series with metal shade) to the socket with the socket ring.
- Install the lamp (light bulb).
9608 is rated for a 100 watt type A lamp.
9611 & 9615 are rated for 150 watt type A lamp.
9908 is rated for a 75 watt type A lamp.
9911 is rated for a 100 watt type A lamp.
9915 & 9919 are rated for 150 watt type A lamp.
DO NOT EXCEED RECOMMENDED WATTAGE!

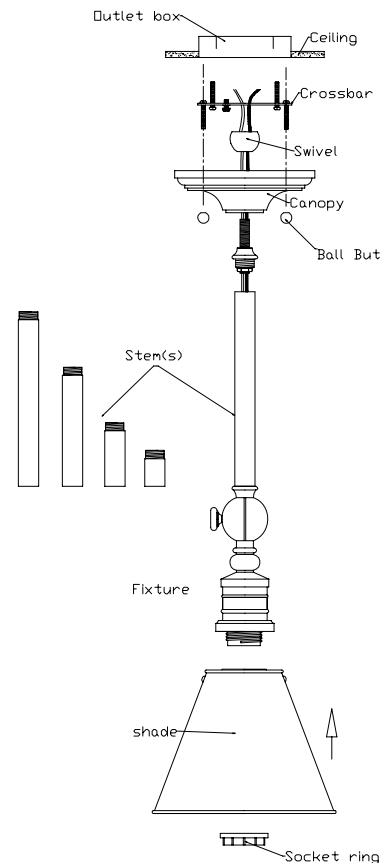

- Restore power to circuit at breaker or fuse box.