

Cedar Birdhouse

(BH08U Unassembled Kit)


Tools Required

For your convenience we use Recex multi-drive, rust-resistant, zinc-plated hardware. You will need a #2 Philips or Robertson screwdriver and a hammer.

*Before starting please check all components in the kit with the contents list to familiarize yourself with their placement and to ensure that there are no parts missing.

Package Contents:

- (A) Base...1
- (B) Sides...2
- (C) Roof...2
- (D) Peak Brace...2
- (E) Back Wall...1
- (F) Front Wall...1

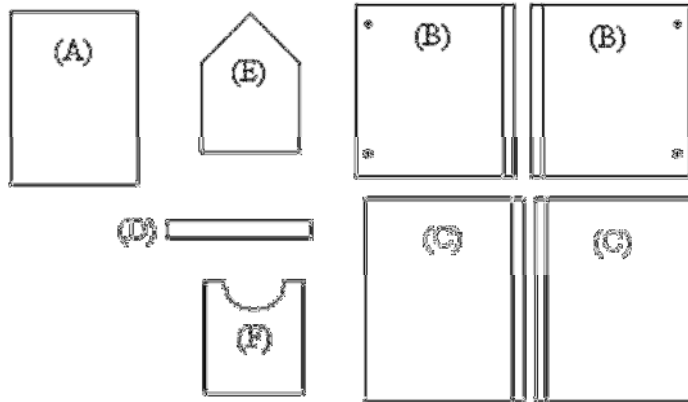


Hardware

- 1-1/2" Zinc screw...4
- 1-1/2" Galvanized Nails...16

Assembly

1. Attach the 2 sides to the base using 1-1/2 inch screws.
2. Insert the Front and Back walls between the 2 sides and attach using 2 nails per side.
3. Set the 2 Roof tops upside down and join the 2 beveled edges together to form the peak.
4. Place the Peak Brace between the roof peaks and flush with one end.
5. Fasten the peak together by nailing the peak brace to one rooftop using 2 nails, then to the other.
6. Fit the roof assembly onto the sides with the flush end of the peak brace at the front.
7. Secure the roof assembly to the sides using 2 nails per side.

Your Birdhouse is ready for use!

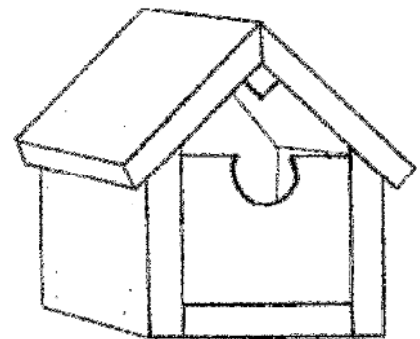

♥ Visit our website for more great cedar products: www.allthingscedar.com

Thank you for choosing All Things Cedar