

JASMINE MOVE DOWN

TECHNICAL SPECIFICATIONS

Description: Jasmine Move Down adjustable counterweight pendant with canopy and 75 Watt transformer
Design: Bruck-Team
Lamp: Low pressure bi-pin: GY6.35 and 5W Festoon

CONTENTS OF DELIVERY

canopy and fixture complete with lamps


IMPORTANT SAFETY INSTRUCTIONS

1. Save these instructions and refer to them when additions to or changes to the fixture are made.
2. THIS PRODUCT MUST BE INSTALLED BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED, IN ACCORDANCE WITH THE APPLICABLE NEC CODE.
3. Do not install this fixture in damp or wet locations.
4. CAUTION - Do not install any fixture assembly closer than 6 inches from any curtain, or similar combustible material.
5. Turn off power prior to any work on the systems.
6. Total wattage of the fixture must never exceed the wattage supplied by the low voltage electronic transformer. Please check that the total lamp wattage does not exceed 50W or wattage specified by fixture.
7. Secondary connections must be clean and tight to avoid arcing and overheating!
8. Warranty is void in case of unauthorized modifications and/ or improper use.

READ ALL OF THESE INSTRUCTIONS BEFORE INSTALLATION


PART NUMBERS

220 900wh	matte chrome, glass white matte/white
220 903wh	matte gold, glass white matte/white
220 901am	matte chrome, glass white matte/amber
220 904am	matte gold, glass white matte/amber
220 902bl	matte chrome, glass white matte/blue
220 905bl	matte gold, glass white matte/blue

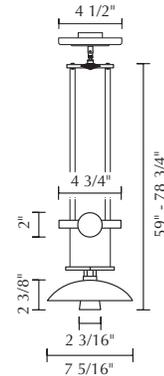

INSTALLATION INSTRUCTIONS


fig. 1

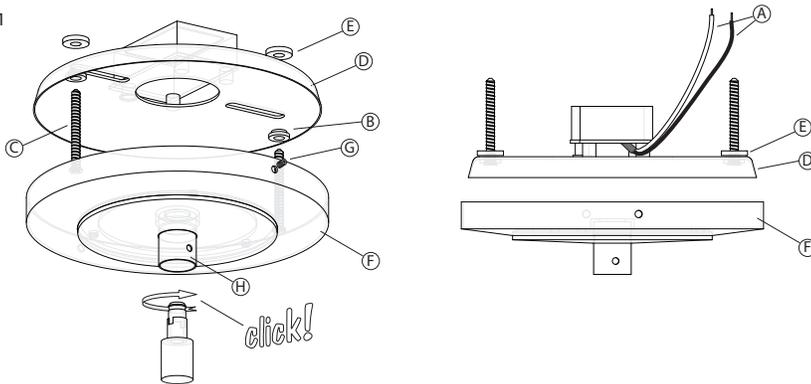

CANOPY INSTALLATION (fig. 1)

- The surface mount canopy included with the Jasmine Move Down can be mounted directly over a J-box or any ceiling with access to the power cables.
- Connect the two wires from the transformer (A) to the power cables in the wall or J-box.
- Slide the notched plastic washer (B) through the mounting screw (C). Insert the screw (C) into the mounting plate (D) and slide the remaining plastic washer (E) onto the end of the screw.
- Align the screws (C) with the J-box and tighten until secured.
- Place the canopy cover (F) over the mounting plate (D) and secure it with the allen screw (G) located on the side of the base.
- The Jasmine Move Down pendant can now be attached to the socket (H). Insert the uni-plug into the socket (a click will be heard) and twist the collar to complete installation.


fig. 2

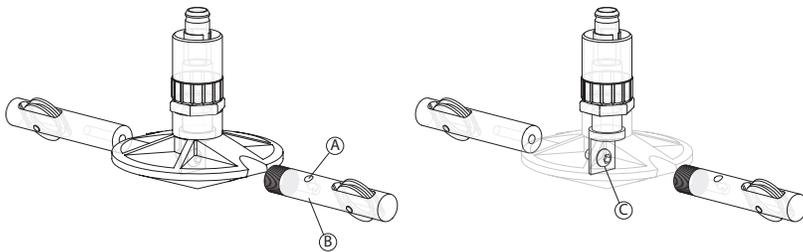

SLOPED CEILING MOUNT ADJUSTMENT (fig. 2)

- Remove the allen screw (A) from the bar with the provided allen wrench. Unscrew the counterweight bar (B) from the assembly.
- Insert the larger allen wrench into the assembly to loosen the inner screw (C).
- Adjust the counterweight bar to the desired angle and retighten the inner screw.
- Screw the counterweight bar (B) back onto the assembly at the same angle as the other bar.
- Tighten the allen screw (A) back onto the bar.

fig. 3

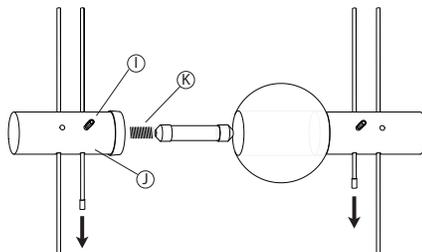

CABLE SHORTENING (fig. 3)

- Loosen the allen screws (I) located on the side bars (J).
- Push the wires through the bars, do not pull them out!
- Once the desired length is achieved, cut the cable and re-crimp.
- Re-tighten the allen screws (I).

FESTOON LAMP REPLACEMENT

- The side bars (J) on the glass ball detach to expose the festoon lamp. Remember to reinsert the springs (K) when replacing the lamp.