



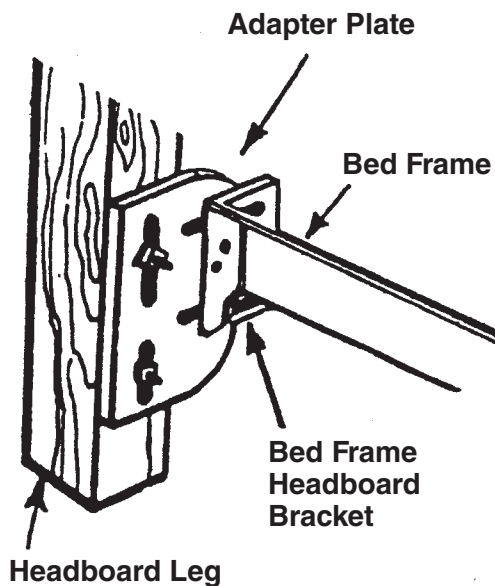

Bed Frame to Headboard Adapter Plates: Assembly Instructions

Parts Included

- Mod-Adapter Plates - 2
- Long Bolts - 4
- Short Bolts - 4
- Nuts - 8

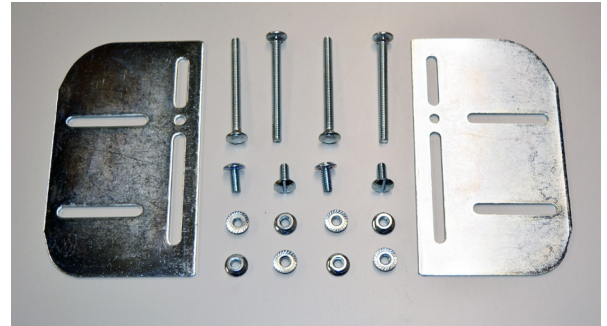

Instructions

- 1.) Assemble your headboard and bed frame prior to attaching them to the adapter plates.
- 2.) Insert long bolts into the legs of your headboard. TIP: Keep the heads of the bolts towards the wall to avoid scratches.
- 3.) Place vertical slots of mod-adapter plate over the bolts.
- 4.) Attach nuts to each bolt and tighten to hold plate in place, but do not tighten completely.
- 5.) Hold bed frame headboard bracket over horizontal slots of mod-adapter plate.
- 6.) Insert short bolts through the slots in the bracket and the plate.
- 7.) Attach nuts to other side of each bolt and tighten, but do not tighten completely.
- 8.) Adjust headboard and bed frame to desired position.
- 9.) Tighten all bolts securely.

