









**Garden Pavilion  
ITEM#L-PG044PST  
ASSEMBLY INSTRUCTIONS**

**NOTE: THIS UNIT IS HEAVY!** For safety, **DO NOT** assemble this item alone. 4 people are recommended for safe assembly.







**WARNINGS:**


- Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the assembly area of the gazebo.
- Some parts may contain sharp edges. Wear protective gloves.
- When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and usage.
- For outdoor use only. Install on level ground.
- Check all bolts for tightness before and during usage.

<b>Parts List</b>			
Post Screen	A	2	
Post Screen	B	2	
Post Screen	C	2	
Post Screen	D	2	
Beam Screen	E	2	
Side Panel	F	2	
Top Screen	G	6	
Connect Bar	H	2	

**Note: It is recommended to use 4 people to complete the assembly steps.  
It is recommended to use 2 ladders taller than 8.2 ft / 2.4 m when installing the top screens.**

## Hardware Pack 1

AA	M6X15 Bolt TBZ00106015HQ	8 PCS	
BB	M6 Washer TBZ10406HQ	8 PCS	
CC	M6X65 Bolt TBZ00108040HQ	20 PCS	
DD	M6 Nut TBZ20108HQ	20 PCS	
GG	M6 Washer TBZ10408HQ	40PCS	
W	M6 Wrench	2 PC	

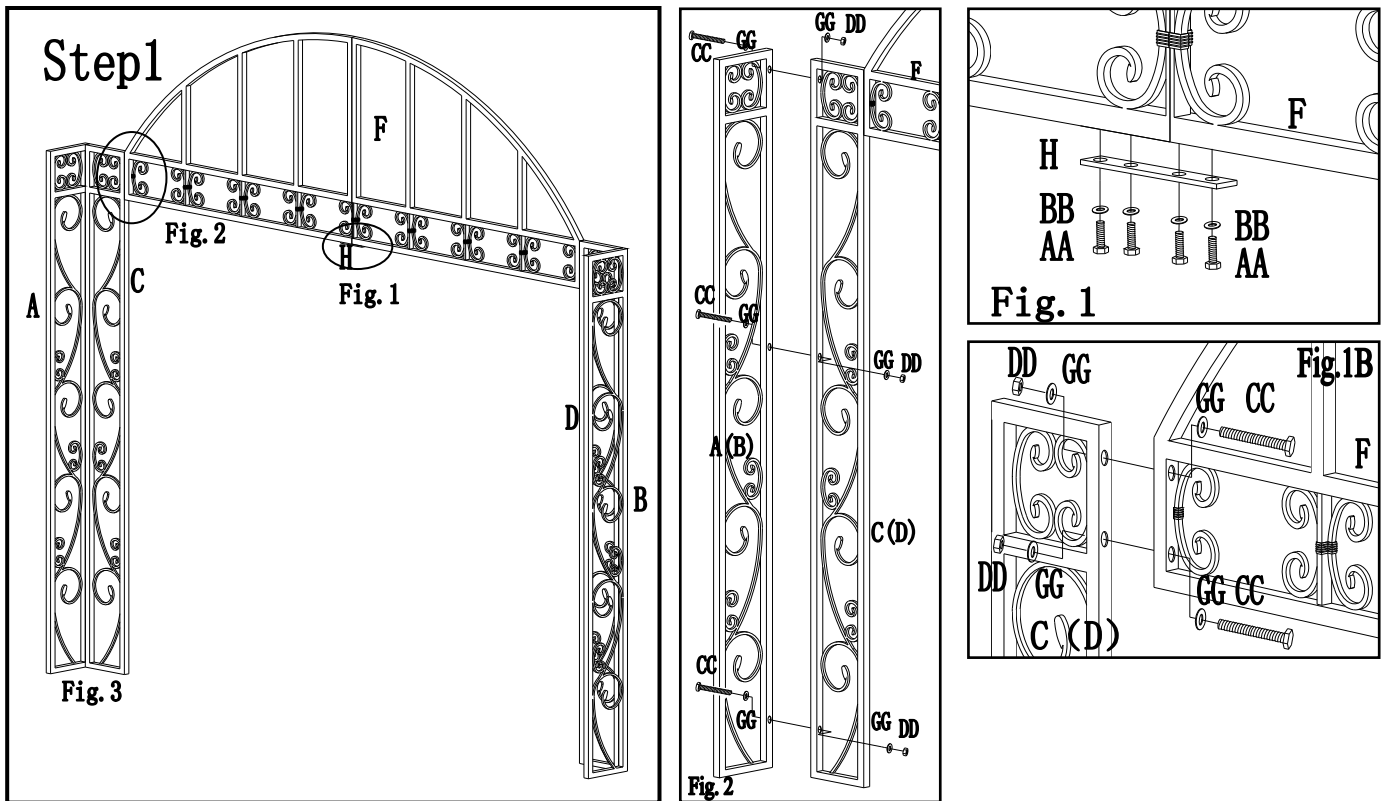






**Fig.1:** Unfold the Side Panel F and keep it flat by the Connecting Bar H, the Bolt AA and the Washer BB. See Fig.1A

**Fig.1B:** Place the unfold Side Panel F on a flat surface, attach it to the Post Screen C and the Post Screen D at the two ends of the Side Panel F with the Bolt CC and the Washer GG. See Fig.1B.




**Fig.2:** Attach the Post Screen A to the Post Screen C with the Bolt CC and the Washer GG. Repeat the same step to attach the Post Screen B to the Post Screen D.

## Hardware Pack 2

AA	M6X15 Bolt TBZ00106015HQ	4 PCS	
BB	M6 Washer TBZ10406HQ	4 PCS	
CC	M6X65 Bolt TBZ00108040HQ	8PCS	
DD	M6 Nut TBZ20108HQ	8 PCS	
GG	M6 Washer TBZ10408HQ	16PCS	

8





## Step 2

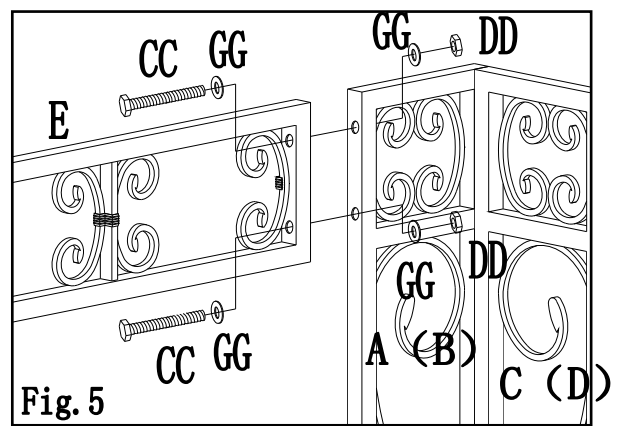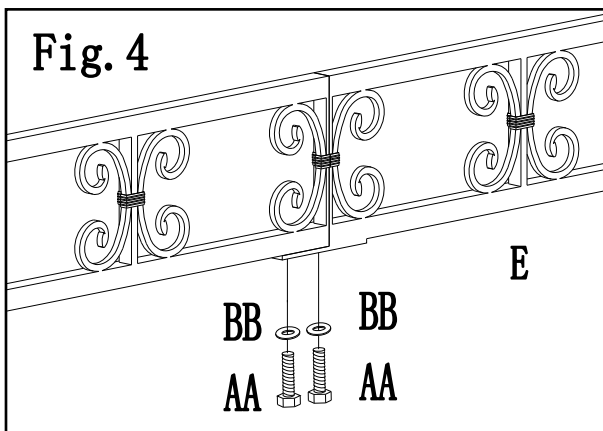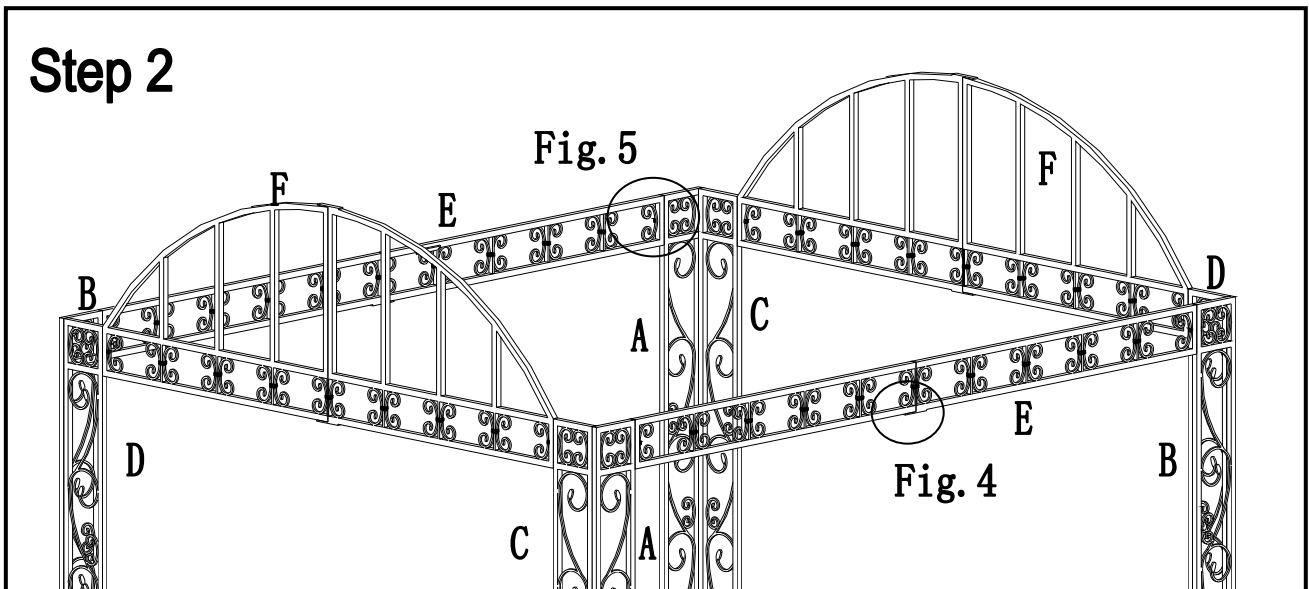





**Fig.4:** Unfold the Beam Screen E and keep it flat by the Bolt AA and Washer BB. See Fig.4

**Fig.5:** Attach the Beam Screen E to Post Screen A and Post Screen B with Bolt CC, the Nut DD and Washer GG. See Fig. 5.

## Hardware Pack 3

BB	M6 Flat Washer	48 PCS	
CC	M6X15 Bolt	24 PCS	
DD	M6X30 Bolt	24 PCS	
EE	Φ8*260MM Stake	8 PCS	

Step 3:

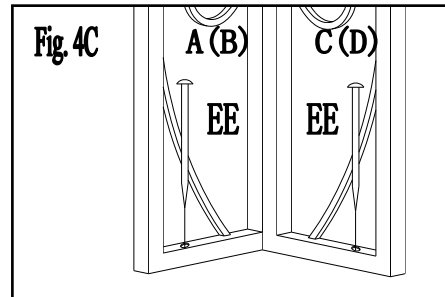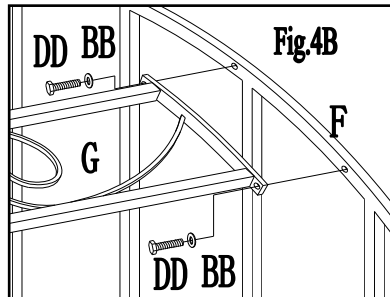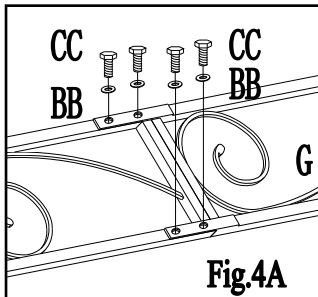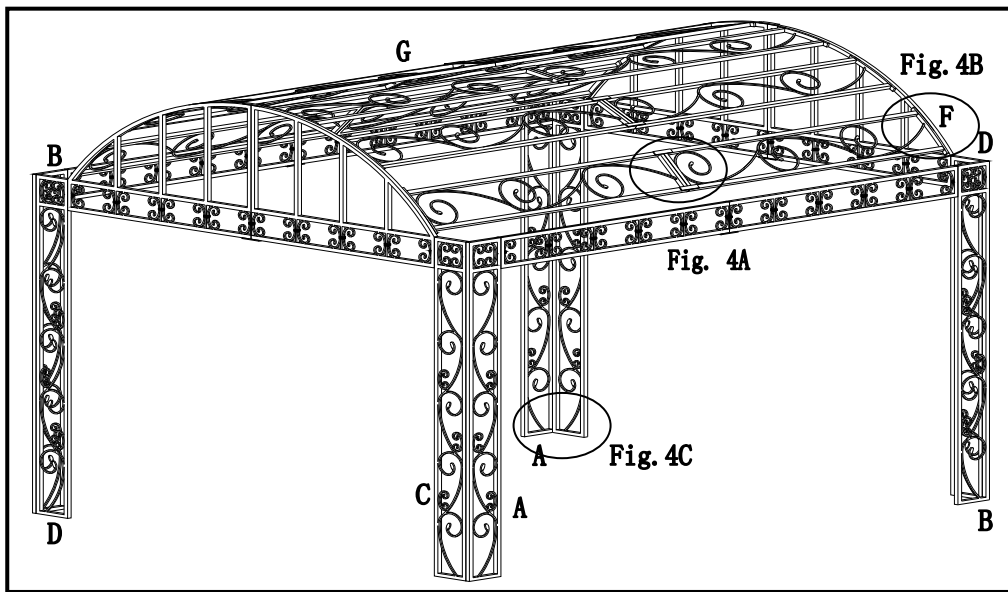

**Step 6:** Unfold Top Screen (G) and securely attach it with Bolt (CC) and Flat Washer (BB). See Fig.4A. Repeat until all 6pc of Top Screens (G) are assembled.

**Step 7:** Attach both ends of assembled Top Screens (G) to Semicircular Screen (F) with Bolt (DD) and Flat Washer (BB). See Fig. 4B. Repeat until all 6 Top Screens (G) are attached to semi-circular screens.

**Step 8:** Fasten the assembled pavilion to the lawn with Stakes (EE). See Fig. 4C.

**Important: Please do not return this product to the store.**

For technical assistance on assembly or replacement parts, please call Sunjoy Industries at 1(866) 578-6569 from 8:30 AM to 5:30 PM EST Monday to Friday or fax the replacement part form which put into the package to (740)-283-3549 or Email [customer.care@sunjoydirect.com](mailto:customer.care@sunjoydirect.com) for assistance.

MADE IN CHIA

E