



NOV090WHT/PNE NOVARO BUNK BED

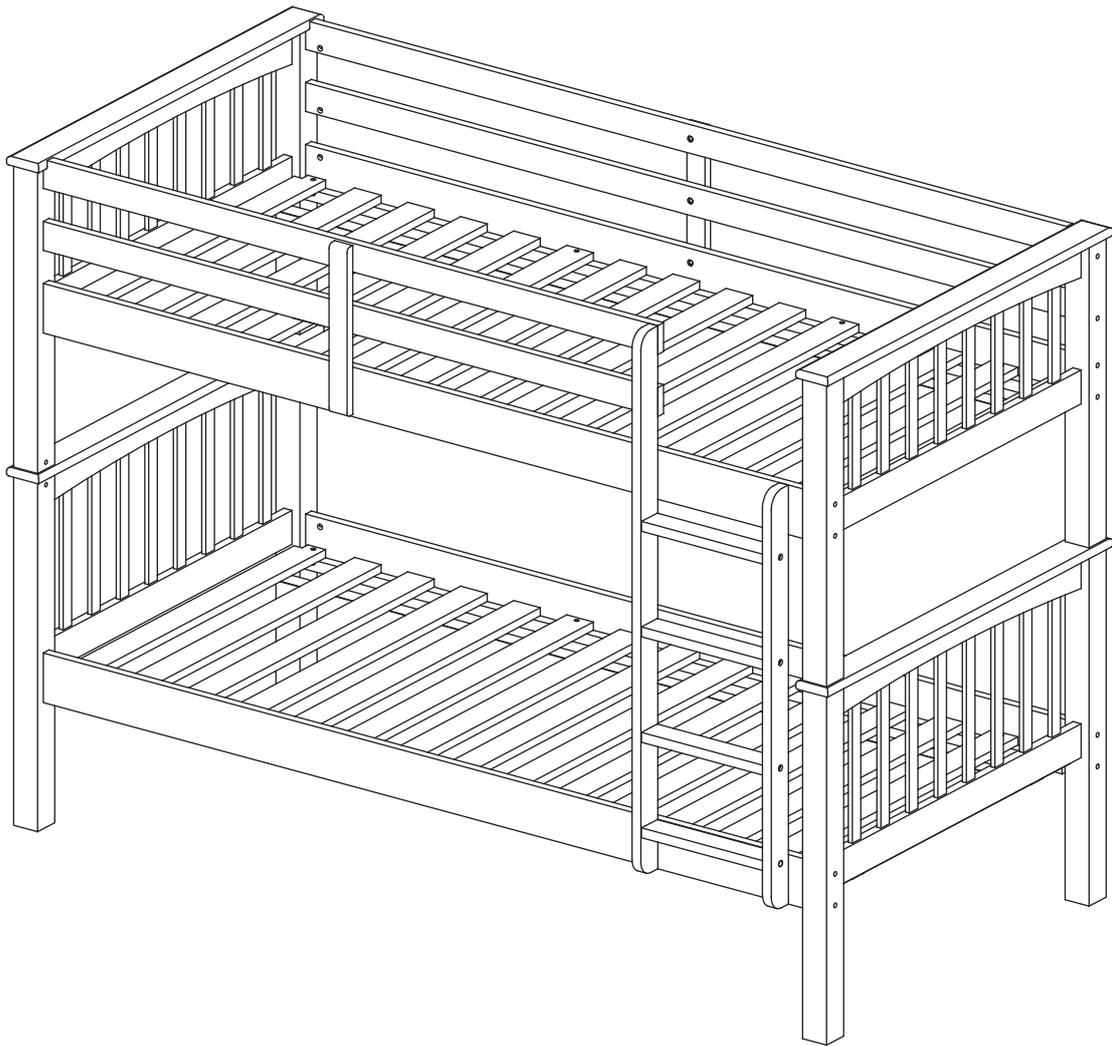

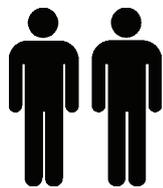

2 persons assembly

NOV090WHT/PNE NOVARO BUNK BED

INFORMATION

- **IMPORTANT** - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
- This item meets the test standard BS EN 747: 2012 parts 1 and 2.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled and secured as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- This product should only be used on firm, level ground.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- Maximum thickness of mattress 160mm. Please refer to marking on side rail.
- Tools not included.

WARNINGS

- This product is intended for a maximum person's weight of 80kg. Do not exceed this weight.
- High beds and the upper bunk bed is not suitable for children under the age of 6 years old due to risk of injury from falling. Low sleepers and Midsleepers are not suitable for children under 3 years old.
- Beware children can be strangled from items such as ropes, strings, cords, harnesses and belts attached to or hung from the bunk/high bed.
- Children can become trapped between the bed and the wall. To avoid risk of serious injury the distance between the top safety barrier and the wall should not exceed 75mm or shall be more than 230mm.
- Do not use power tools to construct this product.
- Do not tighten screws until fully assembled.
- Do not over tighten screws or bolts.
- Do not use this product if parts are missing, damaged or worn.
- Do not stand on the product.
















CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.

NOV090WHT/PNE



NOVARO BUNK BED

PARTS

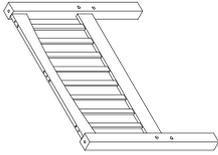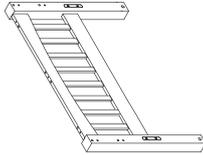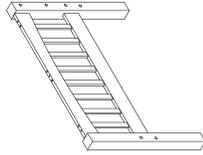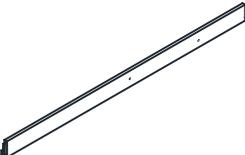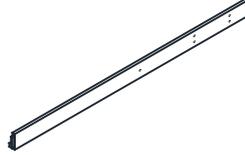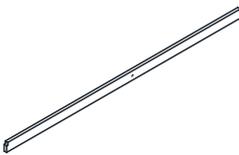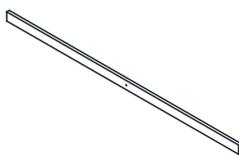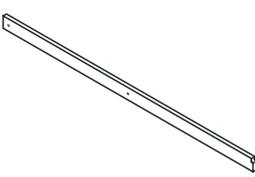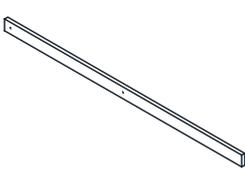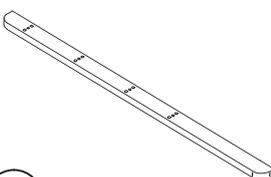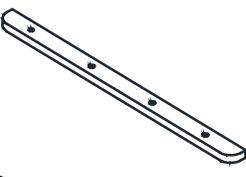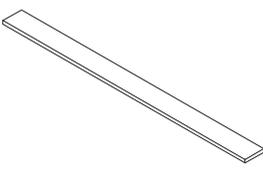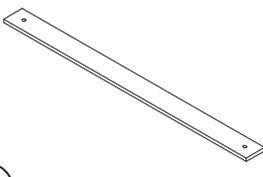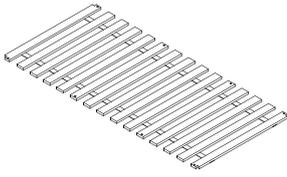 <p>① Headboard (lower) (2 pcs)</p>	 <p>② Left headboard (upper) 1PC</p>	 <p>③ Right headboard (upper) 1PC</p>
 <p>④ Side rail (lower-1pc)</p>	 <p>⑤ Side rail (lower-1pc)</p>	 <p>⑥ Side rail (upper-1pc)</p>
 <p>⑦ Side rail (upper-1pc)</p>	 <p>⑧ Long side rail (lower-1pc)</p>	 <p>⑨ Long side rail (lower-1pc)</p>
 <p>⑩ Short side rail (lower-1pc)</p>	 <p>⑪ Short side rail (lower-1pc)</p>	 <p>⑫ Left ladder (1pc)</p>
 <p>⑬ Right ladder (1pc)</p>	 <p>⑭ Step ladder (4pcs)</p>	 <p>⑮ Side rail-vertical (2pcs)</p>
 <p>⑯ Top rail (upper-2pcs)</p>	 <p>⑰ Top rail (lower-2pcs)</p>	 <p>⑱ Slat (2set)</p>


NOV090WHT/PNE NOVARO BUNK BED

FIXINGS


<p>A 22PCS</p>  <p style="text-align: center;">M6 X 100MM BOLT</p>	<p>B 12PCS</p>  <p style="text-align: center;">M6 X 60MM BOLT</p>	<p>C 12PCS</p>  <p style="text-align: center;">M6 X 30MM BOLT</p>
<p>D 8PCS</p>  <p style="text-align: center;">M6 X 50MM SCREW</p>	<p>E 22PCS</p>  <p style="text-align: center;">12MM X 13MM BARREL NUT</p>	<p>F 1PC</p>  <p style="text-align: center;">ALLEN KEY</p>
<p>G 4PCS</p>  <p style="text-align: center;">M12 X 80MM WOOD DOWEL</p>	<p>H 10PCS</p>  <p style="text-align: center;">M10 X 30MM WOOD DOWEL</p>	<p>I 32PCS</p>  <p style="text-align: center;">M8 X 32MM WOOD DOWEL</p>
<p>J 24PCS</p>  <p style="text-align: center;">M4 X 30MM SCREW</p>		

NOV090WHT/PNE NOVARO BUNK BED

STEP 1

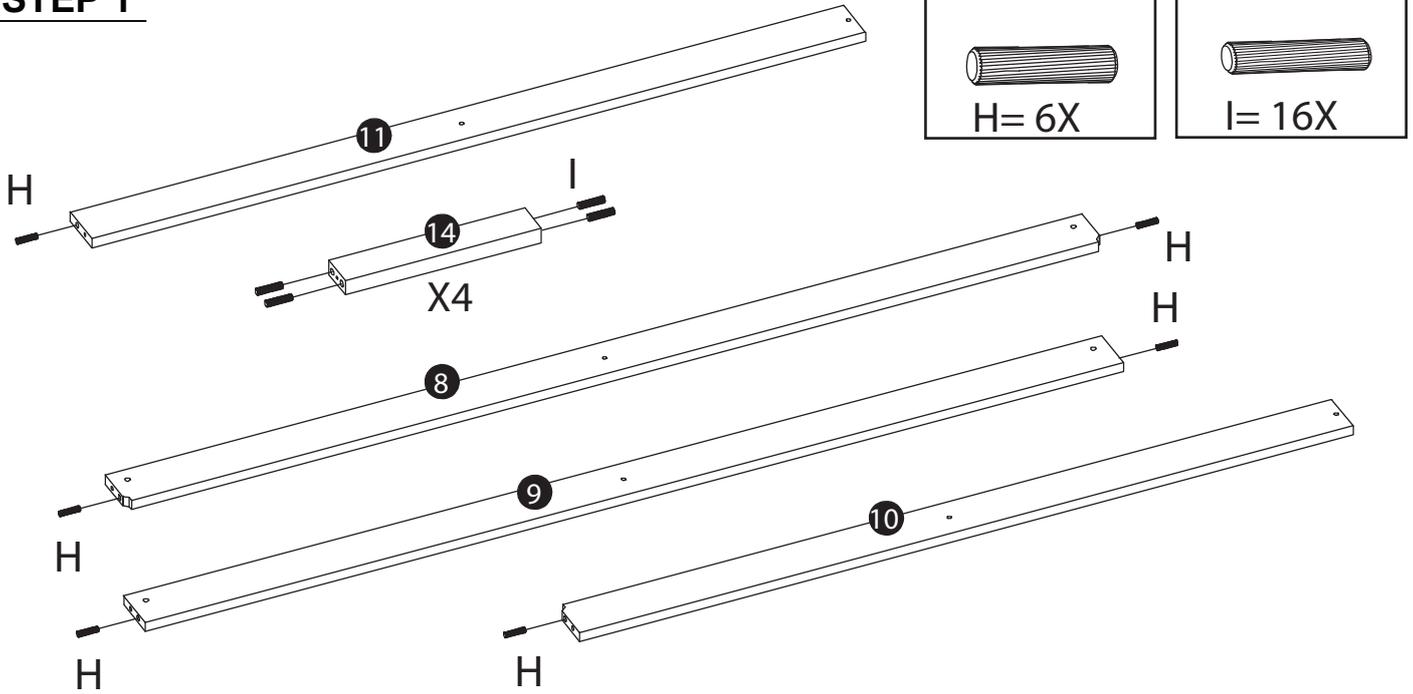


STEP 2

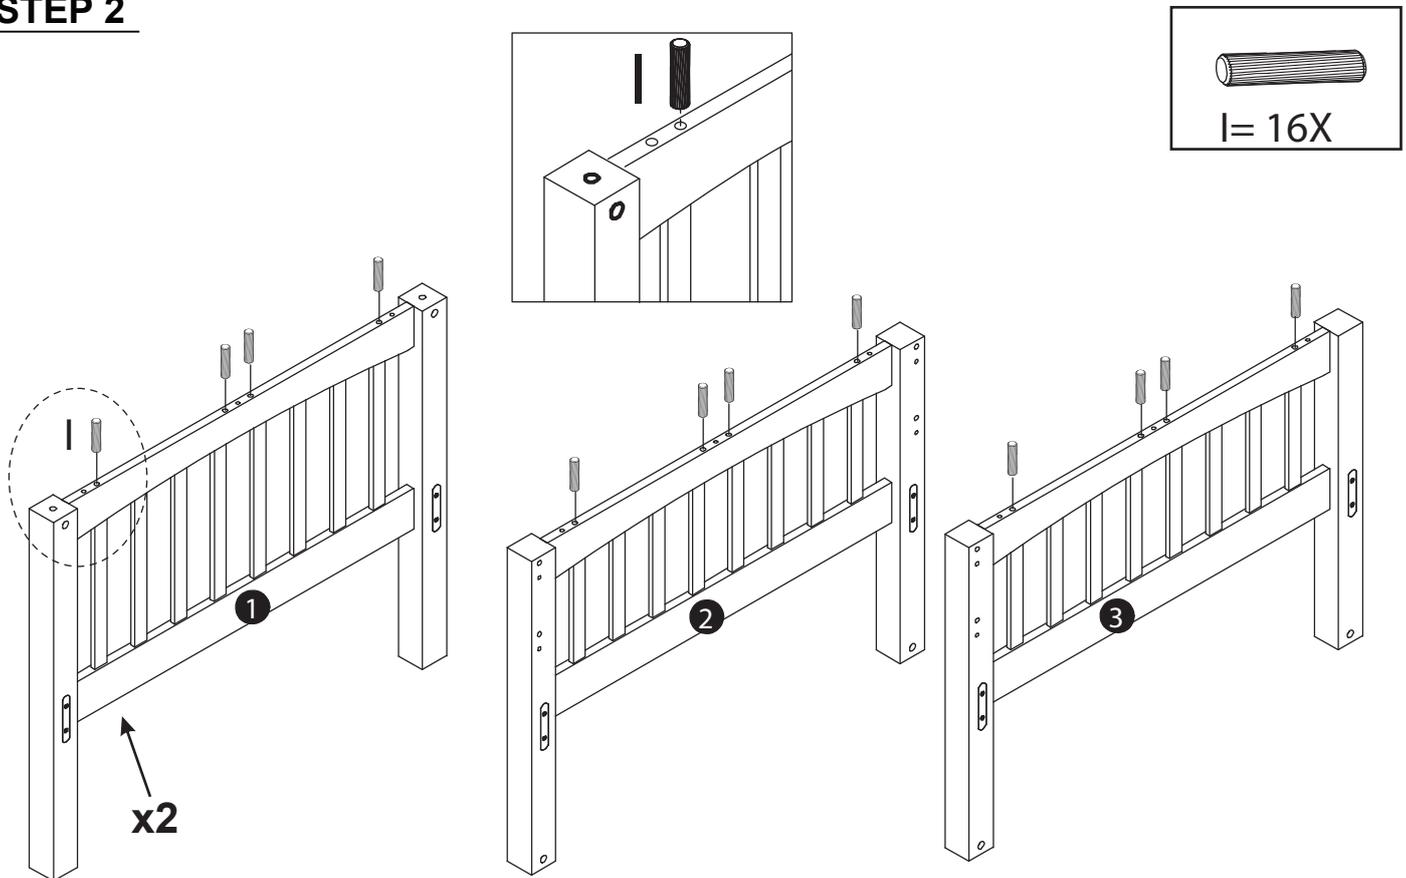


NOV090WHT/PNE NOVARO BUNK BED

STEP 3

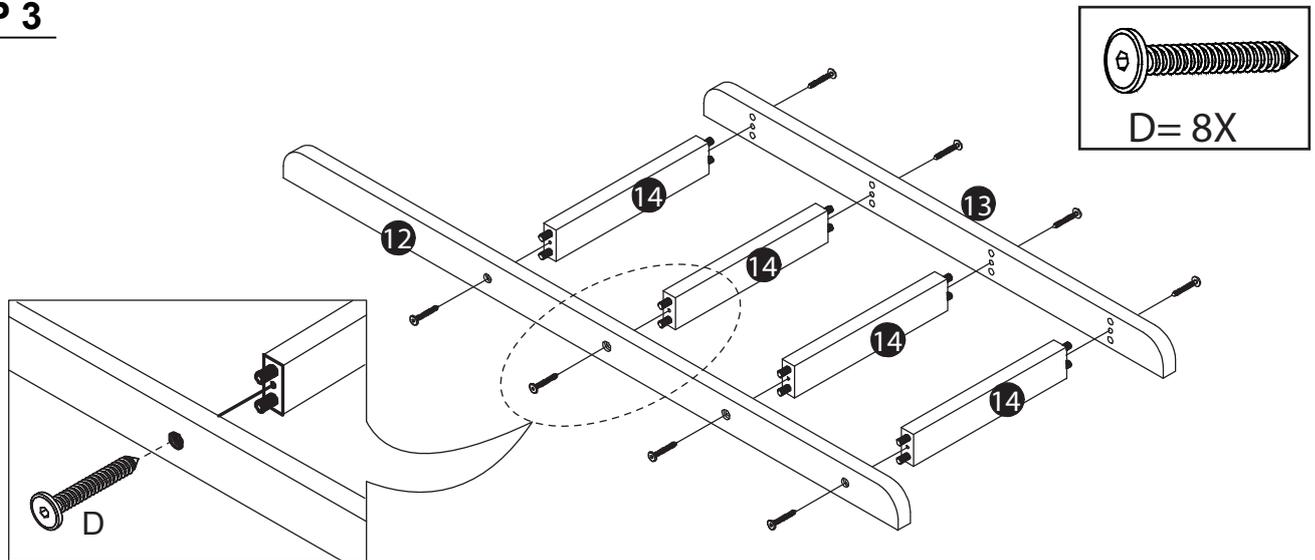


STEP 4

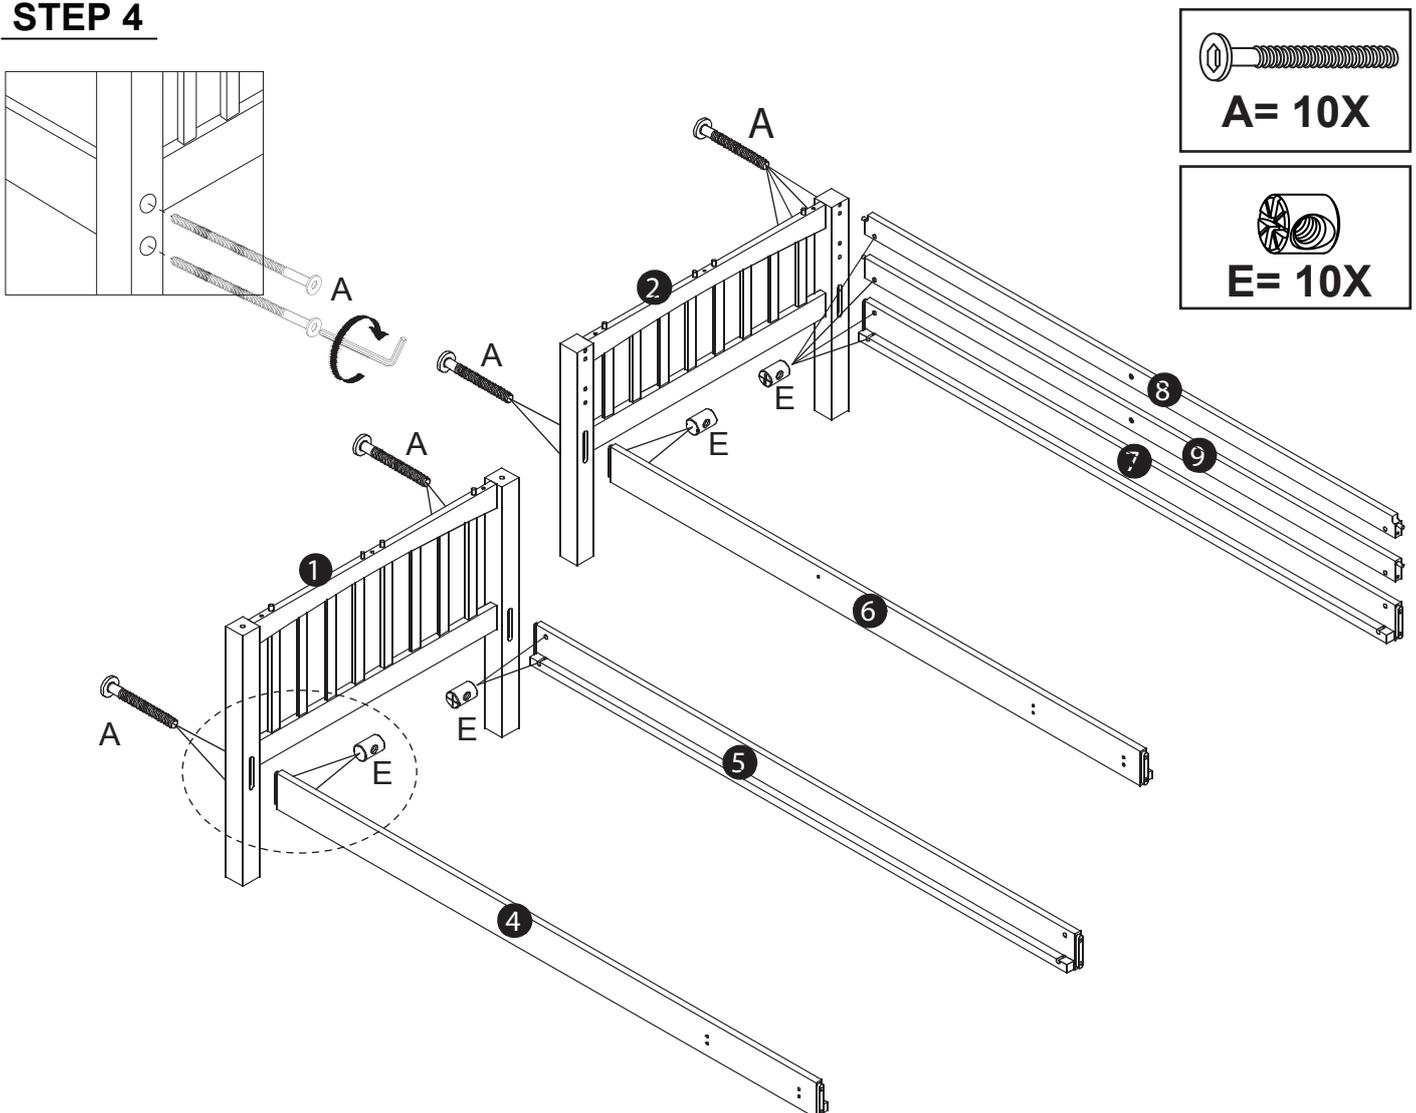


NOV090WHT/PNE NOVARO BUNK BED

STEP 5


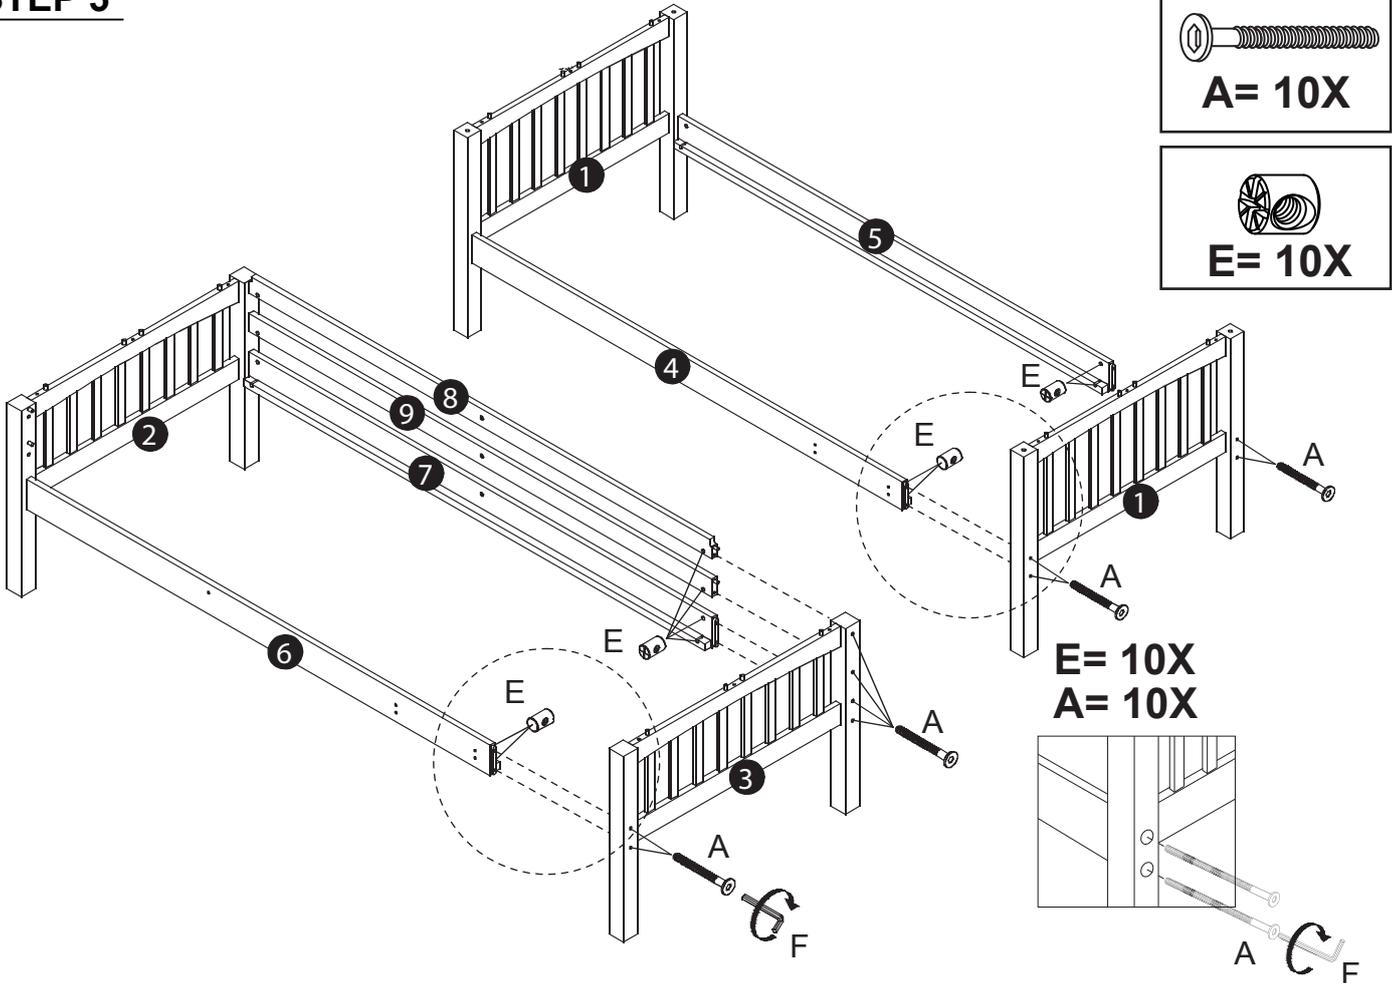


STEP 6

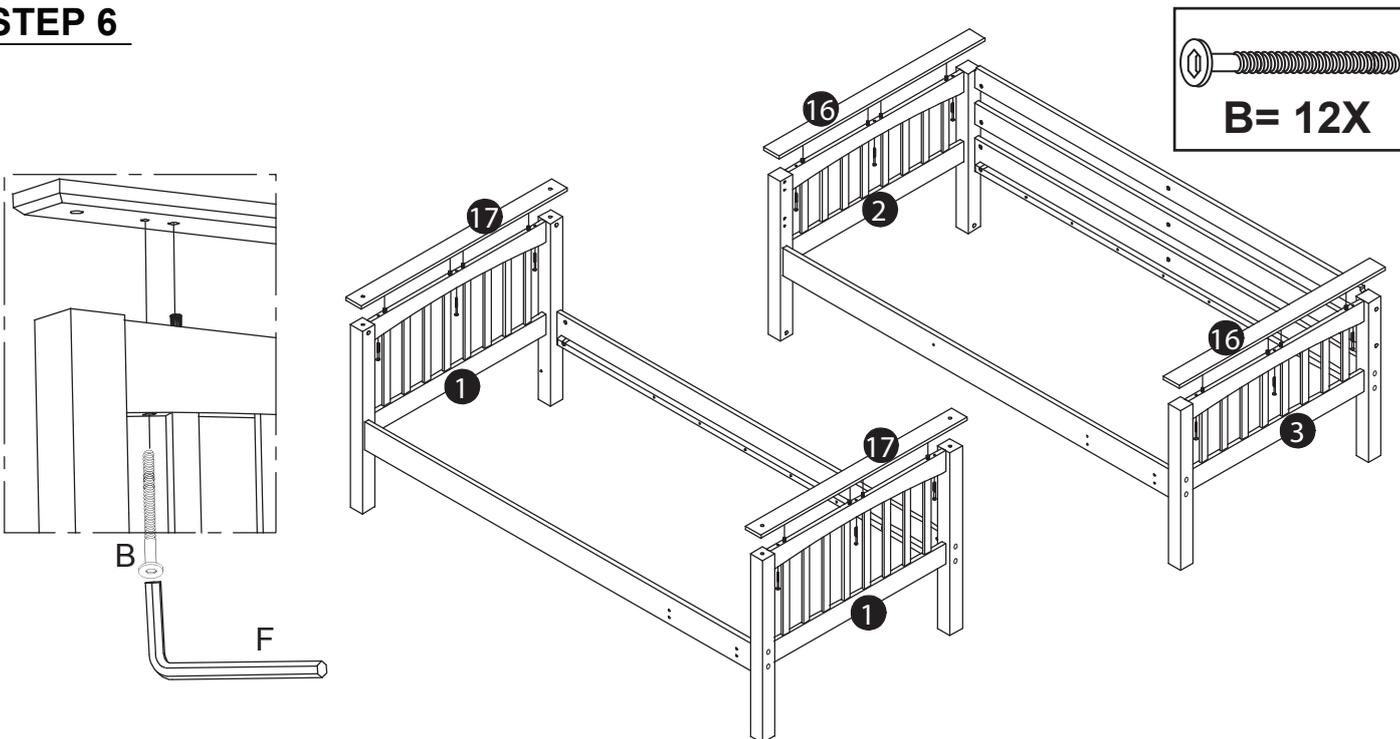


NOV090WHT/PNE NOVARO BUNK BED

STEP 7

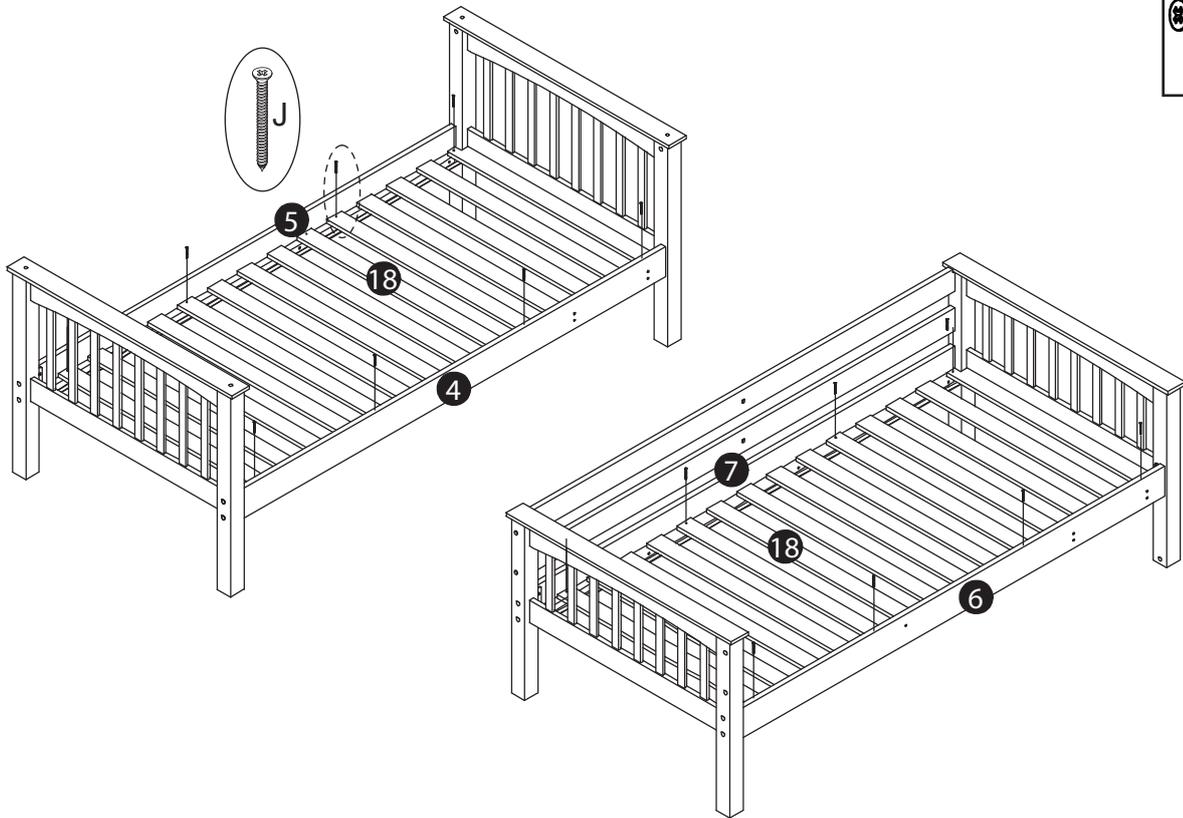



STEP 8

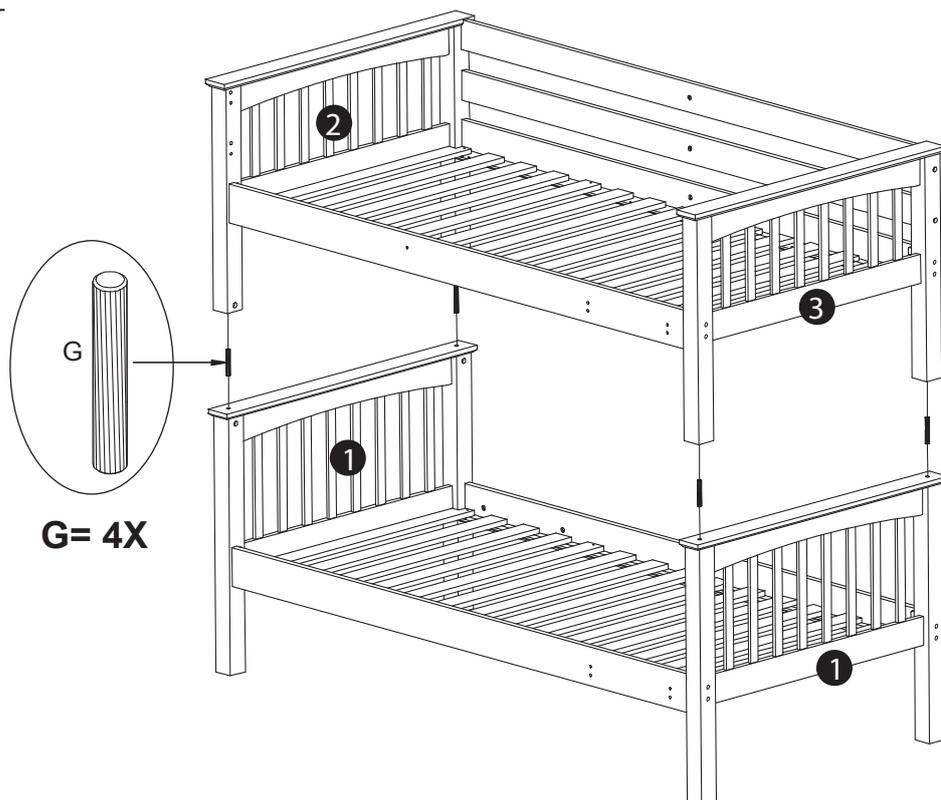



NOV090WHT/PNE

NOVARO BUNK BED

STEP 9

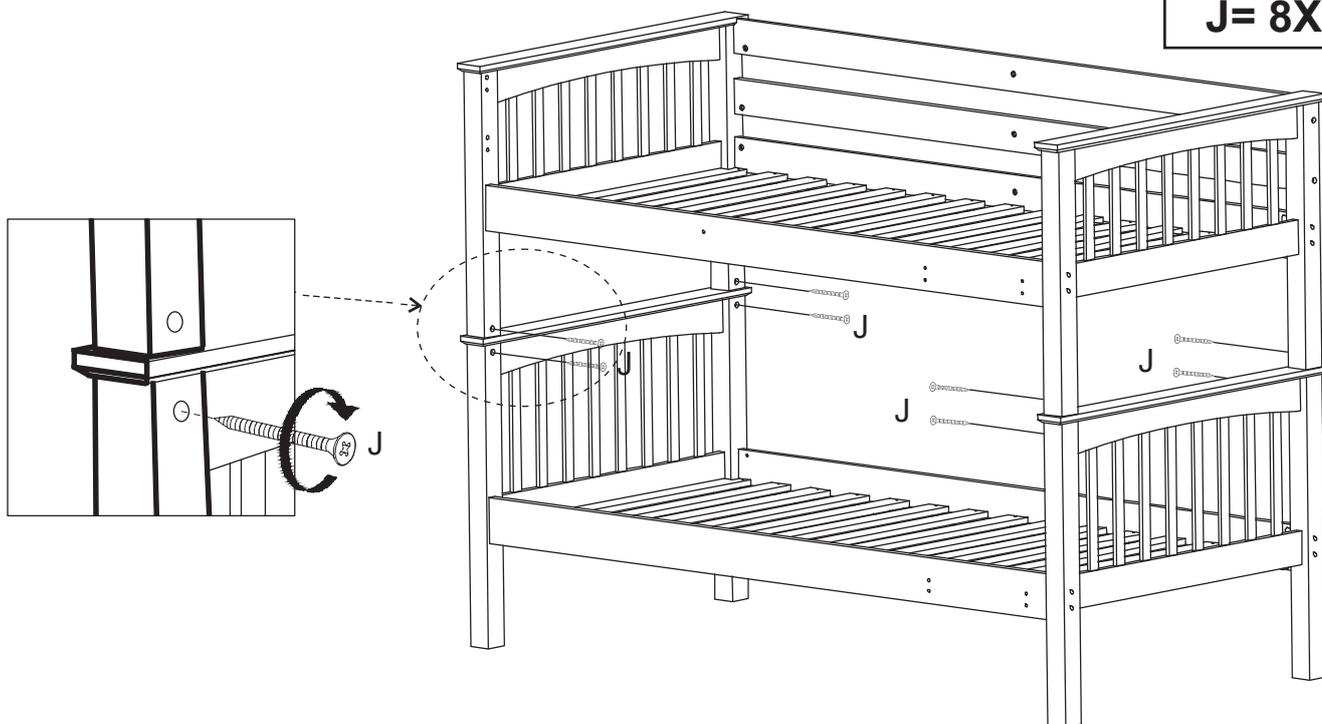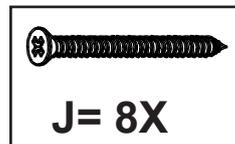


STEP 10

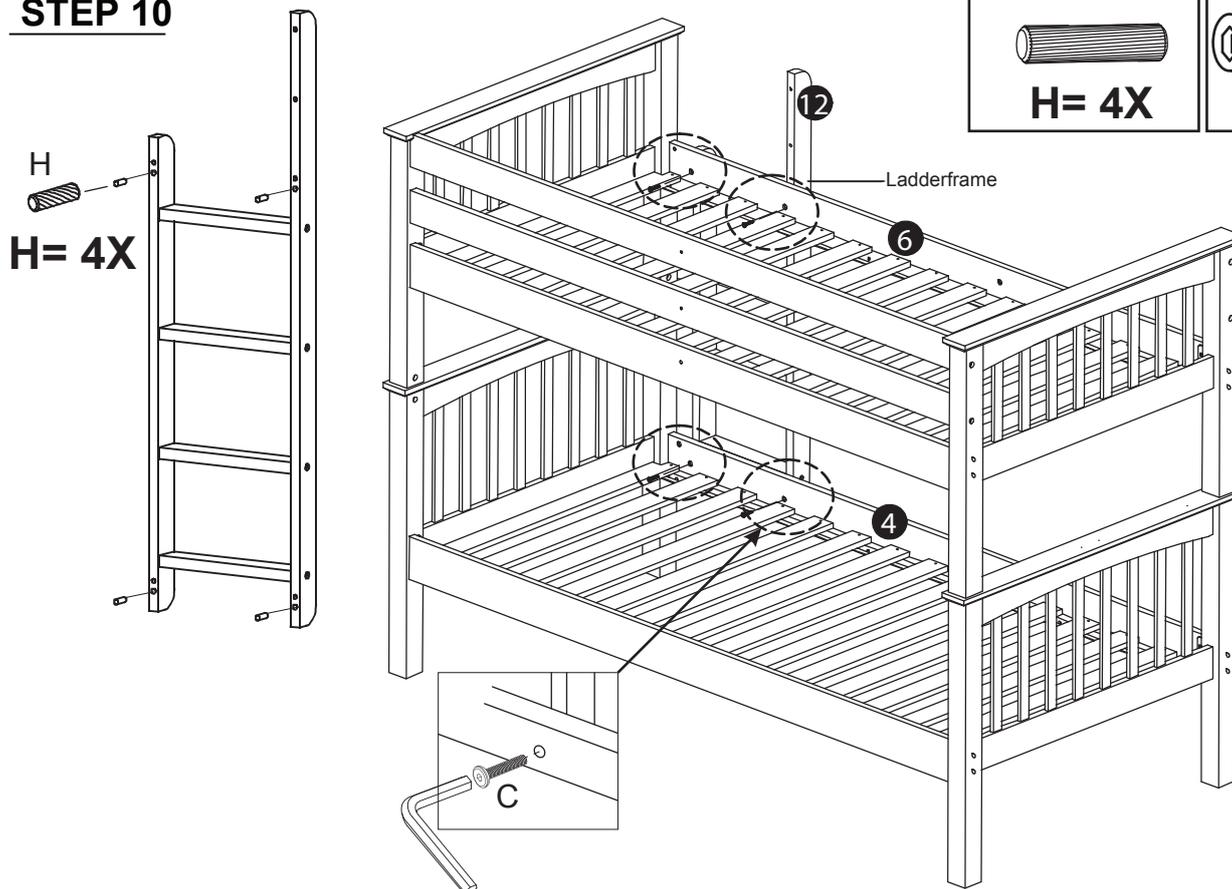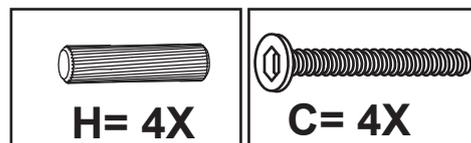

NOV090WHT/PNE NOVARO BUNK BED

STEP 11

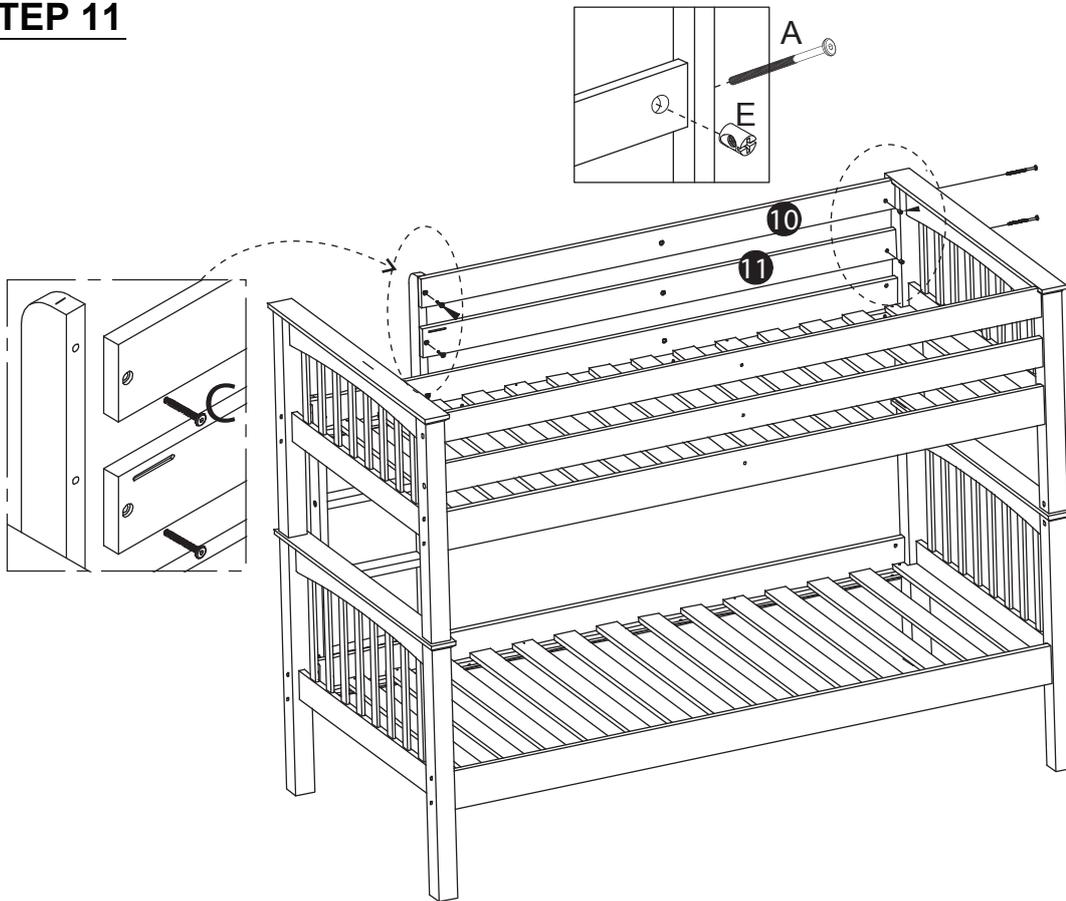

C = 2X




A = 2X



E = 2X

STEP 12

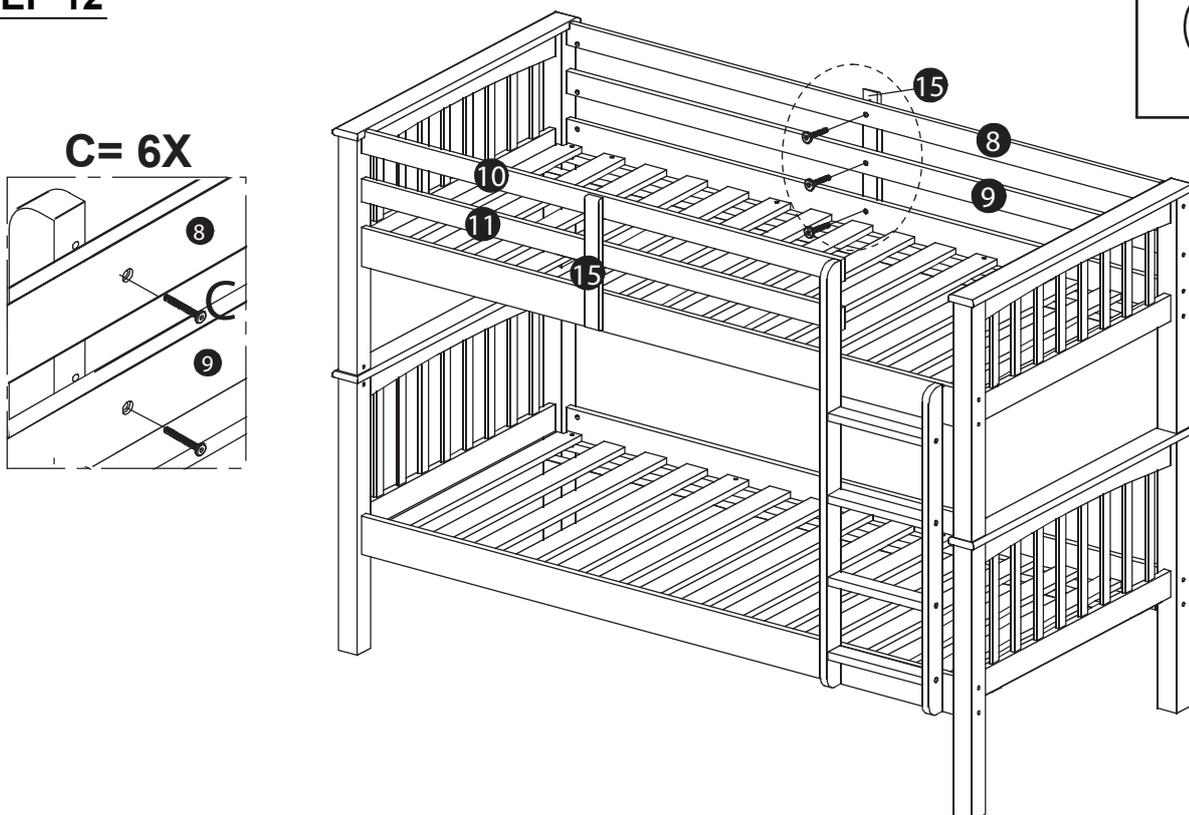

C = 6X

C = 6X

