

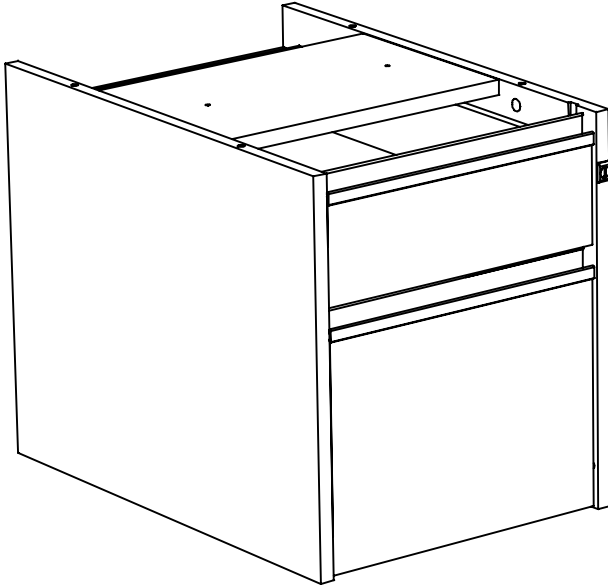
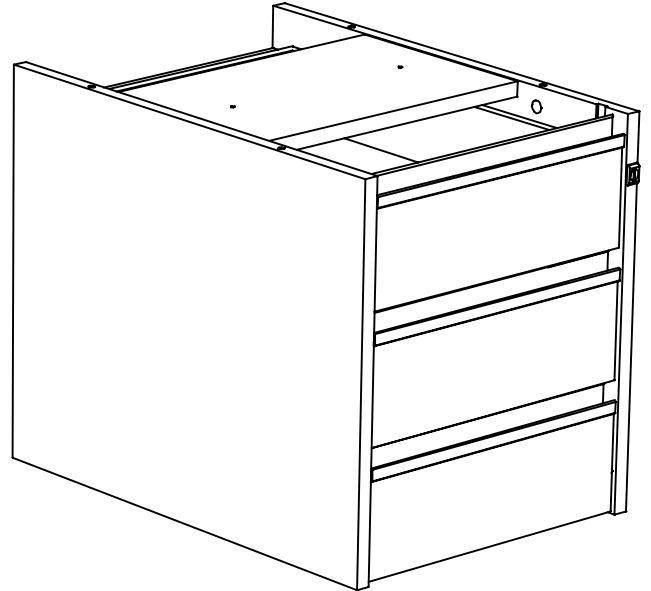
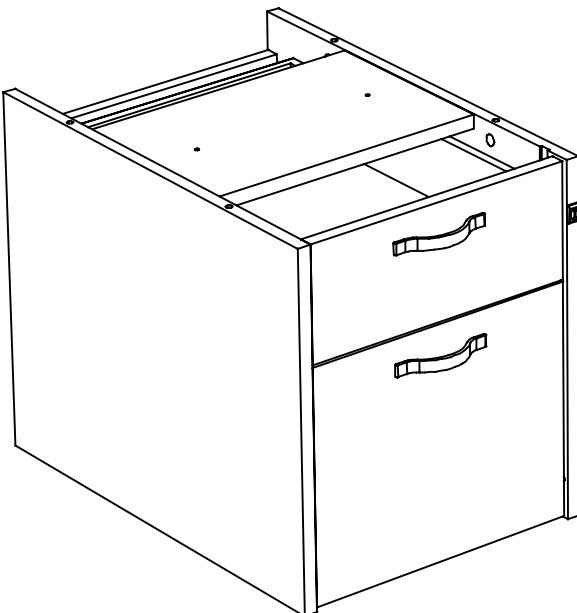

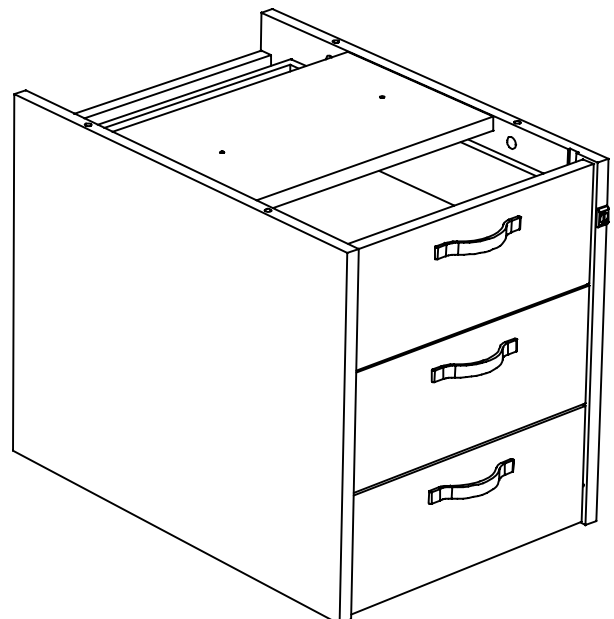
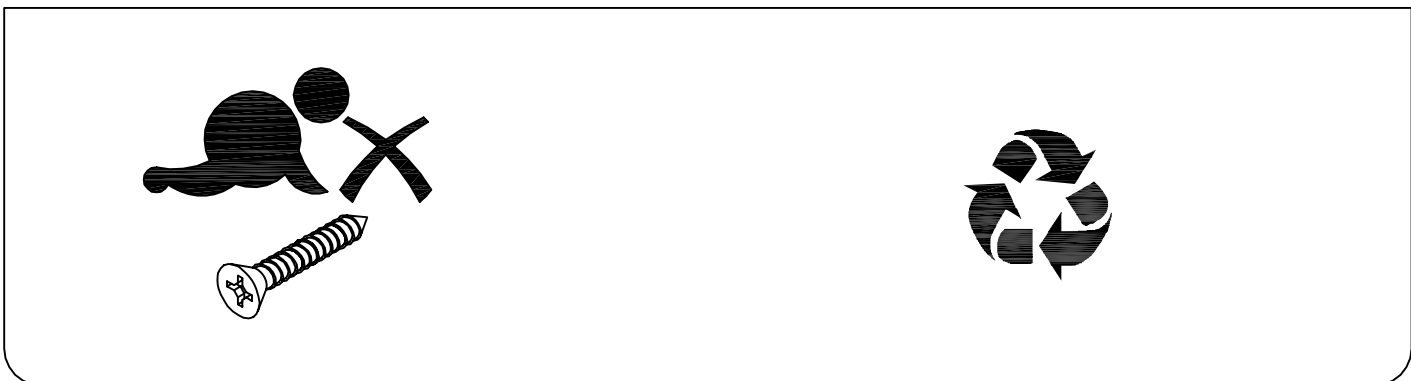
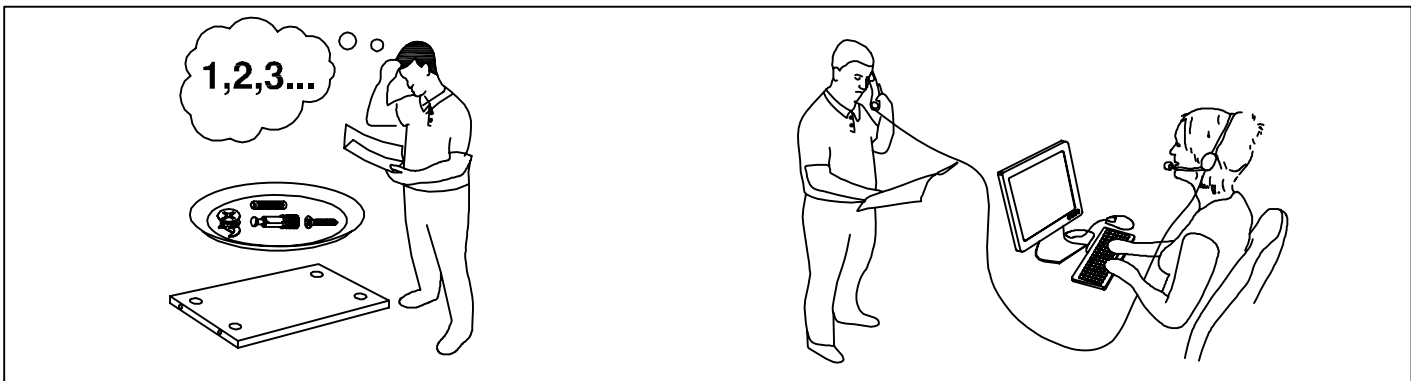
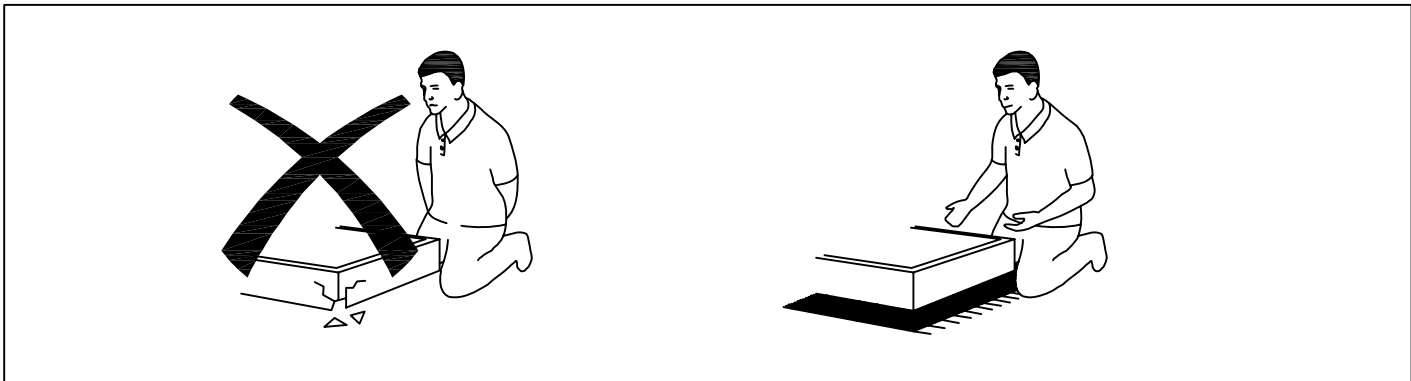


Desk Pedestals





252F**253F****R2F****R3F**

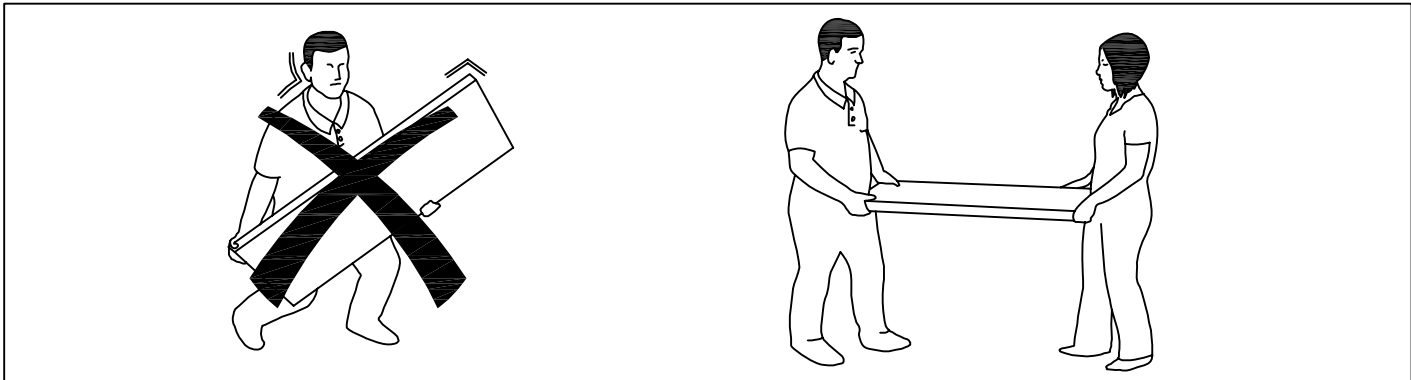

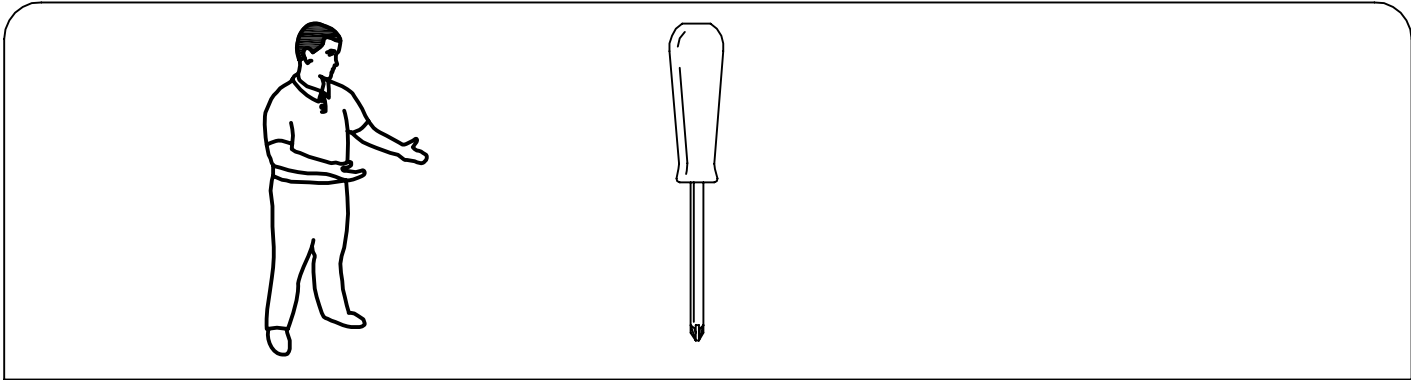

Please check that you have all the fittings

252F


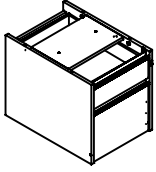


4 Minifix cam 15N
CAM03



4 Quickfix spread bolt
BLT06

4 1 1/4 x 8 screw
SCR12

253F

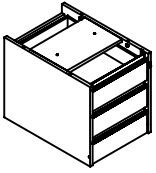

Handle screw M4x22
BLT25








4 Minifix cam 15N
CAM03

4 Quickfix spread bolt
BLT06

4 1 1/4 x 8 screw
SCR12

R2F

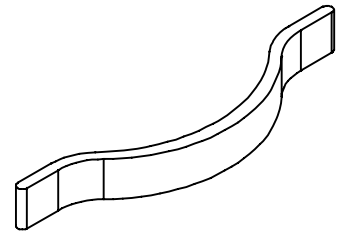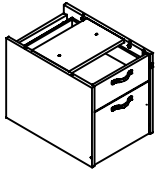

4 Minifix cam 15N
CAM03






4 Quickfix spread bolt
BLT06

4 1 1/4 x 8 screw
SCR12

4 M4x22 COMBI BOLT
SCR25

2 CH/LF (LARGO) HANDLE
HDL09

R3F

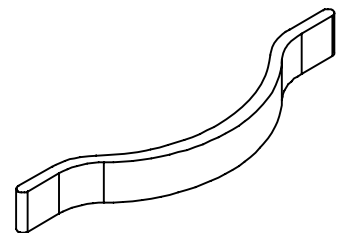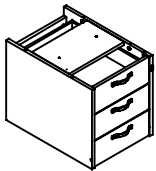

4 Minifix cam 15N
CAM03


4 Quickfix spread bolt
BLT06

4 1 1/4 x 8 screw
SCR12


6 M4x22 COMBI BOLT
SCR25



3 CH/LF (LARGO) HANDLE
HDL09

1



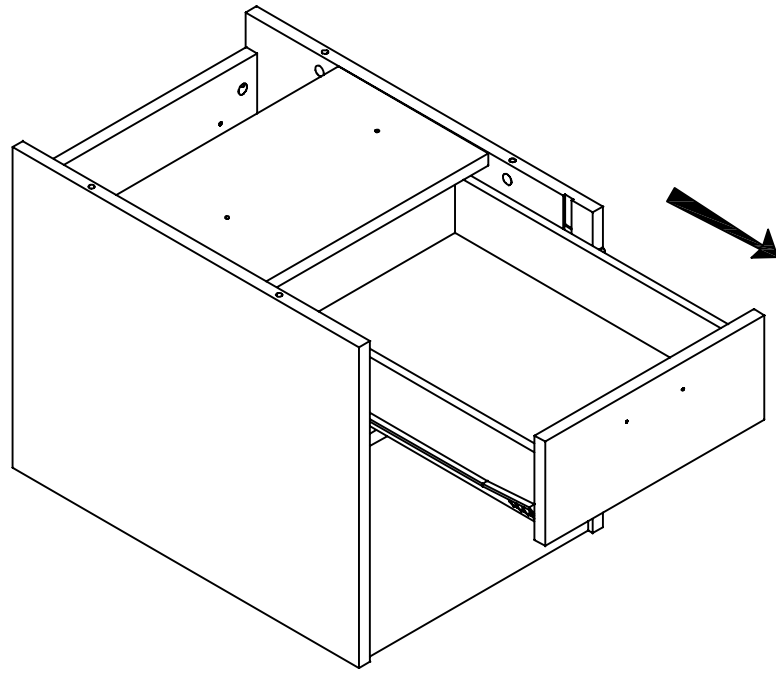


2


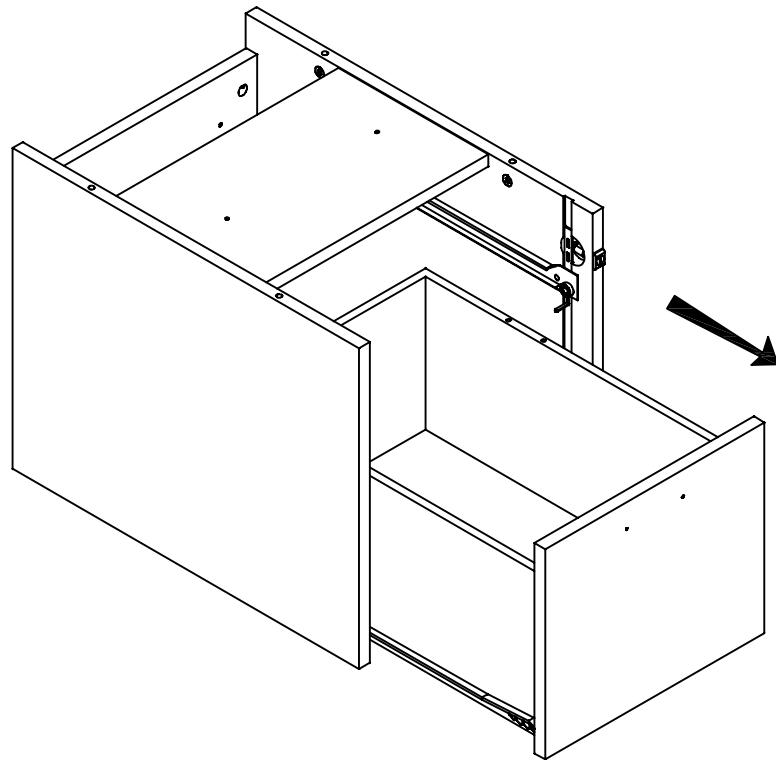


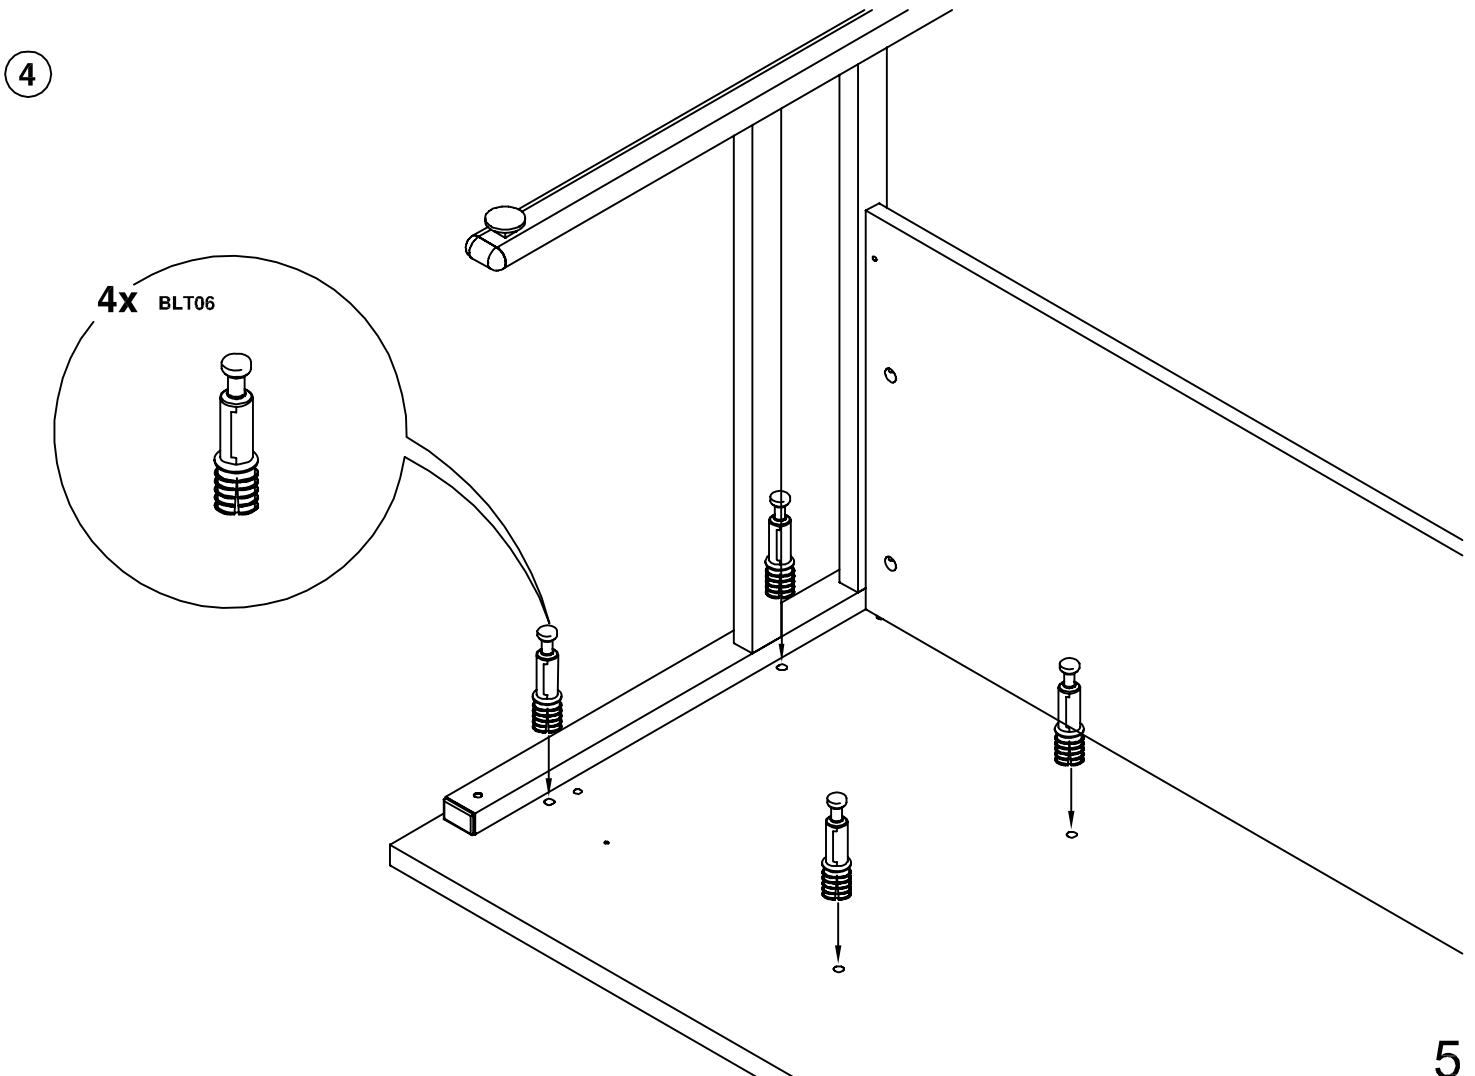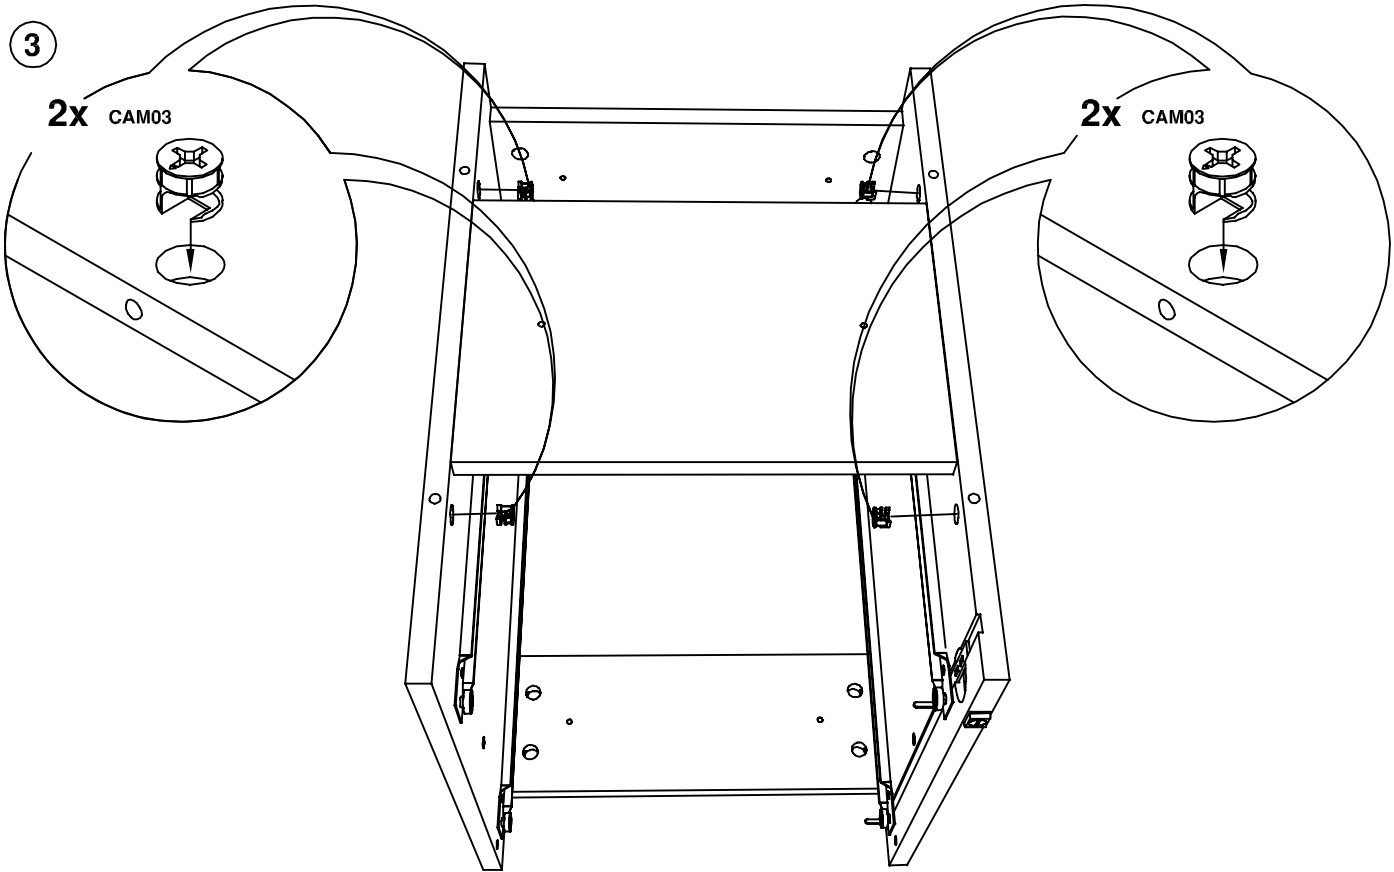

5

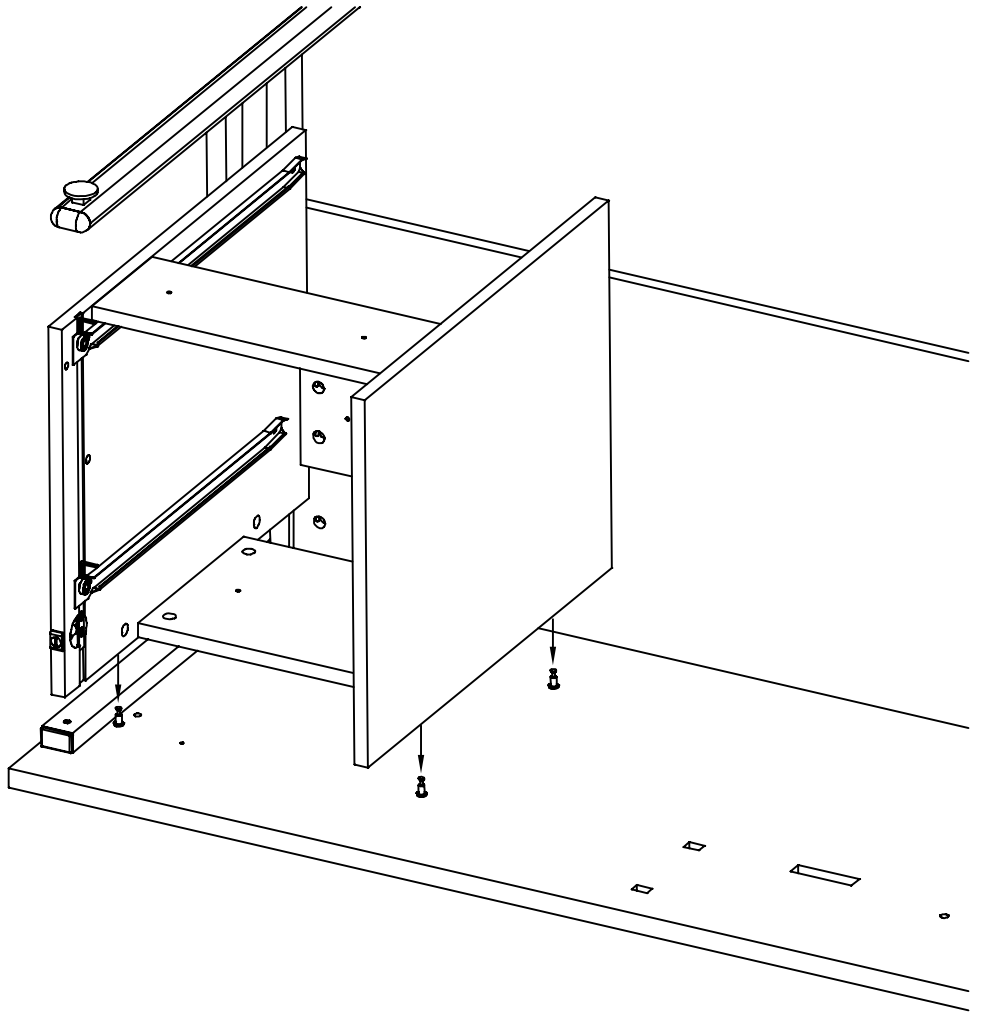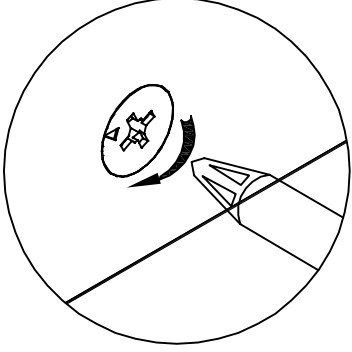
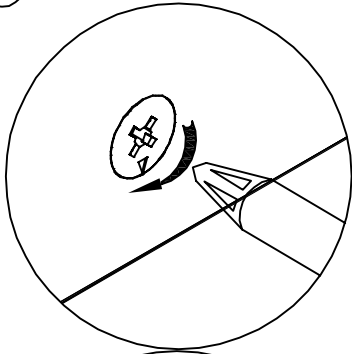


6

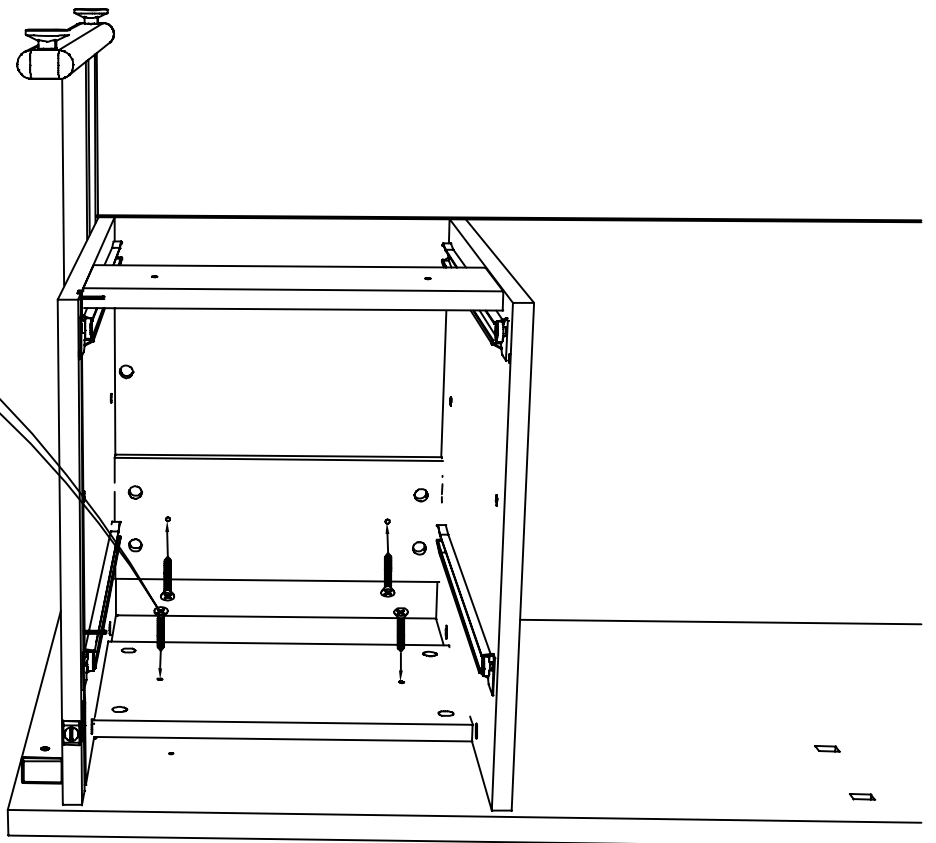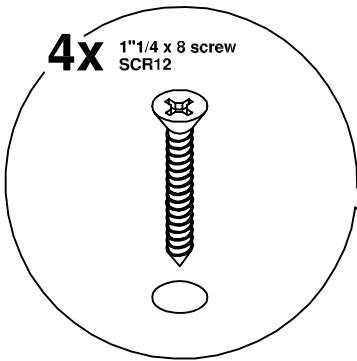




7

2x M4x22 COMBI BOLT
SCR25

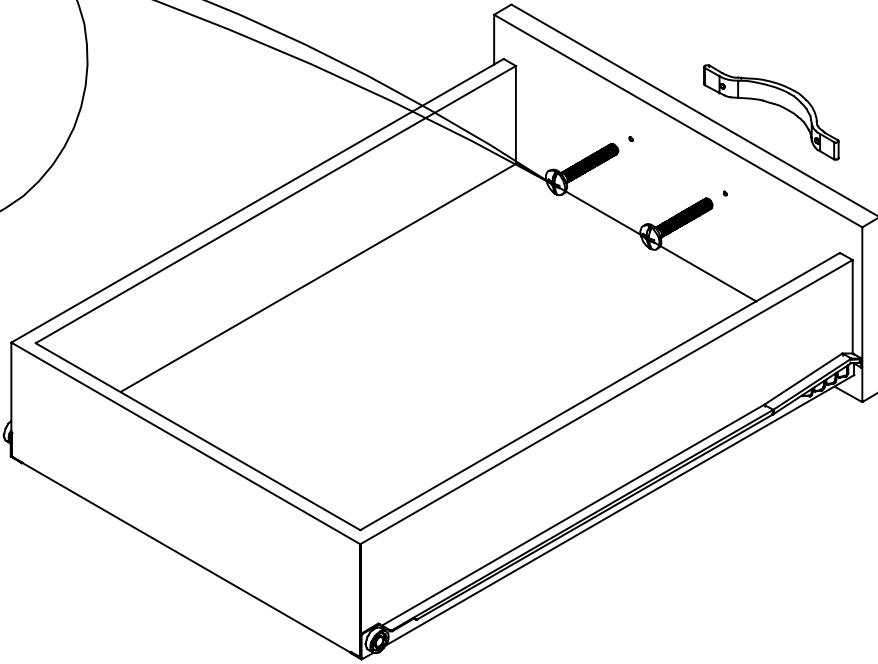


8


2x M4x22 COMBI BOLT
SCR25

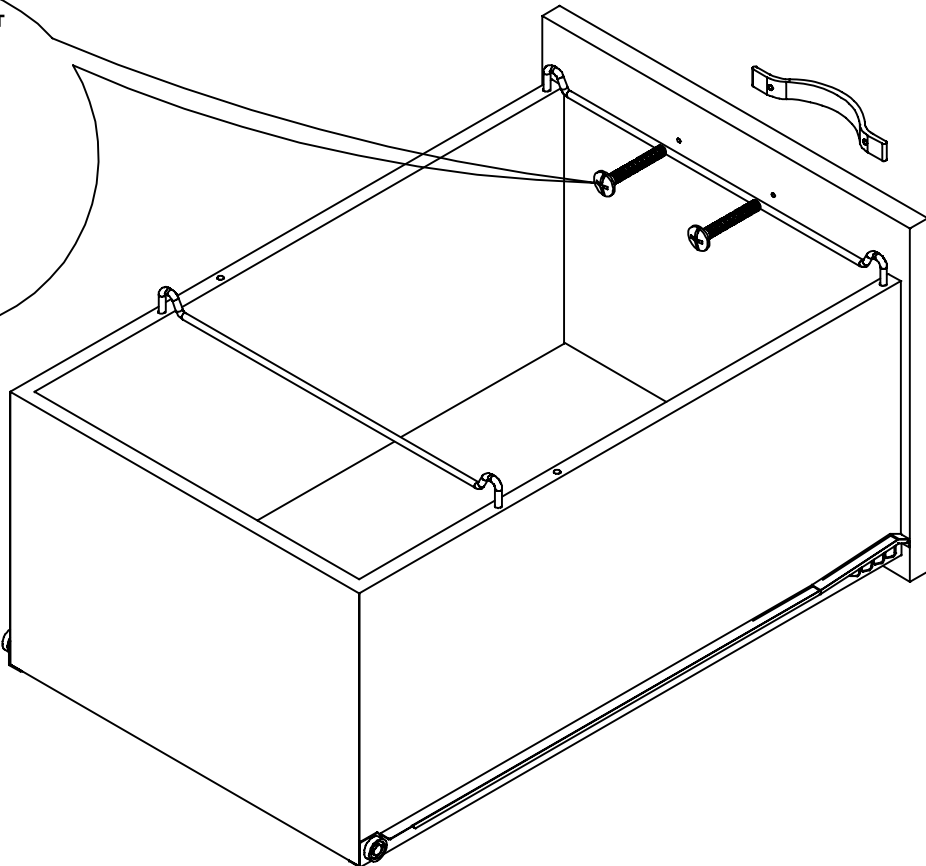

9

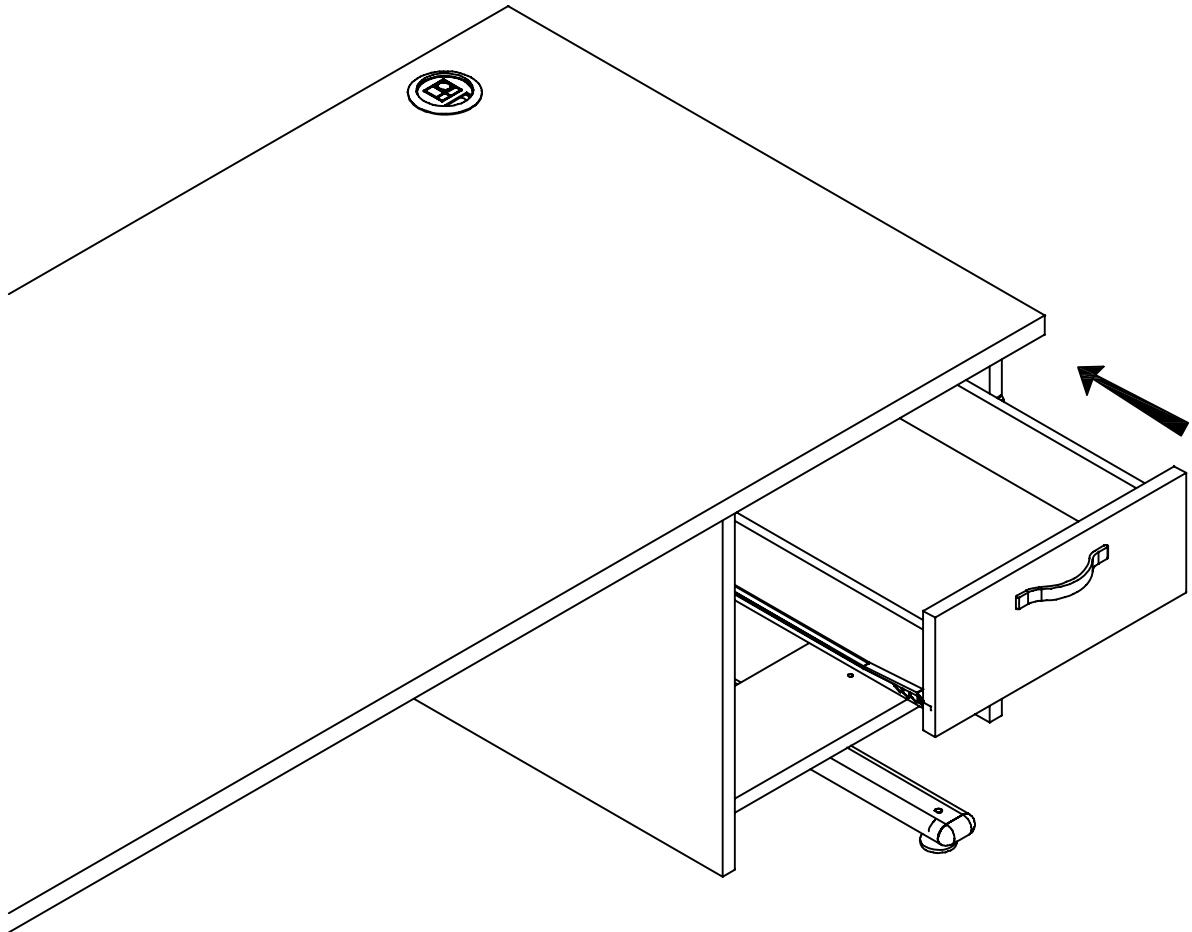

10

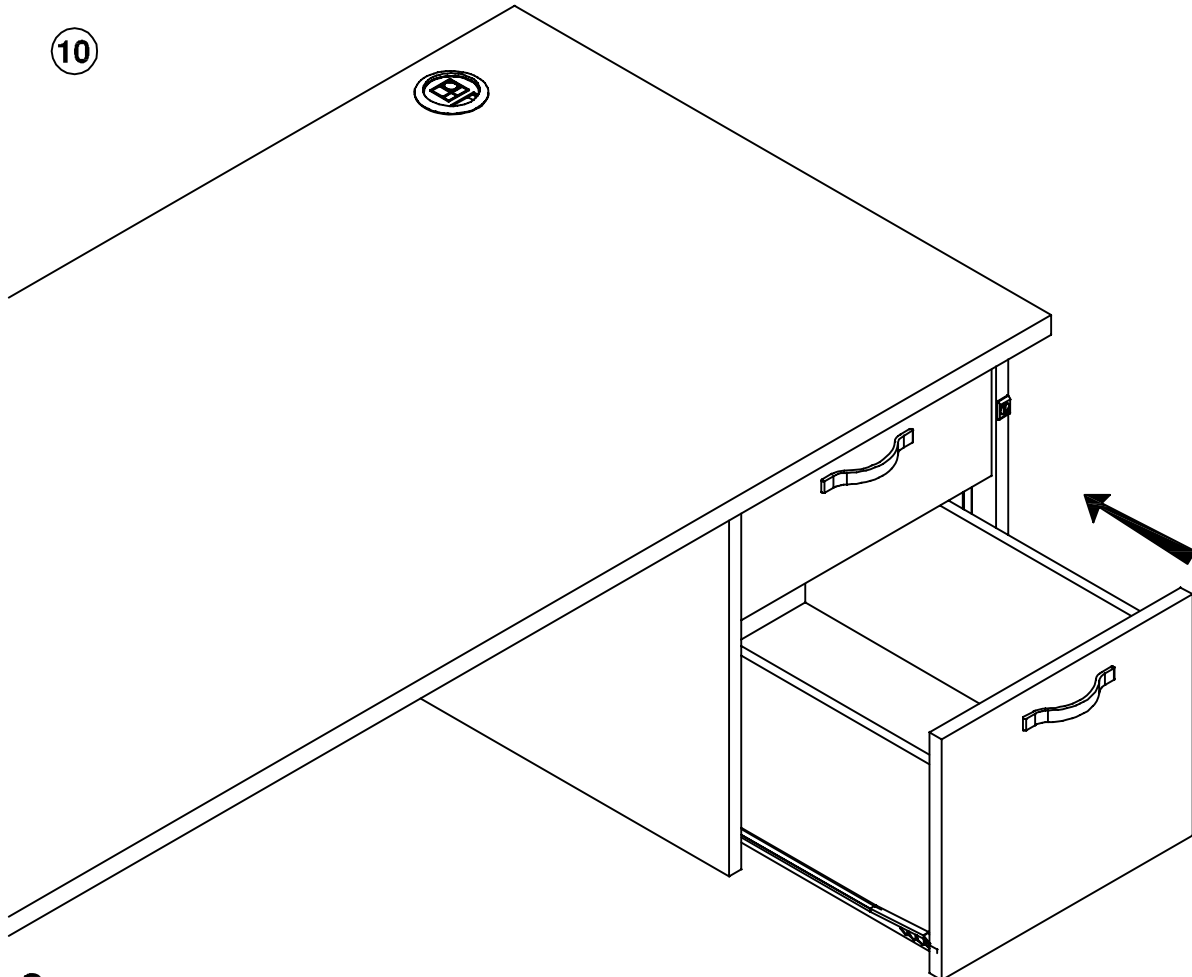

8