


# ASSEMBLY INSTRUCTIONS

## ITEM NO: BO-469

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
2. SCREW THE SOCKET PART (A) INTO THE TUBE(B), TUBE(B) INTO TUBE(C) ,TUBE(C) INTO TUBE(D) AND THEN SCREW THE TUBE (D) INTO THE BASE(E).
3. PUT THE SHADE (F) ONTO THE TOP OF SOCKET PART(A) AND THEN SCREW THE RING (G) INTO THE SOCKET PART(A) AND ADJUST THE SHADE HORIZONTALLY.
4. INSERT THE POLARIZED PLUG INTO THE OUTLET, TURN ON THE SWITCH AND ENJOY YOUR LAMP.

WATTAGE: 3-WAY 150W TYPE A (EX BULB)

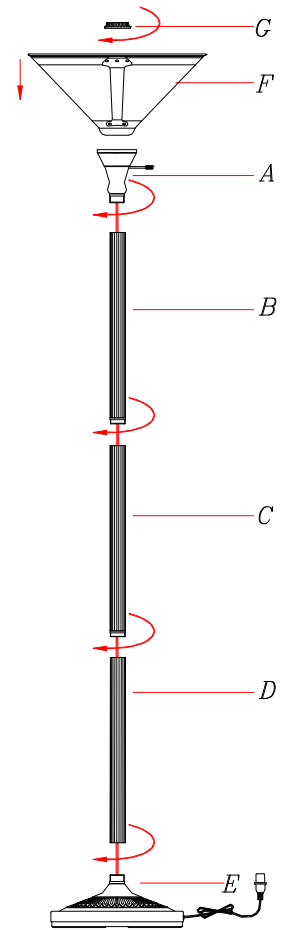

## IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

325188B