


ASSEMBLY INSTRUCTIONS

ITEM NO: BO-234FL-RU

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER SKETCH.
2. SCREW THE TUBE(B) ,TUBE(C) ,TUBE(D),SOCKET SECTION(E) INTO THE BASE (A) IN TURN.
3. SCREW THE STEM (F) INTO SOCKET SECTION(E).
4. PUT SHADE (NOT INCLUDED) ONTO THE STEM(F) AND THEN SCREW THE FINIAL (G) TO TIGHTEN .
5. INSERT THE POLARIZED PLUG INTO OUTLET, TURN ON THE SWITCH AND ENJOY YOUR LAMP.

WATTAGE:2*60W TYPE A (EX BULB)

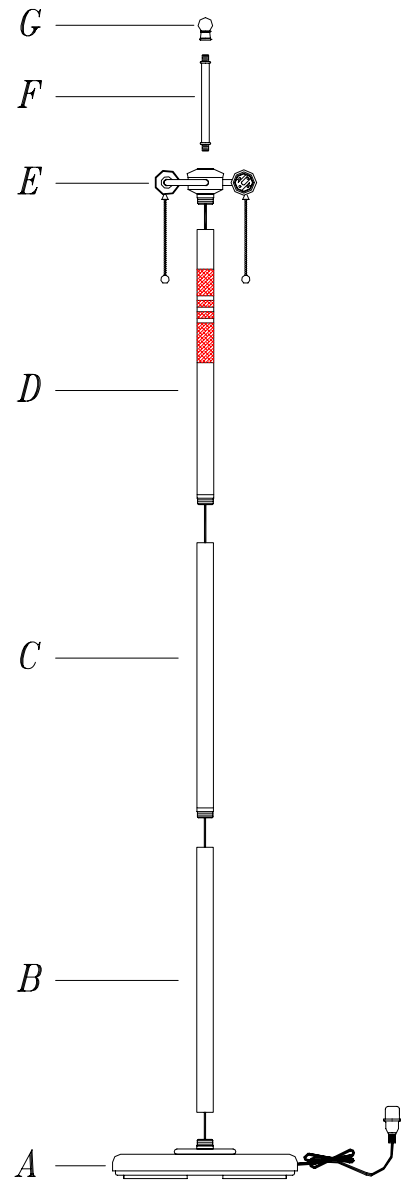

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

325373B-1