
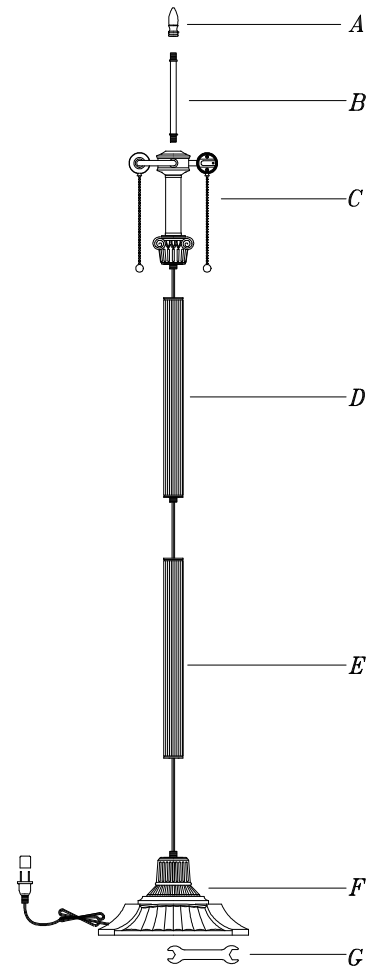


ASSEMBLY INSTRUCTIONS:

ITEM NO.: BO-433-RU

1. Carefully unpack and lay out the parts as shown in illustration.
2. Screw tube(E) to base (F),screw tube (D) to tube (E), screw socket section (C) to tube (D), pull cord.
3. Make sure socket section (C) in the proper position, refer to image (H). if not, to use wrench (G) to unfasten nut from under base (F), locate socket section (C) to proper position, then tighten the nut again with wrench (G).
4. Screw tube (B) to socket section (C).
5. Put shade on tube (B), tighten it with finial (A)..

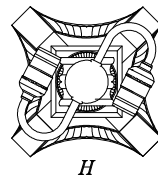

Your lamp now is ready to enjoy

Use 2x60 Wattage (Maximum) type A bulb (Bulb not included)

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

326987B