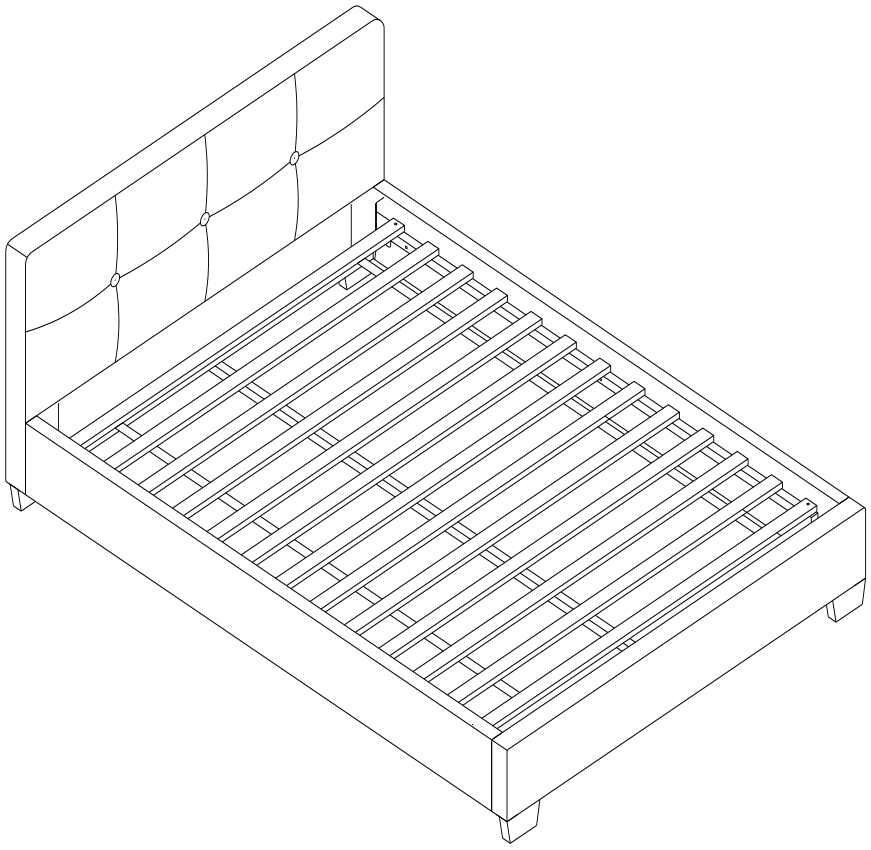
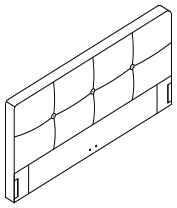
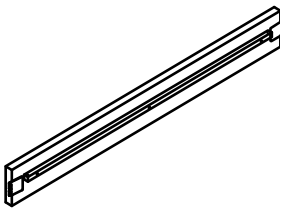
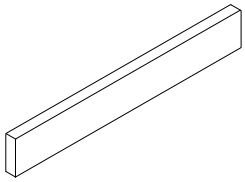
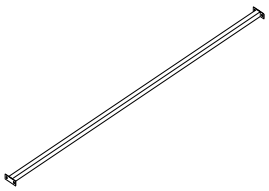
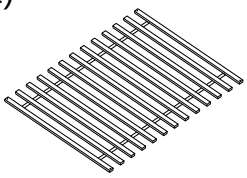
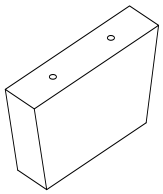

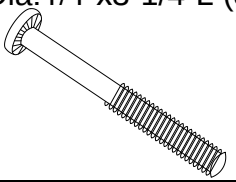
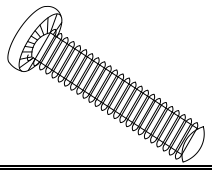




King Upholstered Bed 3

Before beginning assembly, separate all parts and carefully study the parts diagrams below. Review all parts and hardware before disposing of any packaging. You may receive extra hardware with your unit. Call Customer Service for missing hardware.

Parts List	
A: Headboard (1) 	B: Rail (2) 
C: Footboard (1) 	D: Support Rail (1) 
E: Support Slats (1) 	F: Leg (4) 
G: Support Leg (2) 	1: Allen Wrench (1) 
2: Long Bolt Dia.1/4”x3-1/4”L (8) 	3: Short Bolt Dia. 1/4”x1-1/4”L (8) 
4: Flat Washer (12) 	5: Spring Washer (12) 

King Upholstered Bed 3

Assembly Instructions

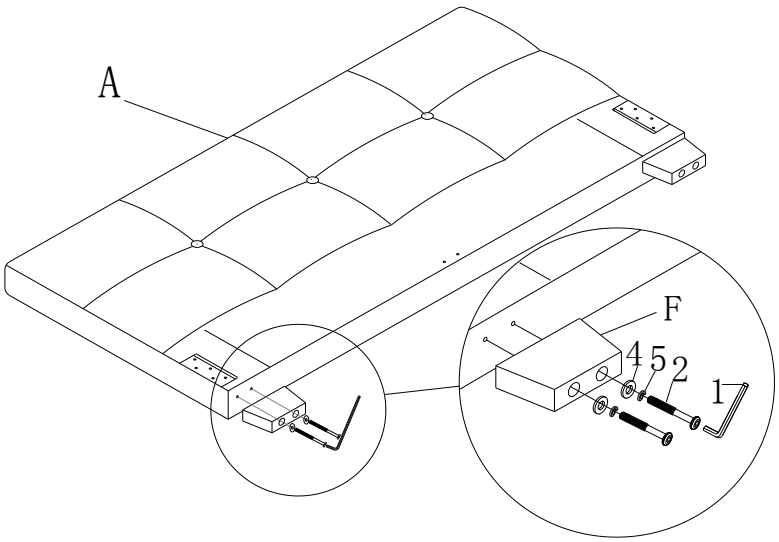


Figure 1

Step 1

Connect Legs (F) to Headboard (A) using Bolts (2), Spring Washers (5) and Flat Washers (4) as shown in Figure 1.

Tighten Bolts (2) using Allen Wrench (1).

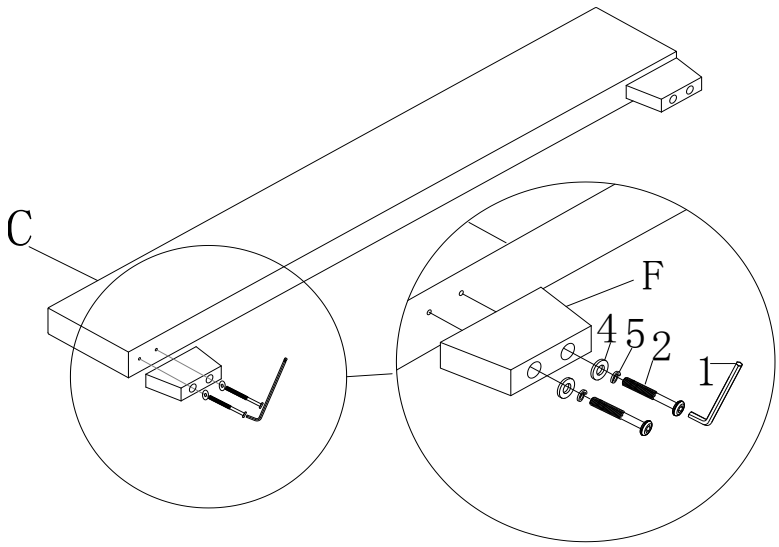


Figure 2

Step 2

Connect Legs (F) to Footboard (C) using Bolts (2), Spring Washers (5) and Flat Washers (4) as shown in Figure 2.

Tighten Bolts (2) using Allen Wrench (1).

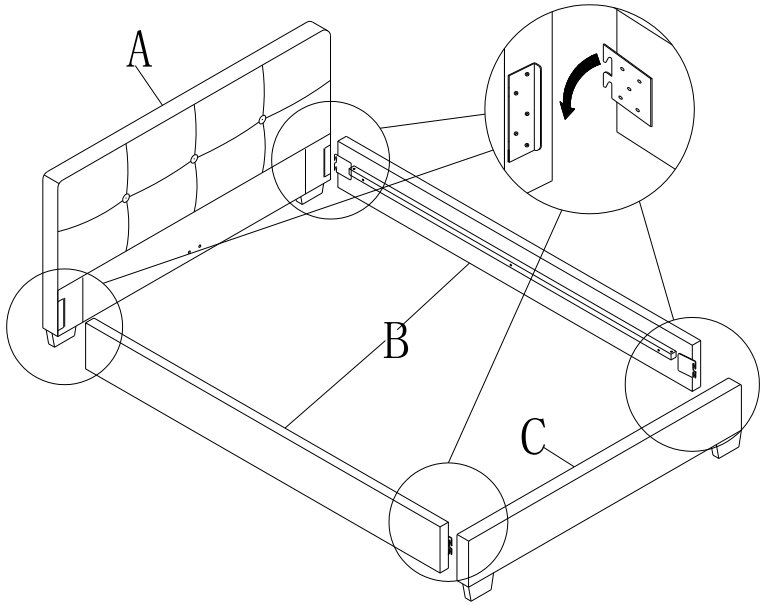


Figure 3

Step 3

Attach Rails (B) to connect Headboard (A) and Footboard (C) as shown in Figure 3.

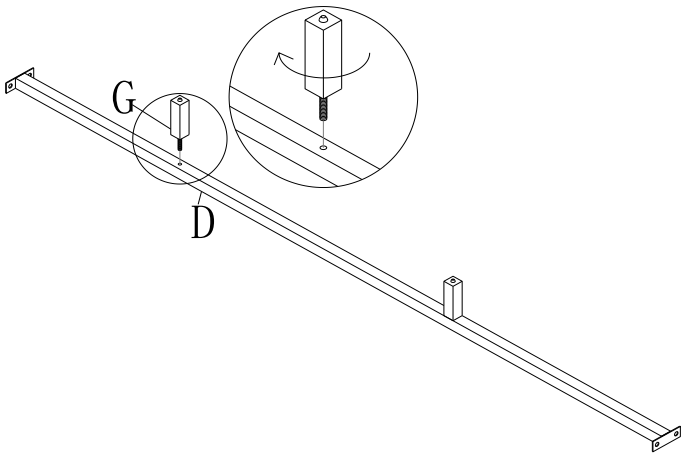


Figure 4

Step 4

Attach Support Legs (G) to Support Rail (D) by inserting bolts of Legs (G) into predrilled holes. Rotate Support Legs (G) clockwise until tight.

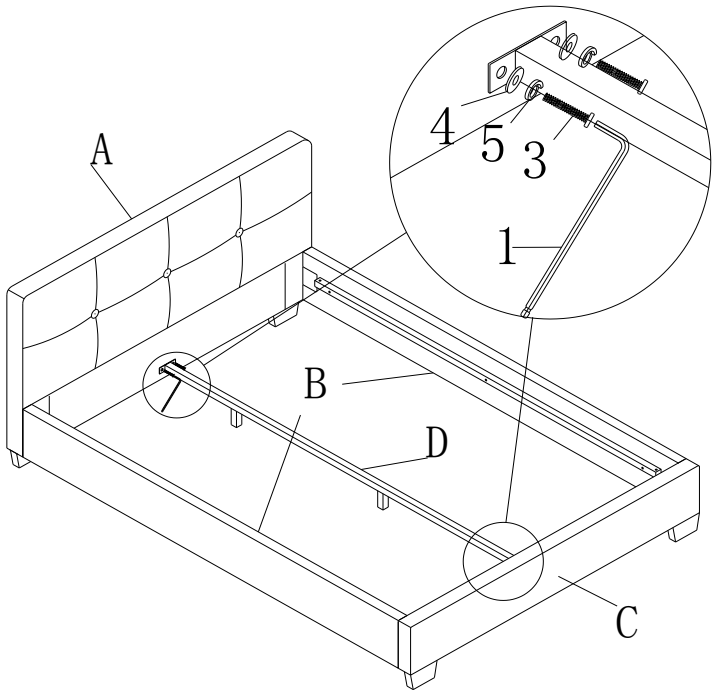


Figure 5

Step 5

Use Bolts (3), Spring Washers (4) and Flat Washers (5) to connect Support Rail (D) to Headboard (A) and Footboard (C) as shown in Figure 5.

Tighten Bolts (3) using Allen Wrench (1).

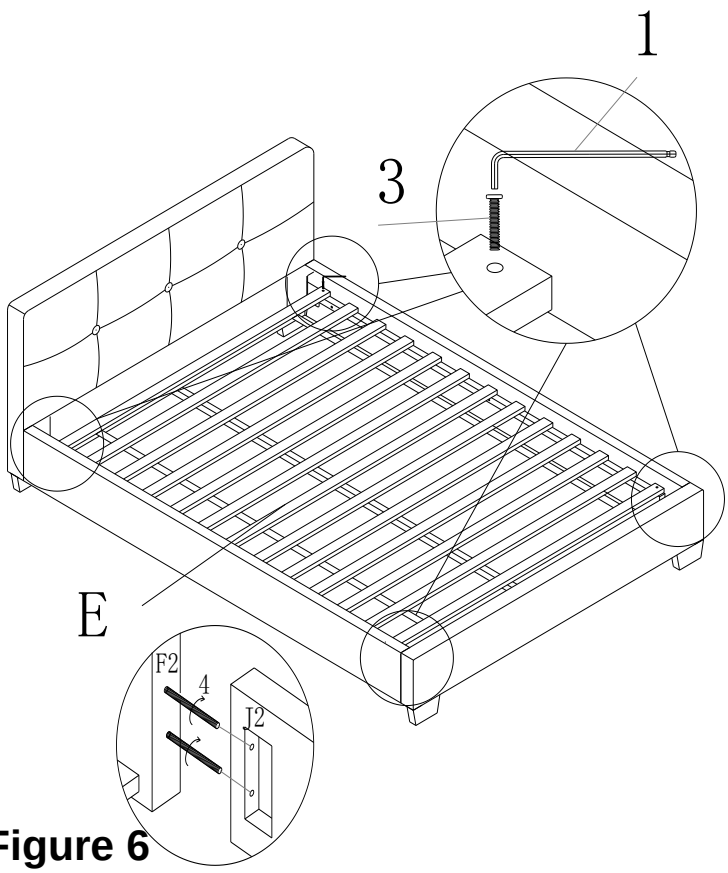


Figure 6

Step 6

Put the Support Slats (E) onto the bed frame.

Use Bolts (3) to connect the Support Slats (E) to Rails (B).

Tighten Bolts (3) using Allen Wrench (1).

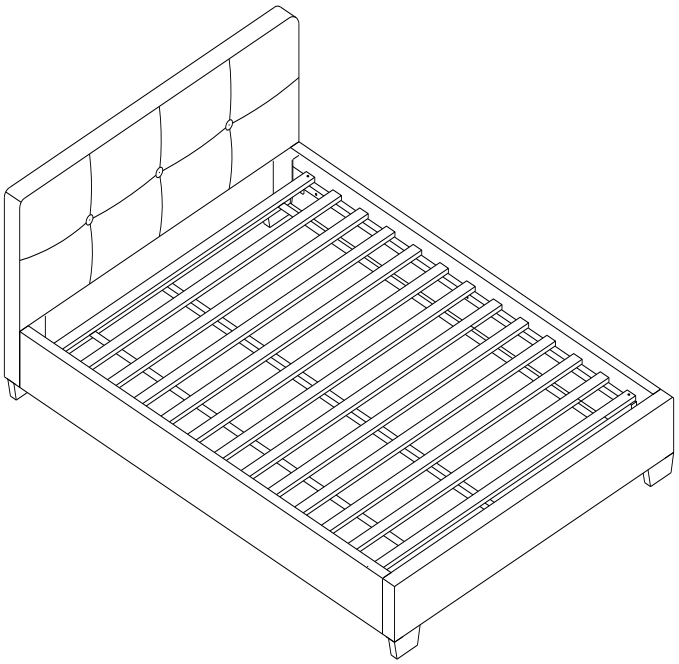


Figure 7

Step 7

Now your King Upholstered Bed 3 is ready to use!