

Model: CB3080

Drain Installation Guide

For Sinks with overflow above counter

Step 1

- Position countertop opening to ensure clearance between the lavatory, faucet, and backsplash
- Cut counter top opening
- Cut-out max: 16"W x 14"H
- Set sink and seal with silicone or caulking

Step 2

See Figure 1.

Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop.

*There may be a small beveled rubber washer packaged with your drain, please discard this and use plumbers' putty instead.

Step 3

See Figure 2.

From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty.

Step 4

Attach p-trap to tailpiece.

1

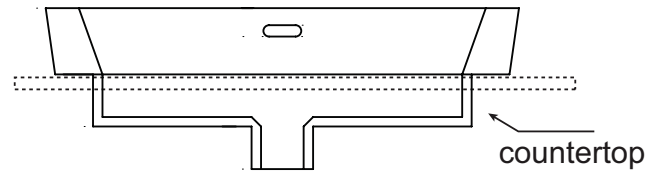


Figure 1.

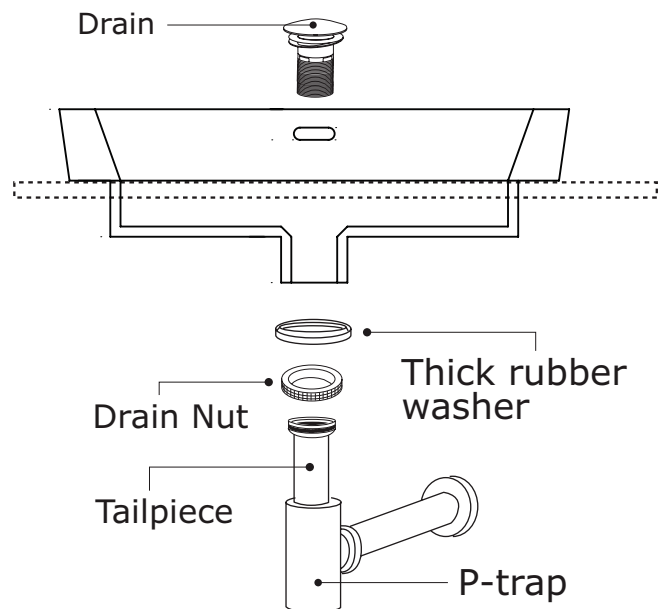


Figure 2. (DRAIN Model: D8002)

