

Installation Instructions

Glass Channel Wet Fix - Surface Channel Concealed Screws for 10mm Glass

Installation Instructions

Important Information

Please read these instructions carefully before starting installation and keep for future reference. Remove all packaging and check the product for missing parts or damage before starting installation. When drilling or fixing into walls or floor it is essential that you check for pipes or wires before commencing.

Certain spare parts and additional components are available if necessary and these can be obtained by calling your supplier.

When you are ready to start, make sure that you have the right tools to hand and that the installation area is clean and dry.

Note: To prevent leaks, silicone must be applied on the outside of the shower and not on the inside. Save this manual for future reference.

Safety Requirements



installation





Safety Goggles

This is a glass product, therefore gloves and safety goggles should be worn during installation. We recommend that fitting should be carried out by two people.

Tools Required (Not supplied)



Electric Drill



7mm & 5.5mm Drill Bits

Measuring Tape



Knife



Silicone



Hammer



Pencil








PH3 & P72 Screwdriver

1

Parts Supplied

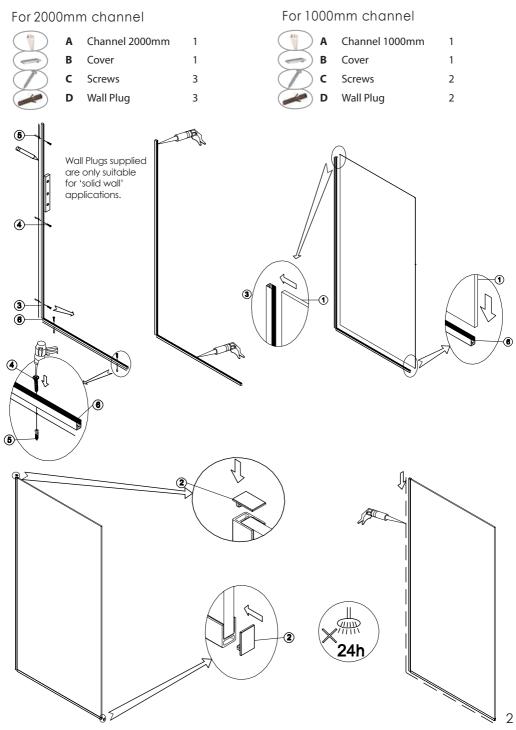

Due to our commitment to continuous product development we reserve the right to alter specifications without notice. Products are guaranteed against manufacturing defects for the first purchaser only and the guarantee is non-transferable. Our liability under any guarantee expressed or implied is strictly limited to replacement of defective goods or a refund at our discretion and no consequential losses will be entertained. Proof of purchase will be required.