

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

# Assembly Instruction Sheet #IS-QPP1198C For Style QPP1198C

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (1) Medium Base 100W Maximum

Estimated Assembly Time: 20-30 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



#### **Warnings and Cautions**


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

### **Package Contents**

Part	Description	Quantity	
Α	Crossbar	1 pc.	
В	Mounting Screw	2 pcs.	
С	Lock Washer	2 pcs.	
D	Hex Nut	2 pcs.	
Е	Mounting Ball	2 pcs.	
F	Ceiling Canopy	1 pc.	
G	Socket Assembly	1 pc.	
Н	6" Rod	2 pcs.	
I	12" Rod	2 pcs.	
J	Shade	1 pc.	
K	Socket Collar	1 pc.	
L	Reflector	1 pc.	
М	Holder	1 pc.	
N	Knob	3 pcs.	

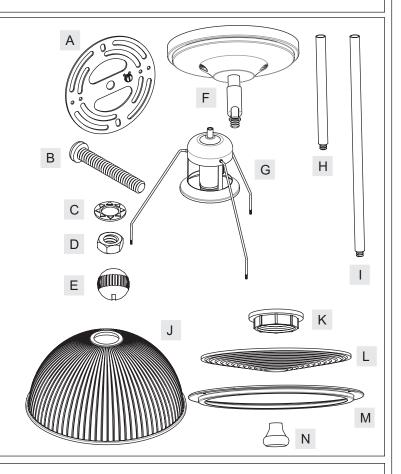

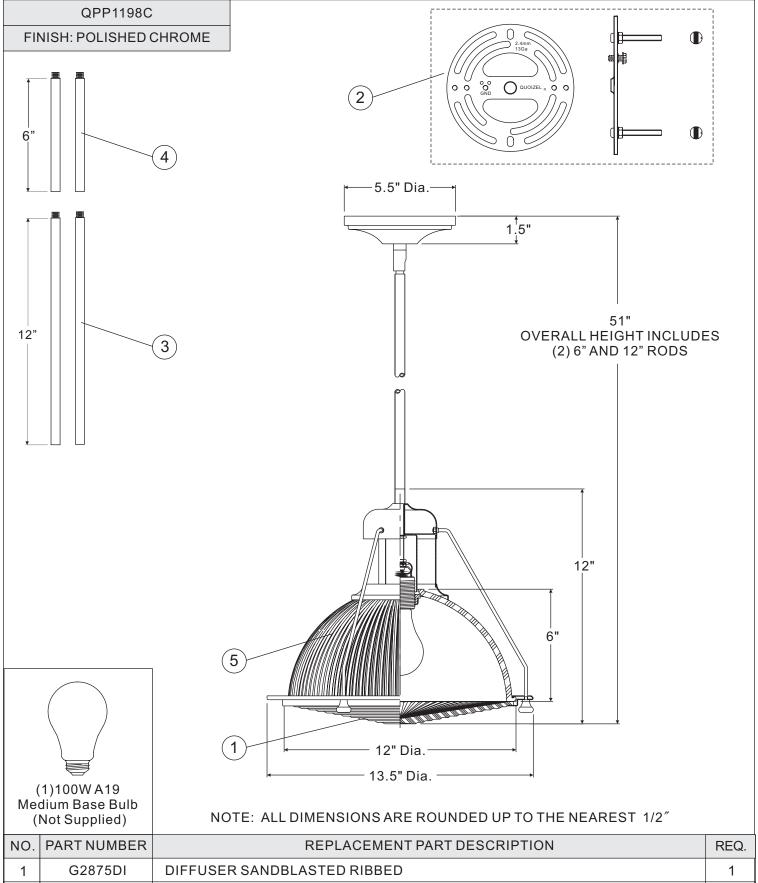


NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.	
1	G2875DI	DIFFUSER SANDBLASTED RIBBED	1	
2	9477KIT	MTG HDW/CNPY PLSH CHRM 5.75"D	1	
3	9012EXC	ROD EXT PLSH CHRM 12"L X .5"D	2	
4	9006EXC	ROD EXT PLSH CHRM 6"L X .5"D	2	
5	G2874SH	SHADE SANDBLASTED RIBBED WHTE	1	

2of6




#### STEP 1 - Assemble Rods

- A. Determine the Rods (H/I) to be assembled to the Socket Assembly (G) according to your hanging height.
- B. Pass Supply Wires and Ground Wire through the chosen Rods (H/I) and then thread the chosen Rods (H/I) and the Socket Assembly (G) together. Hand tighten until snug.

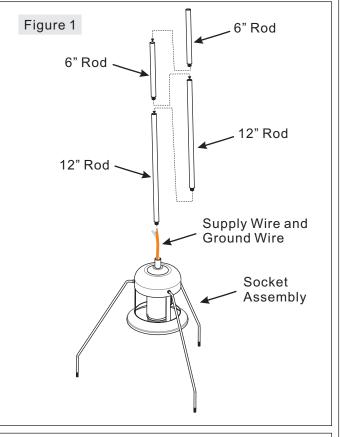

### STEP 2 – Assemble Ceiling Canopy to Upper Rod


A. Pass Supply Wires and Ground Wire through the Ceiling Canopy (F) and then thread the Ceiling Canopy (F) and the Upper Rod together. Hand tighten until snug.

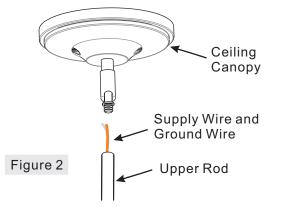




#### STEP 3 – Attach Mounting Screws, Lock Washers and Hex Nuts to Crossbar

- A. Line up a set of holes on the Crossbar (A) and Holes on the Ceiling Canopy (F).
- B. Thread Mounting Screws (B) into the holes on the Crossbar (A), pass Lock Washers (C) and thread Hex Nut (D) onto the Mounting Screws (B). Hand tighten until snug.

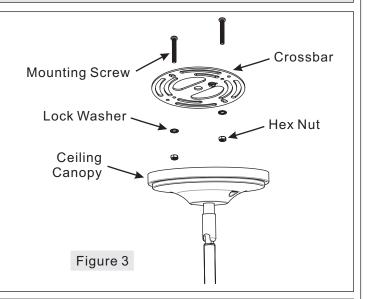

#### STEP 4 - Attach Crossbar to Outlet Box

A. Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

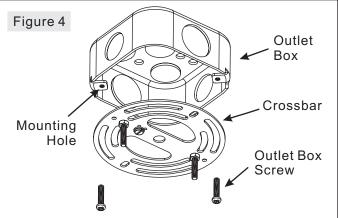




#### STEP 5 - Make Wire Connections

- A. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- B. Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- C. Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.
- D. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- E. Twist connectors until wires are tightly joined together.
- F. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.




Figure 5

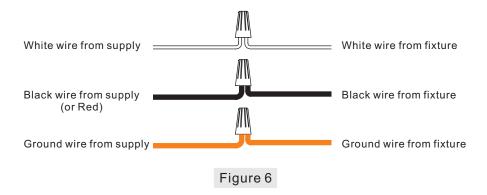

### STEP 6 – Attach Ceiling Canopy to Mounting Screw


A. Place the Ceiling Canopy (F) over the Mounting Screws
(B) and secure with Mounting Balls (E). Hand tighten until snug.

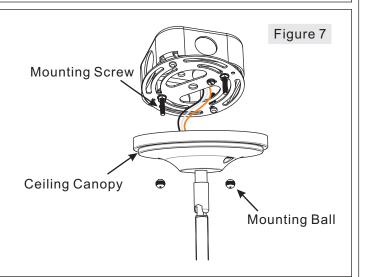




#### STEP 7 - Attach Shade to Socket

A. Place the Shade (J) over the Socket and secure with the Socket Collar (K). Hand tighten until snug.

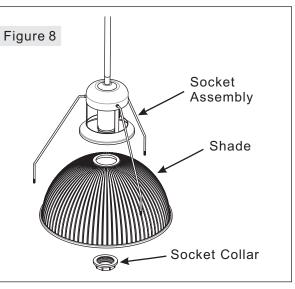

#### STEP 8 - Install Bulb

- A. This fixture uses standard bulb with a standard screw base. Maximum 100 watts.
- B. Insert bulb and screw properly into place.

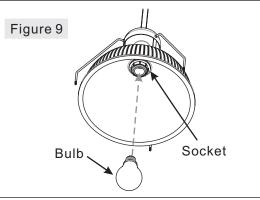

#### STEP 9 - Assemble Reflector

A. Place the Reflector (L) inside of the Holder (M) as shown. Lift the Holder (M) with the Reflector (L) upward, over the ends of Iron Wires. Secure by threading the Knob (N) onto the end of the Iron Wire. Hand tighten until snug.

Your lamp mini pendant fixture is now assembled and ready to use. Enjoy!

