

### Assembly Instructions For

## F2304/6 (E) 9/07

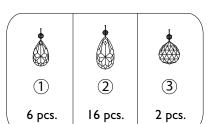

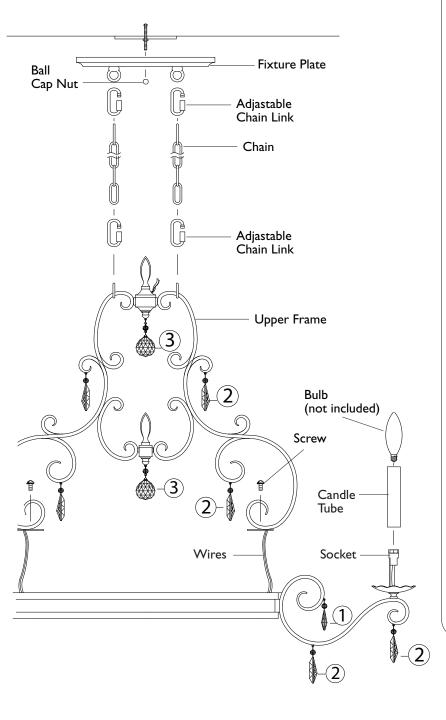

# IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

### I. Install upper frame:

A. Have one person, while holding securely, lower the upper frame onto main frame. During this process, have another person gently tuck slack of wires on each side of wire housing.

B. Once all wires are safely tucked and upper frame is sitting properly on top of wire housing, then secure frames together by fastening with two screws on each side.

#### 2. Attach Chains:

A. Open adjustable chain links by turning small round tube at one side.

B. Hook chain onto open adjustable chain link. Then attach adjustable chain link onto loop located at fixture plate. Close adjustable chain link by turning back small round tube.

C. Repeat other side.

D.At this point determine the desired length of chains to hang. Remove any unwanted chain links by following diagram A. Additional chains can be purchased through your local Murray Feiss retailer. E. Hook another open adjustable chain link at bottom of each chain. Then attach adjustable chain links onto loop located at top of fixture arm curls. Close adjustable chain links by turning back small round tube.

- 3. Take ground wire (without plastic insulation) and weave through above chain links. Then thread through hole in fixture plate loop. Repeat with fixture wires (with plastic insulation).
- Follow enclosed "Multiple Standard Installation Instructions" for electrical and fixture installation onto ceiling outlet box.
- Place candle tubes over candelabra sockets and screw bulbs (not included) into sockets to secure. See relamping label on candle tube or type and maximum allowed wattage.
- 6. Hang all crystal glass parts as shown on drawing. NOTE:To replace broken crystals extras are included in hardware bag. Replace by gently bending open pins, remove broken crystal, hook new one, then close back pins. Avoid bending pins into sharp angle.



