


Assembly Instructions For


SF275 (E) 10/09

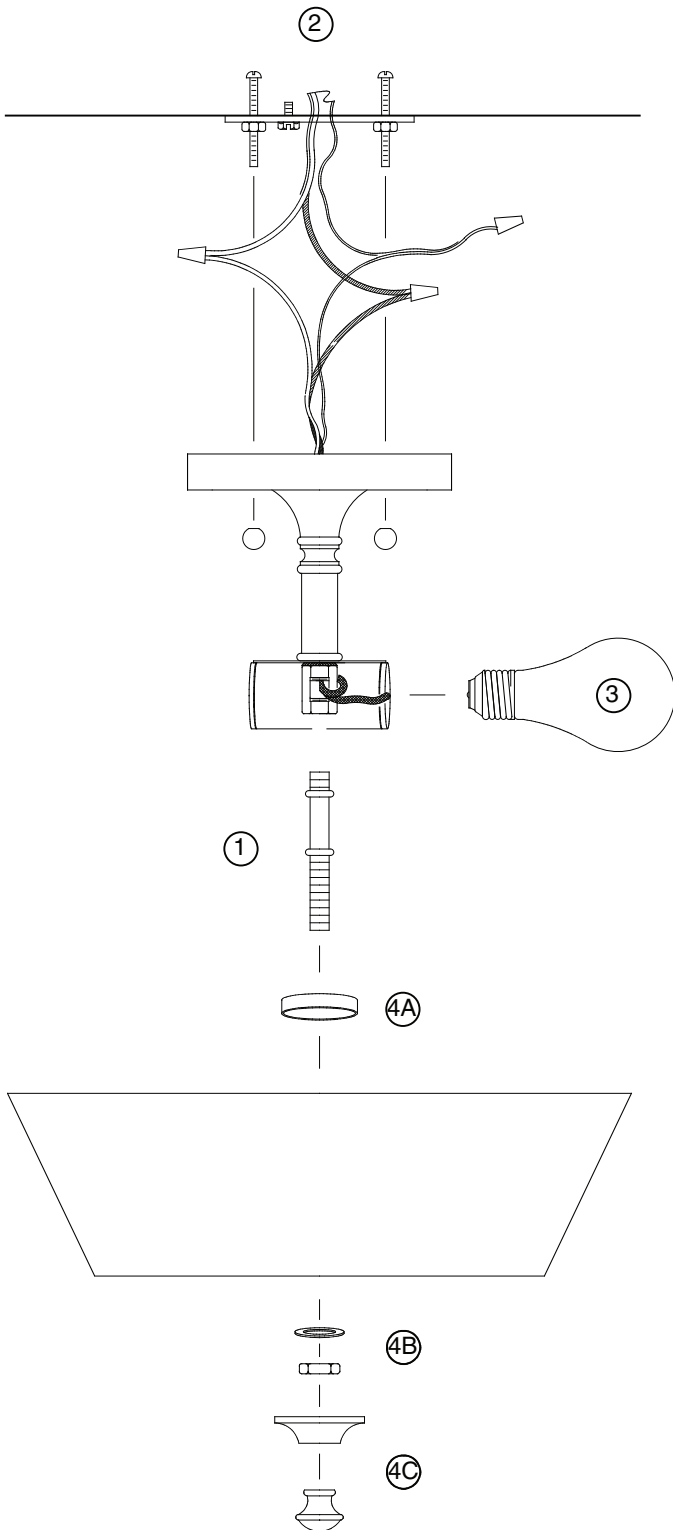

IMPORTANT **TURN OFF THE POWER AT THE MAIN FUSE OR** **CIRCUIT BREAKER BOX** **BEFORE STARTING INSTALLATION**

Carefully unpack and identify all parts before assembly.
Bulbs not included.

1. Install center pipe by screwing into coupler located at bottom of socket assembly. Note correct position of center pipe at illustration.
2. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one.
3. Install bulb (not included). See relamping label located at socket area for type and maximum allowed wattage.
4. A. Slide cup, open side facing down, and shade through the threaded pipe until shade comes to a stop.
B. Secure shade into position by fastening with a washer and a hex nut. **IMPORTANT: DO NOT OVER TIGHTEN.**
C. Slip cap and secure by fastening finial.

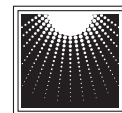

MURRAY
FEISS

GENERATION
BRANDS™