

# INSTALLATION INSTRUCTIONS FOR 6292

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER .**

## ASSEMBLING THE FIXTURE (Fig.1)

1. Shut off the power at the circuit breaker box. Remove old fixture and all hardware from Junction Box.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. End of pipe nipple (N) swivel into the square coupling (O) , then put the tube (M) onto the pipe nipple (N) , and lock it securely with the coupling (L).
4. Attach the tube (K) to the coupling (L) , attach the tube (J) and (I) onto the pipe nipple of the tube (K), by turning it clockwise until tight.
5. Attach the canopy (G) onto the pipe nipple of the tube (I) , and lock it securely with the knurled nuts (F).
6. End of pipe nipple screw into single bar (D), place lock washer (C) over end of nipple protruding through single bar and lock it securely with the hex nut (A). Take this single bar assembly to junction box with junction box screws (E), tighten screws securely with screwdriver. The side of the single bar marked "GND" must face to out.
7. While holding the fixture lamp towards the ceiling , connect the electrical wires as Shown in Fig.2, making sure that all wire nuts are secured. You may have to wrap the connections with electrical tape. If your outlet has a ground wire (green or bare copper), connect the fixture ground wire to it. Otherwise connect fixture's ground wire directly to the Single bar with the green screw provided. After wires are connected, tuck them carefully inside the Junction Box.
8. Raise the canopy (G) on to the Junction box, aligning screws on single bar with mounting hole in canopy and lock it securely with the nut (H).
9. Install the light bulbs in accordance with the fixture's specifications. **NOTE: DO NOT EXCEED THE SPECIFIED WATTAGE.**
10. Thread the pipe nipple (R) into bottom center coupling of the socket (Q) and lock it securely with the hex nut (X). Thread lock hex nut (S) onto the end of the pipe (R).
11. Raise the steel shim (T) , glass (U) and plastic shim (V) to bottom of the shade (P), aligning the hole with pipe nipple and lock it securely with the finial (W).

**Your installation is now complete Return power to the junction box and test the fixture.**

Fig.1

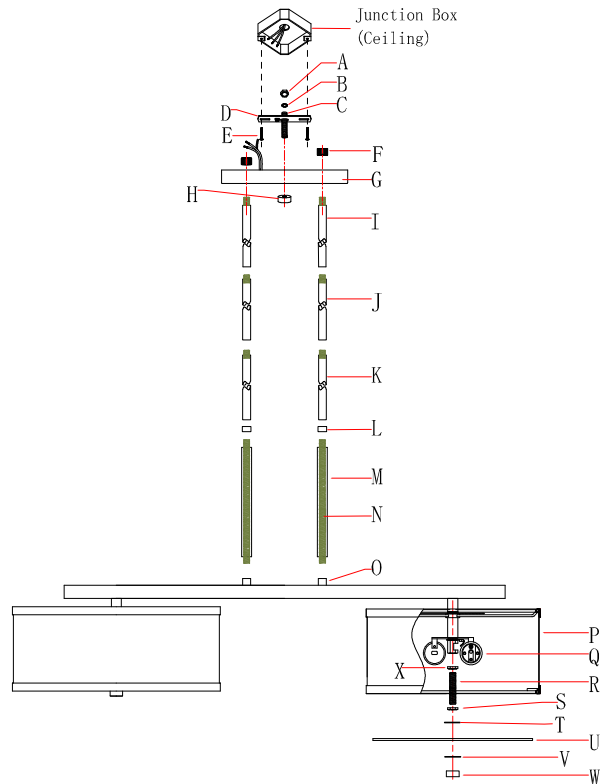


Fig.2

