


INSTALLATION INSTRUCTIONS SEMI RECESSED SINK CSR169RD, CSR193SQ, CSR213RC

SUGGESTED TOOLS AND MATERIALS










Philips Screwdriver

Sealant

Tape Measure

SINK INSTALLATION

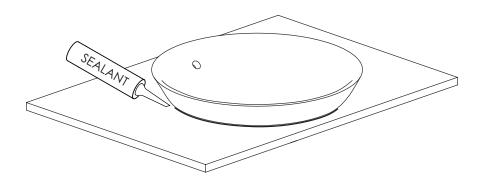

- Carefully position the sink in the opening of the sink
- Apply a continuous bead of quality sealant around the edges of the sink
- Wipe off any excess sealant
- Fill any voids between the sink and countertop opening with sealant
- Allow the sealant to cure for at least 30 minutes

CARE AND CLEANING

For best results in caring for your stone top, we suggest:

- Always wipe off spills immediately.
- Seal the stone top regularly with a good quality stone sealer.
- Never use strong / abrasive cleaner. Always test your cleaning solution on unnoticeable areas before applying to the entire surface.
- Wipe surfaces clean, immediately after applying cleaner.
- Do not allow cleaner to sit or soak. Never let cleaners sit on the surface of the stone for long periods of time.
- Use a soft, dampened sponge and cloth. Never use an abrasive material such as brush or scouring pad to clean surfaces. They will scratch the surface of the stone top and lavatory.
- Always rinse and wipe clean the fixtures to prevent soap buildup.