

INSTALLATION INSTRUCTION
2.5" Low Voltage - For Cabinet Use
HR-800

WAC LIGHTING
Responsible Lighting®

SAFETY INSTRUCTION

IMPORTANT: NEVER attempt any work without shutting off the electricity.

- Read all instructions before installing.
- For installation by a qualified electrician.
- System is intended for installation in accordance with National Electric Code, and local regulations. Consult with local inspector to assure compliance.
- To reduce the risk of fire, electrical shock and injuries to persons, turn off power at main switch before installing or modifying the system.
- Retain instructions for future maintenance reference.

OVERVIEW

Cabinet housing not intended for use in walls and ceilings. 35 watts maximum. Housing requires a trim from the HR-800 series, lamp and a remote transformer to be complete (ordered separately).

CUT OUT:

Use the template (supplied) to make a 3" cut out hole in the surface.

WIRING:




Housing is supplied with 36" of socket wire. Wires must be joined to the output wires from a low volt transformer.

MOUNTING:

1. Insert the can through the hole in the mounting surface.
2. Hold the rim snug to the surface.
3. From inside the housing push and pivot the housing clips so they make contact with the top of the surface.
Note: 3/4 inch maximum thickness.

FINISHING:

1. Socket wire is sufficient in length to be attached to the pins of the lamp before it is inserted.
2. Push the trim assembly up until the trim ring is flush to the mounting surface.

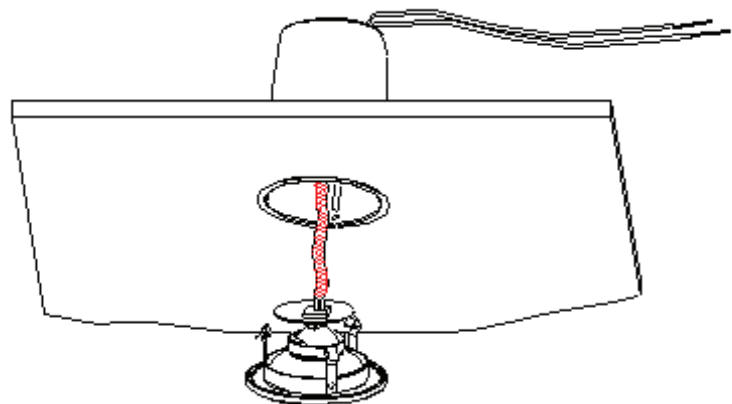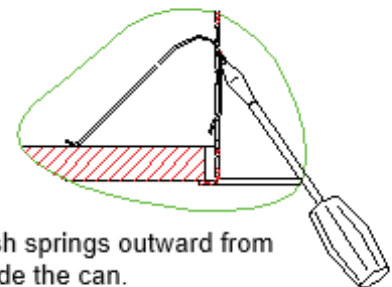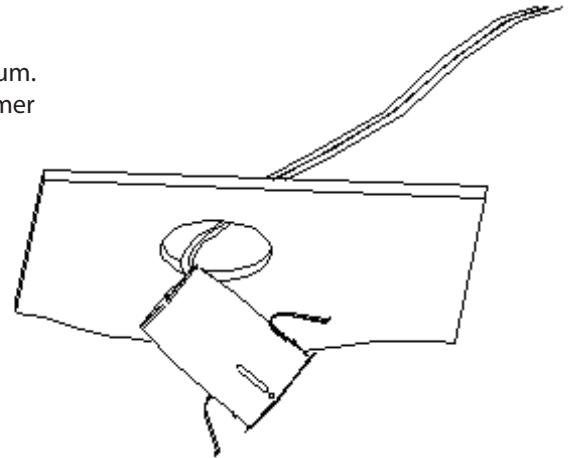

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585