


2

INSTALL TOILET TISSUE HOLDER

- Place ESCUTCHEON (7) onto MOUNTING BRACKET (5), and secure with ATTACHMENT SCREW (3).
- Install the TOILET TISSUE HOLDERS (11) into the WALL ESCUTCHEONS (7).
- Tighten SET SCREWS (9) using 2-1/2mm HEX KEY (10) supplied to secure assembly to ESCUTCHEONS (7).
- Place TISSUE ROLLER ASSEMBLY (12) into TOILET TISSUE HOLDER (11) by pushing the ends together and releasing into the TOILET TISSUE HOLDER (11).

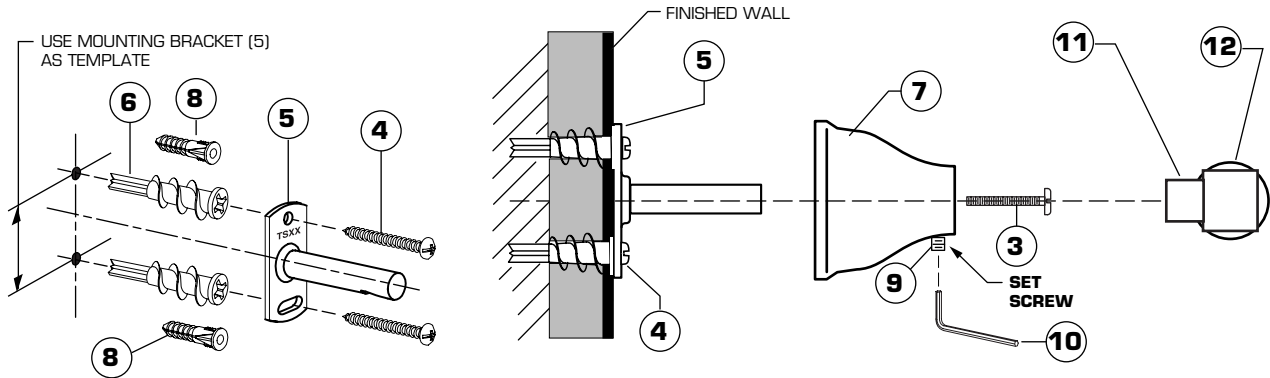

American Standard


TOWNSQUARE ACCESSORIES

18" TOWEL BAR
24" TOWEL BAR


MODEL NUMBERS

2555.018
2555.024

24" TOWEL BAR

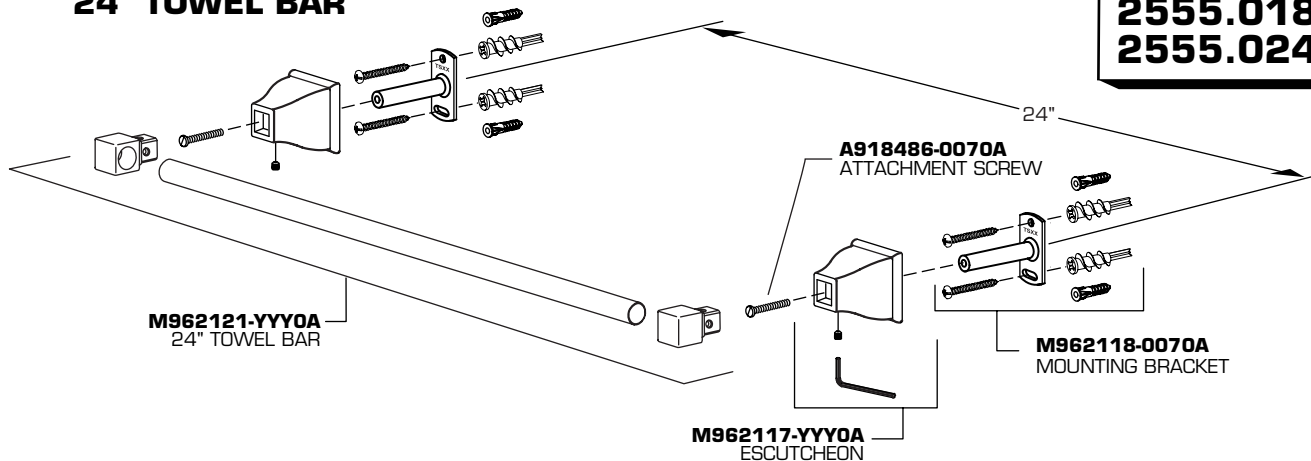

18" TOWEL BAR

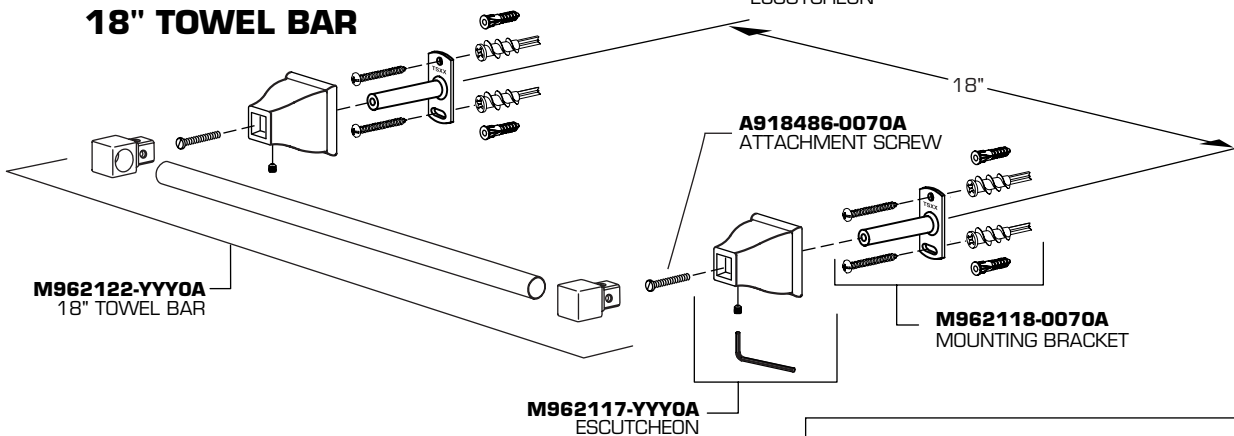

Replace the "YYY" with appropriate finish code

CHROME	002
POLISHED BRASS (PVD)	099
SATIN (PVD)	295



HOT LINE FOR HELP
For toll-free information and answers to your questions, call:
1-800-442-1902
Weekdays 8:00 a.m. to 8:00 p.m. EST
IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093)
Weekdays 8:00 a.m. to 7:00 p.m. EST

Product names listed herein are trademarks of American Standard Inc.
© American Standard Inc. 2002

M968232C