




FVN8024 & FVN8030
LIVELLO
INSTALLATION GUIDE



Medicine Cabinet

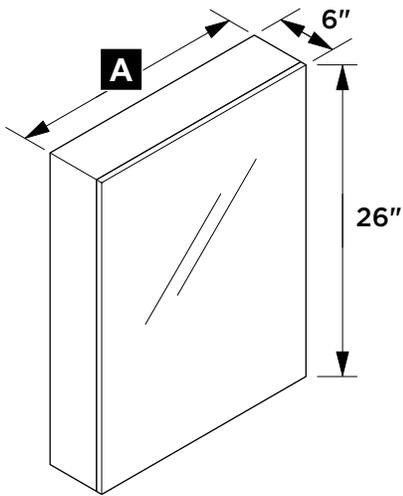


FVN8024

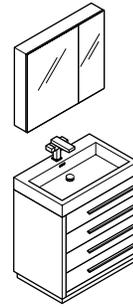


FVN8030

Model	Medicine Cabinet A	Vanity Width B
FVN8024	19-3/4"	23-1/4"
FVN8030	29-3/4"	29-1/4"

Vanity Front

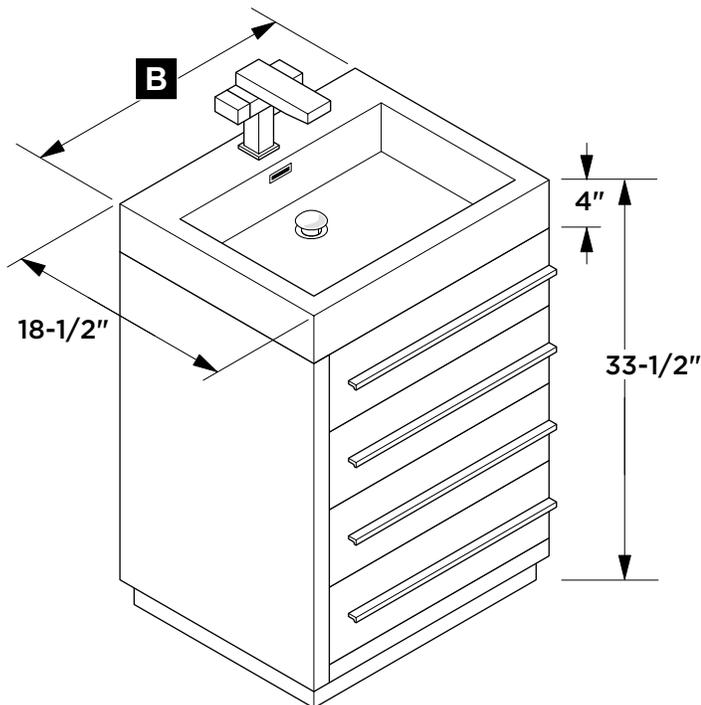





Vanity Back

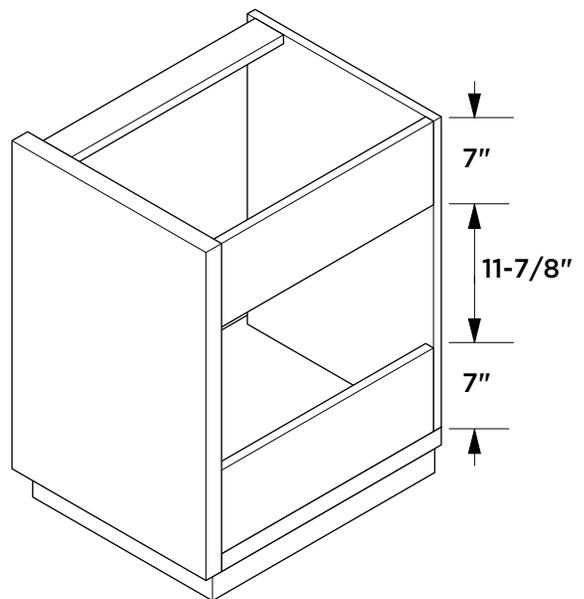

TOOLS FOR ASSEMBLY




PARTS

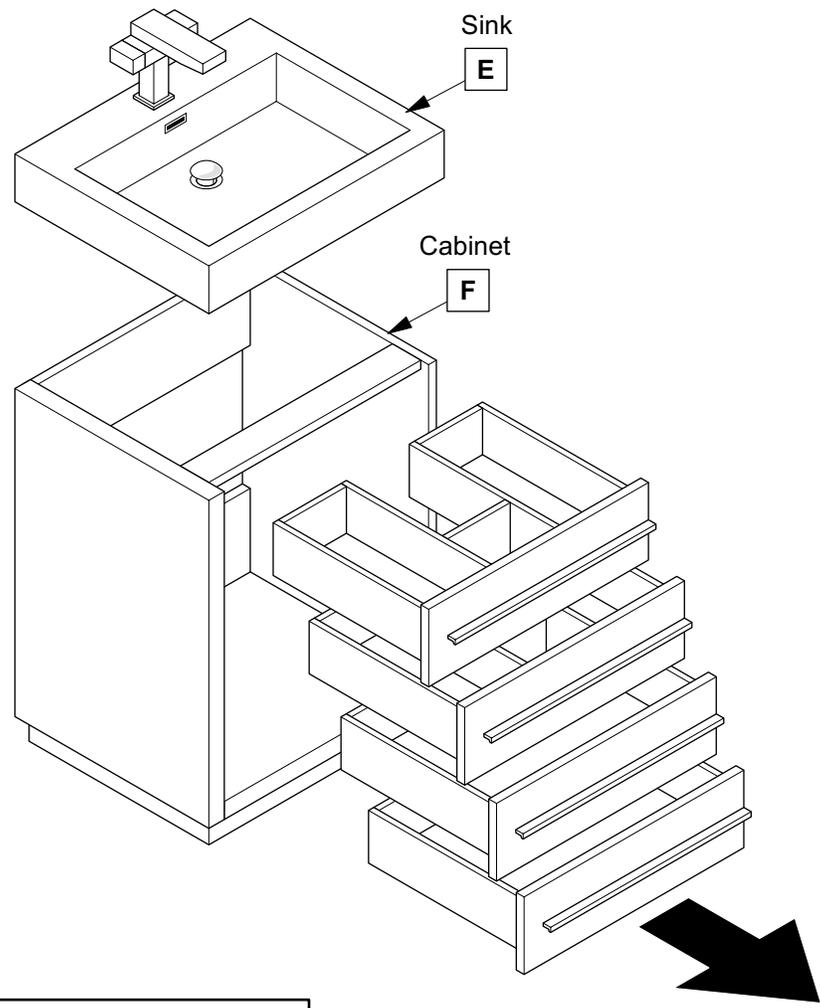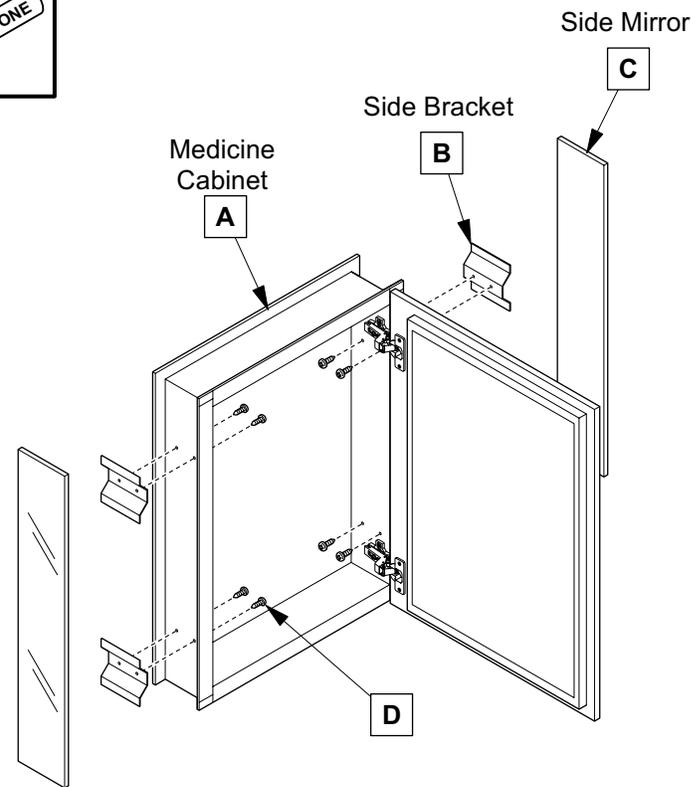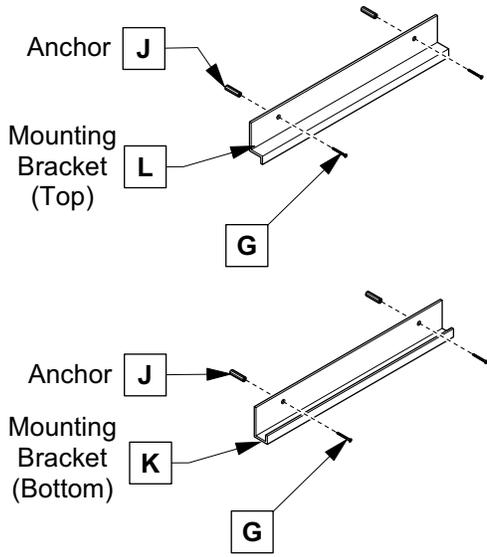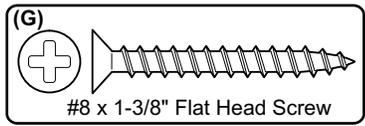


DRAWER REMOVAL & INSTALLATION

REMOVAL

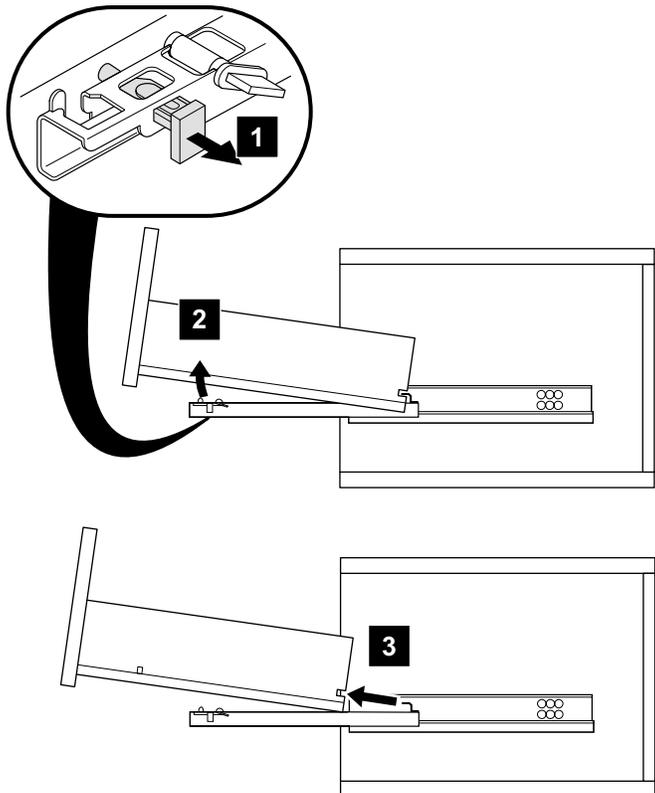


INSTALLATION

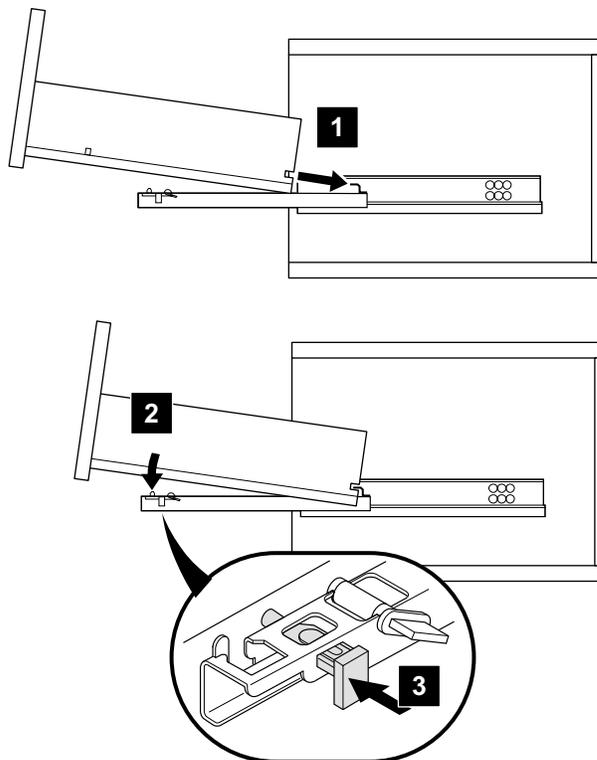


1 Remove drawer (M)


2 Install cabinet (F)

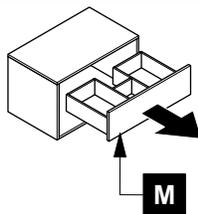

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

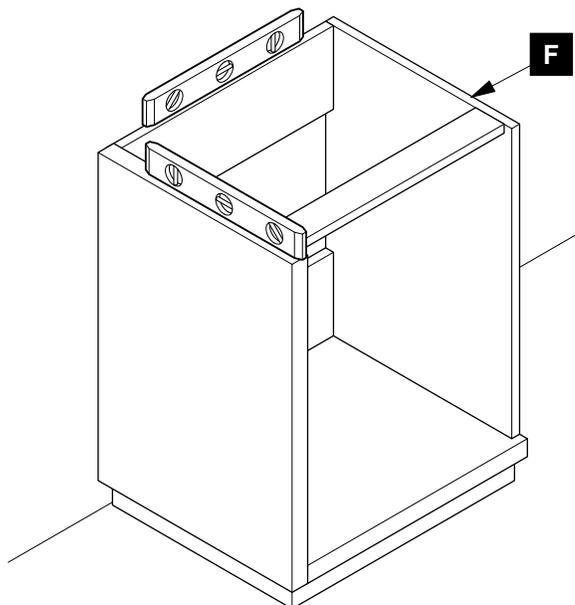


3 Apply silicone and install sink (E)

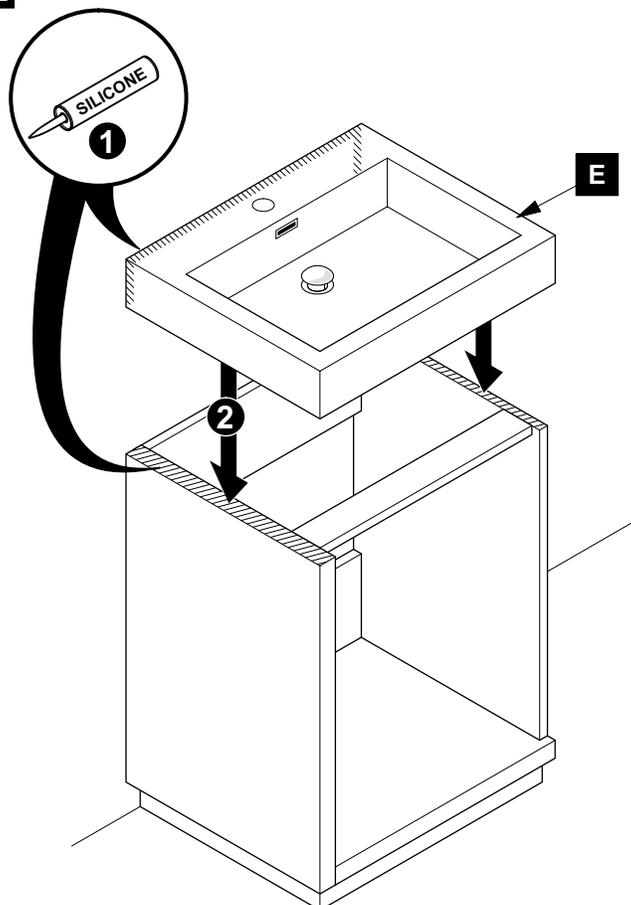


MEDICINE CABINET INSTALLATION


1 Install side brackets (B)

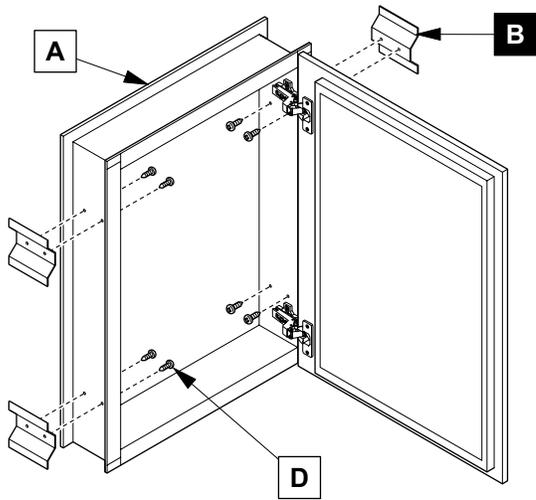


2 Install side mirrors (C)

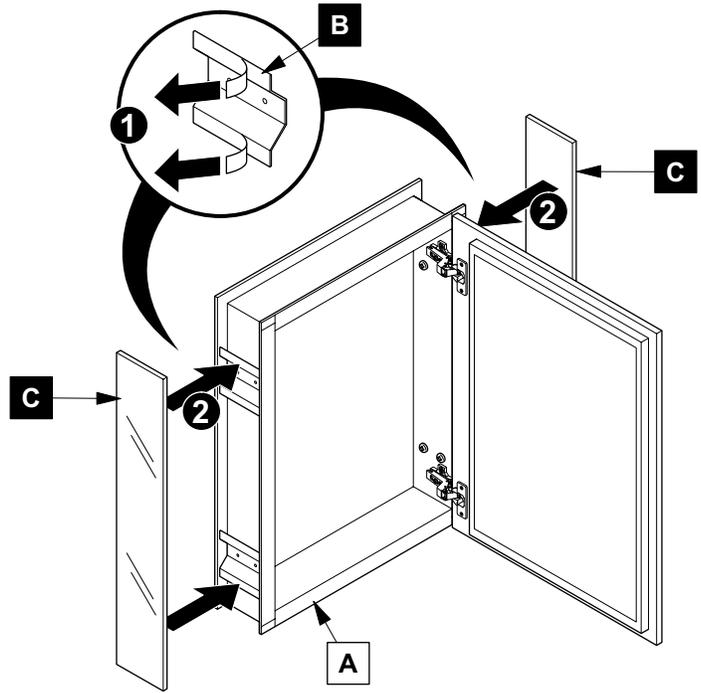

3 Mark cabinet (A) location

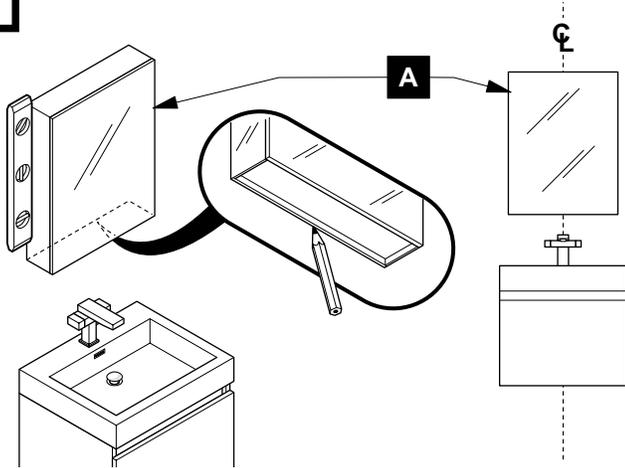

5 Install cabinet (A)

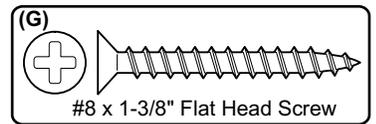

4 Install bottom bracket (K)

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided **do not** attach to all wall construction types.

