




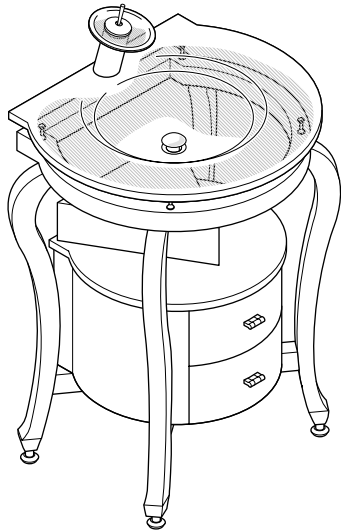



FVN3330
**SIMPATICO
 INSTALLATION GUIDE**

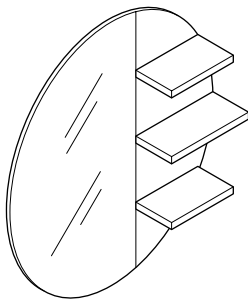

Vanity Front

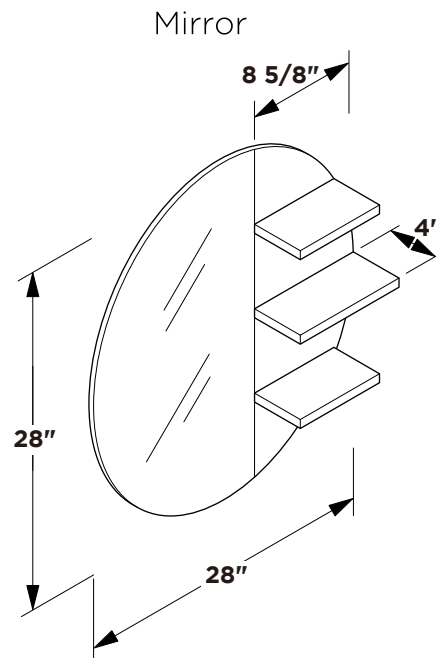


Vanity Back

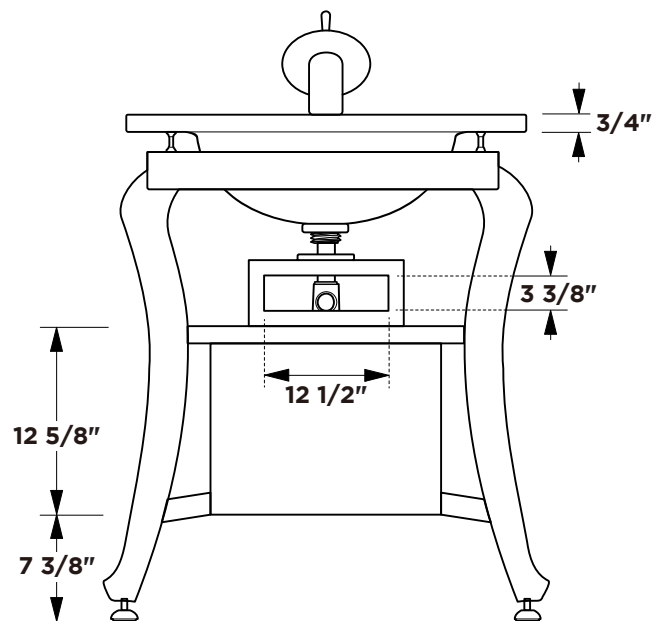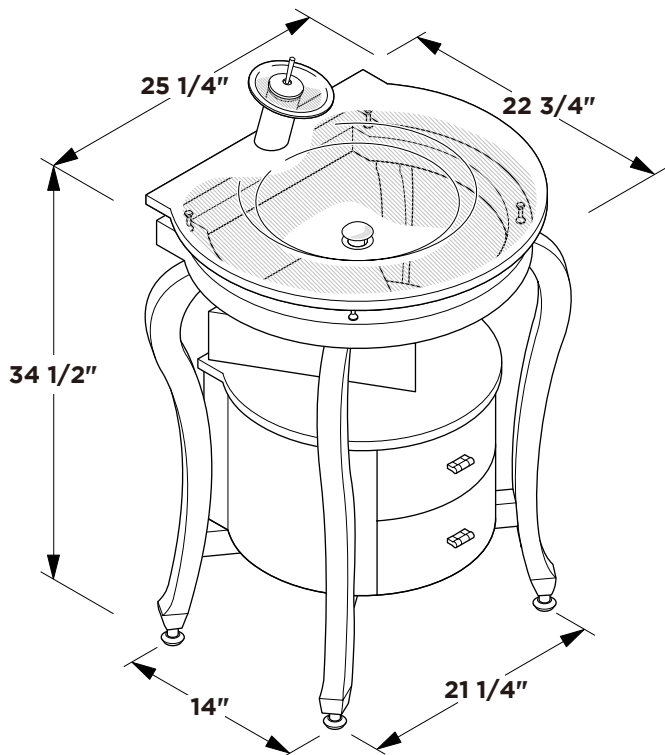


Note: All dimensions and specifications are approximate and subject to change without notice.


TOOLS FOR ASSEMBLY

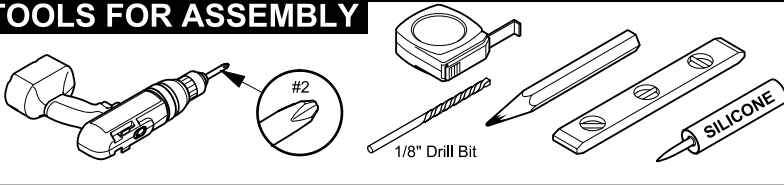


PARTS

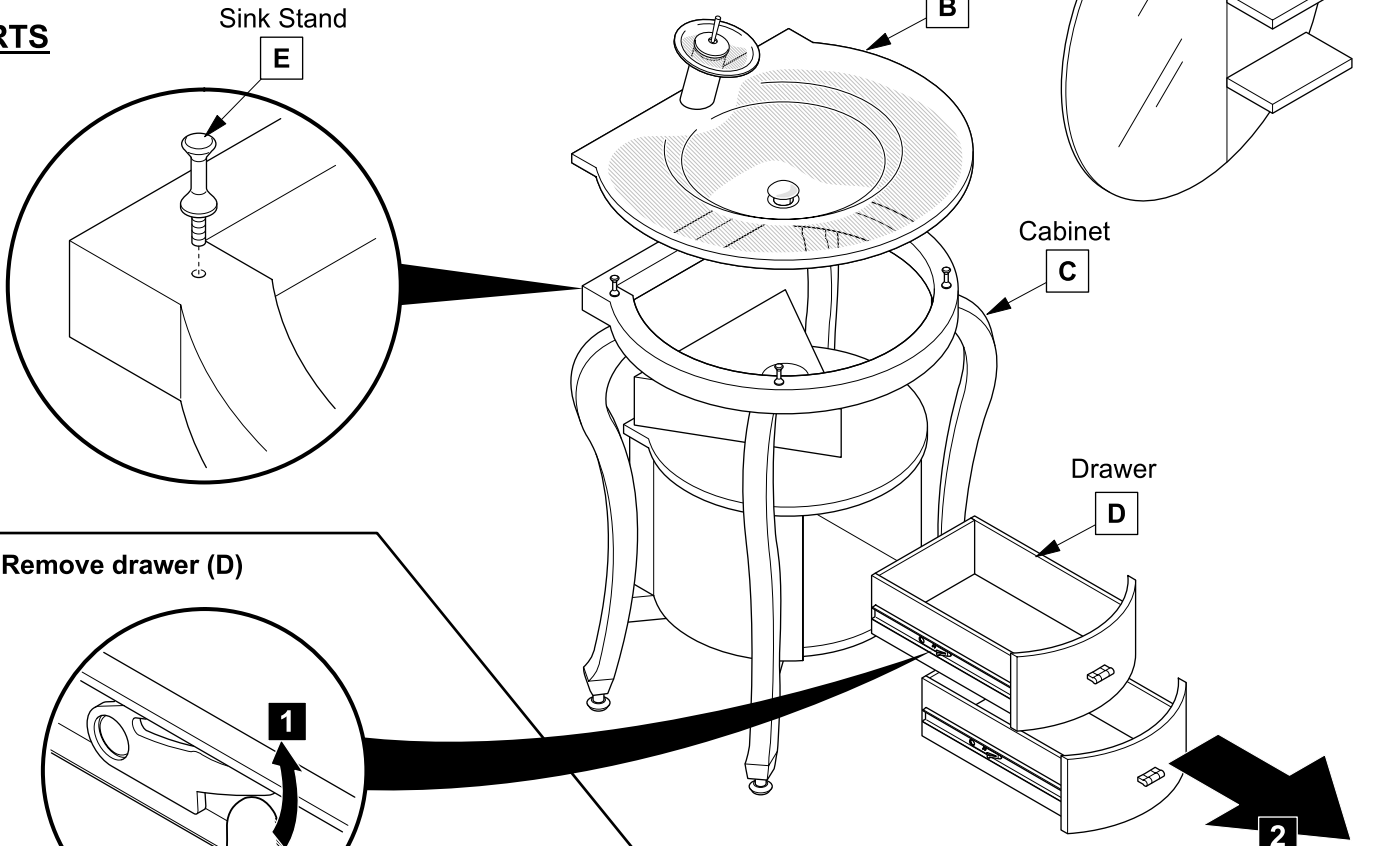

1 Remove drawer (D)

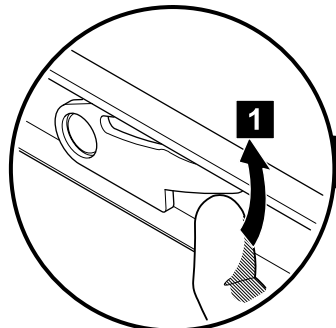


2 Position cabinet (C)

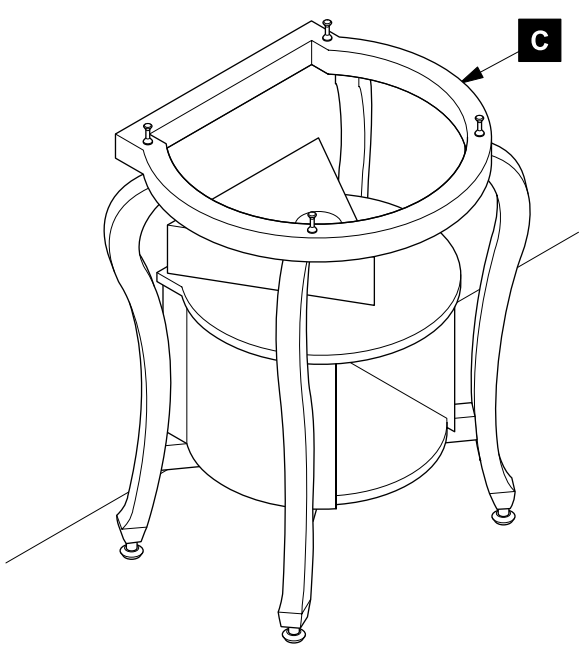


3 Apply silicone and install sink (B)

4 Install Mirror (A)

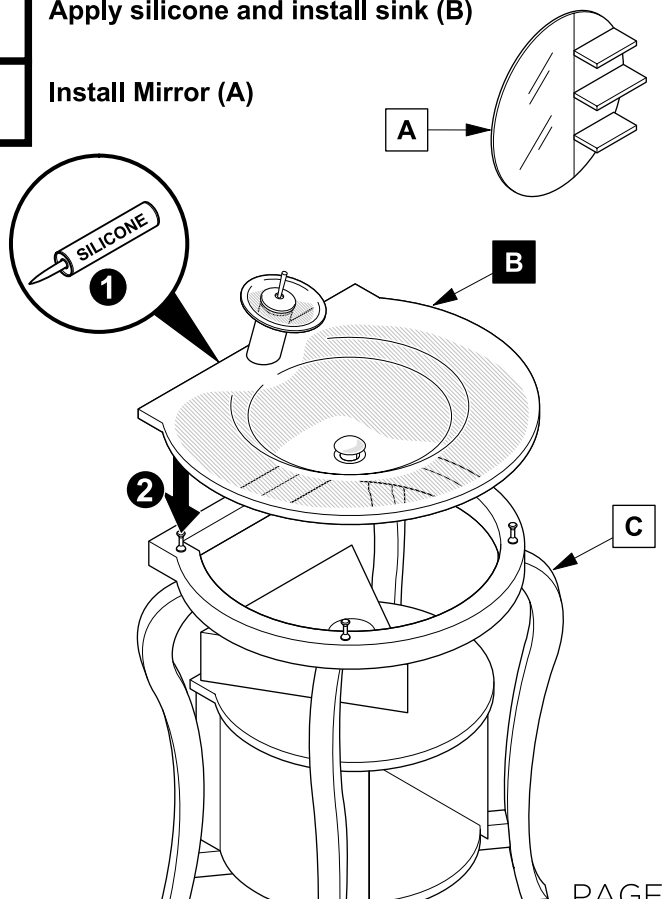


P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration

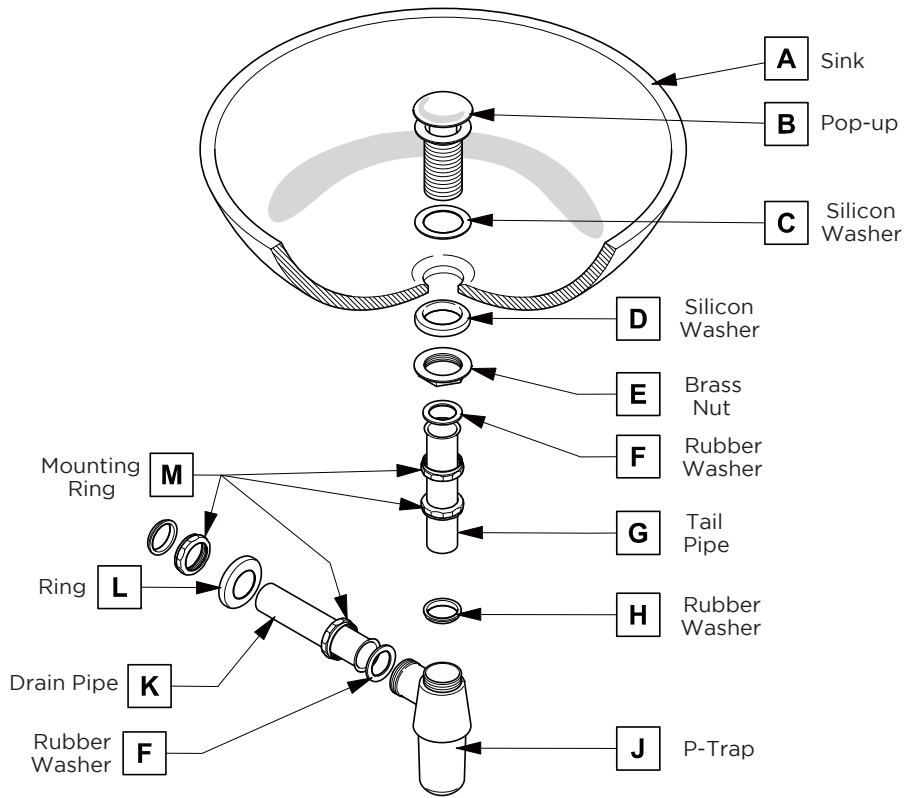


POP-UP INSTALLATION

FOR SINKS WITHOUT OVERFLOW

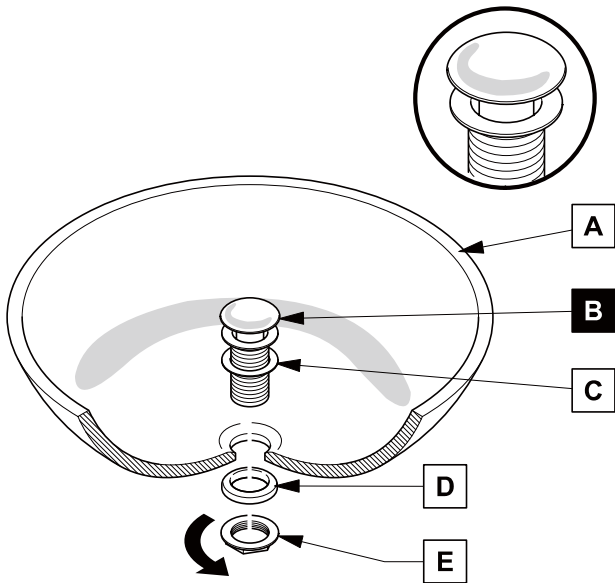

OR


FOR SINKS WITH OVERFLOW

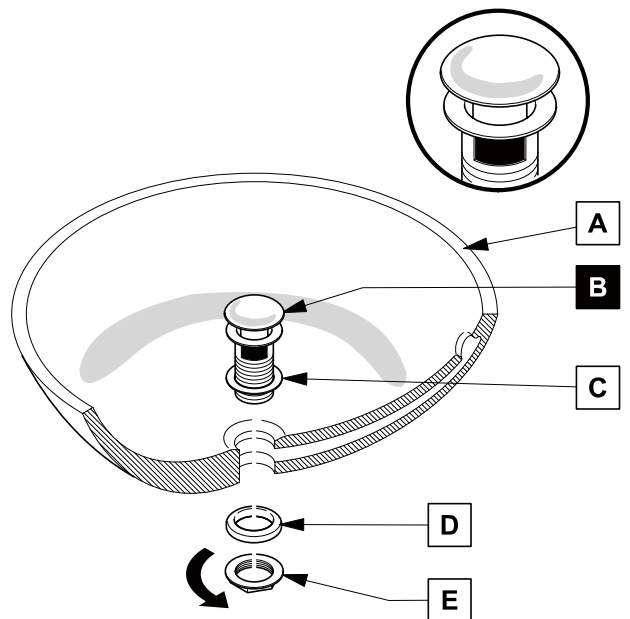

P-TRAP INSTALLATION

1

Install tail pipe (G)

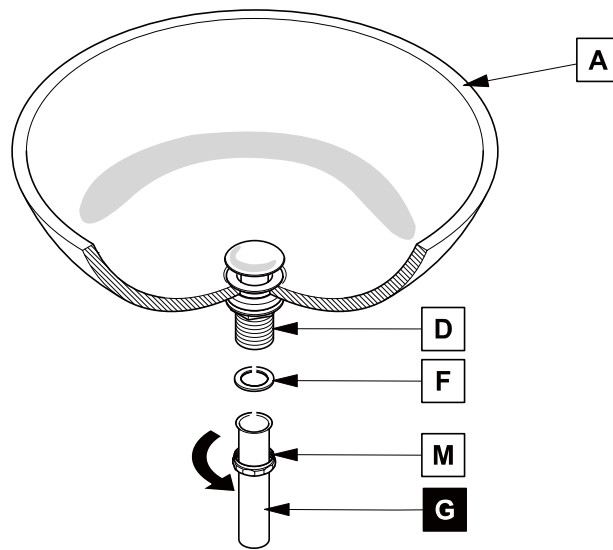

2

Install p-trap (J)

