

Instruction Sheet



Installation of 1/4" Oval Roll-Up Blind Retrofit Kit

1/4" Oval Roll-Up Blind Retrofit Kit

Parts List:



2 each Plastic Receiving Pieces

2 each Plastic Bullets

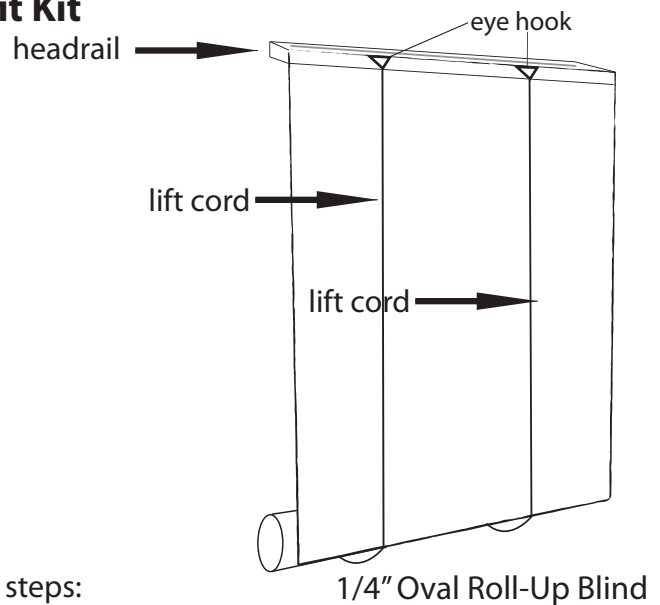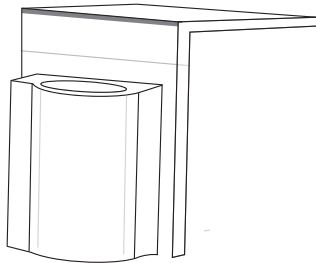


To retrofit your blind with a release clip, follow these 6 easy steps:

1. Remove 1/4" Oval Roll-Up Blind from window
2. Untie the first lift cord from the headrail eye hook.
3. Thread the loose end of the lift cord through the eye in the Plastic Bullet and tie a knot.
4. Insert horizontal slot in the Plastic Receiving Piece through the eye hook located on the headrail.

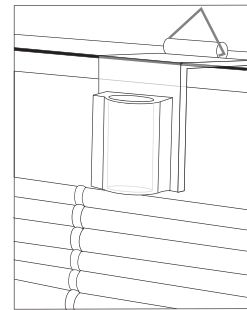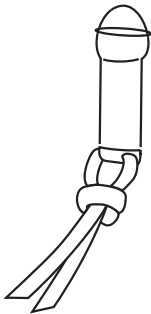

5. Insert Plastic Bullet into the bottom of the Plastic Receiving Piece.

6. Repeat steps 1 through 5 on second lift cord.

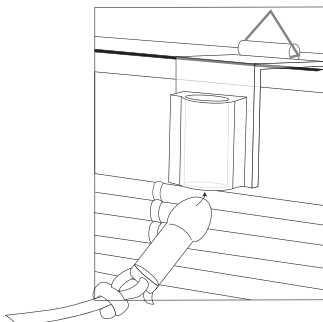

To test the correct installation, apply pressure to each lift cord. If the Retrofit Kit is installed correctly, the Plastic Bullet will release from the Plastic Receiving Piece with gentle pressure. Please re-insert bullet after this step.

Congratulations! You are done.