English

MULTI-FUNCTIONAL COMPUTER TABLE
ASSEMBLY INSTRUCTION

TECHNI MOBILI

MODEL RTA - 1565

IMPORTANT: Surfaces must be cleaned with a solution of a smooth soap and water, then cleared with a dry towel. Do not use solvents over surfaces or structural tubes.

Thanks for purchasing one of our products, please read carefully the assembly instructions before the installation (Attention: Do not tighten the screws before all screws are in place).

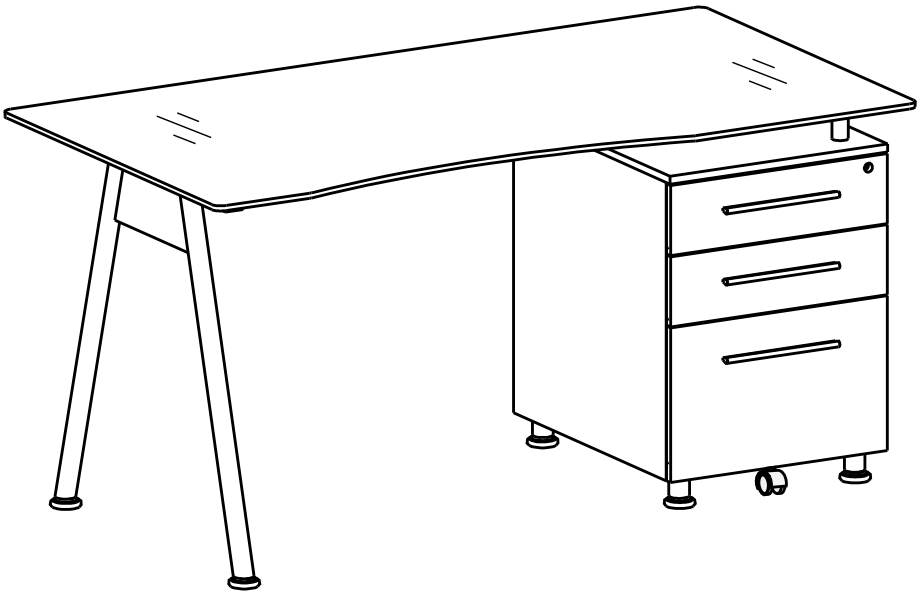

MODEL RTA-1565

RTA PRODUCTS LLC

A03 100114

▪PARTS LIST

1 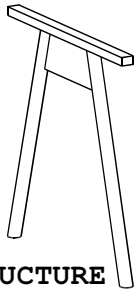 STRUCTURE	2 TOP SUPORT TUBES	3  STUDS	4  "T" TYPE TUBE
5  HORIZONTAL BARS	6 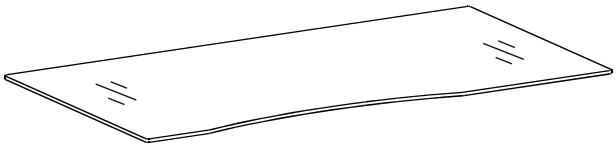 GLASS TABLETOP	7  TOP DRAWER FRONT PANEL	
SMALL DRAWER 8 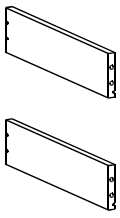 LEFT PANEL	SMALL DRAWER 9  RIGHT PANEL	SMALL DRAWER 10 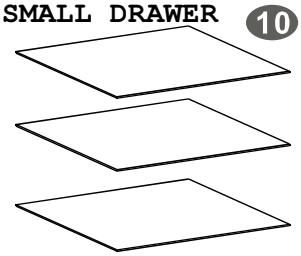 BOTTOM PANEL	SMALL DRAWER 11 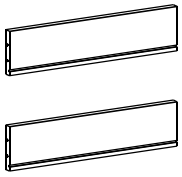 BACK PANEL
SLIDERS 12 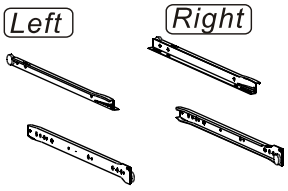 3SETS	HANDLES 13 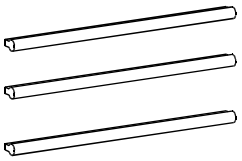	MIDDLE DRAWER 14  FRONTPANEL	WHEEL BRACKET AND NUT 15 
BOTTOM DRAWER 16 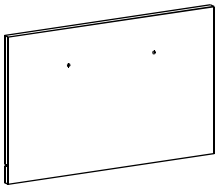 FRONT PANEL	BOTTOM DRAWER 17  LEFT PANEL	BOTTOM DRAWER 18  RIGHT PANEL	BOTTOM DRAWER 19 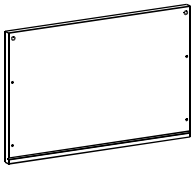 BACK PANEL

▪PARTS LIST

FILE TUBES 20

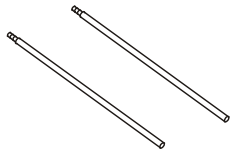

21A 21B 21C 21D 21

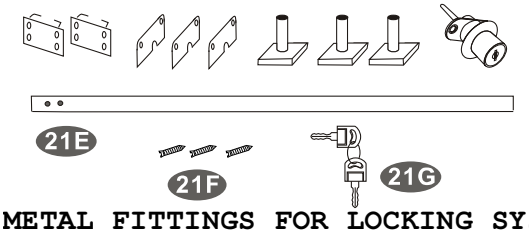

21E 21F 21G

METAL FITTINGS FOR LOCKING SYSTEM

22

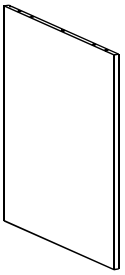

LEFT PANEL

23

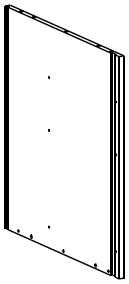

RIGHT PANEL

24

MIDDLE PANEL

25



BOTTOM PANEL

26

BACK PANEL

27



TOP PANEL

28



BOTTOM SUPPORT TUBES

29



CASTER

▪SCREWS LIST

PART	QTY.	ITEM	
A	40	3X15 MM	
B	28	6X40 MM	
C	12	4X30 MM	
D	6	4X20 MM	
E	2	4X14 MM	
F	17	6X12MM	

PART	QTY.	ITEM	
G	4	8X30MM	
H	2	6X25 MM	
I	3	6X35 MM	
J	4	6X30 MM	
K	3		
	1		

6x40mm bolt installation as below:

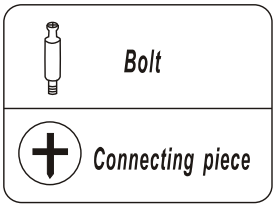

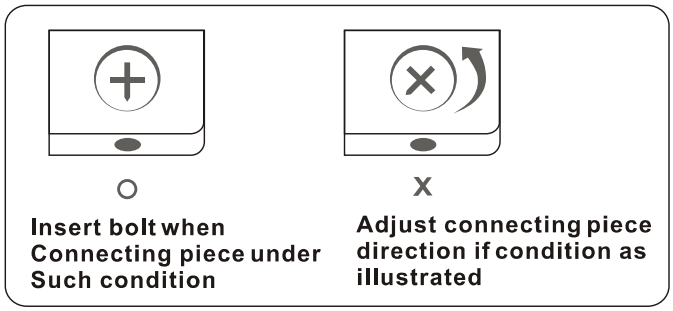

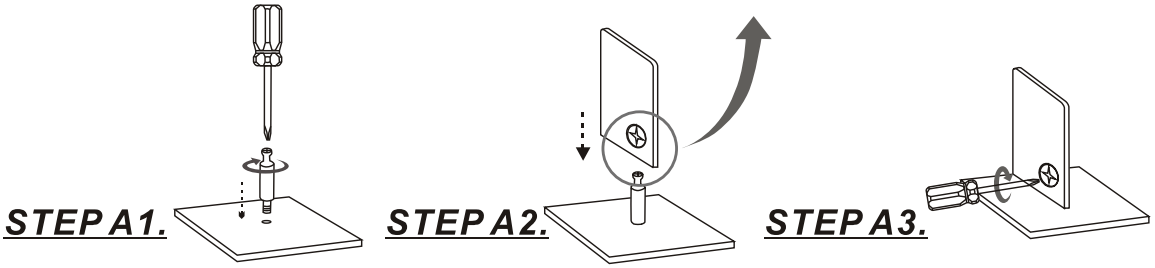

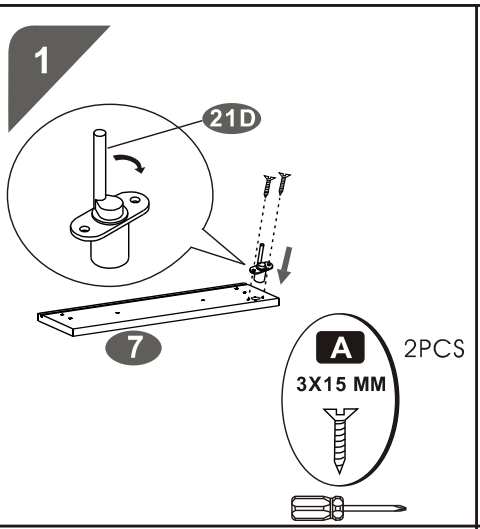

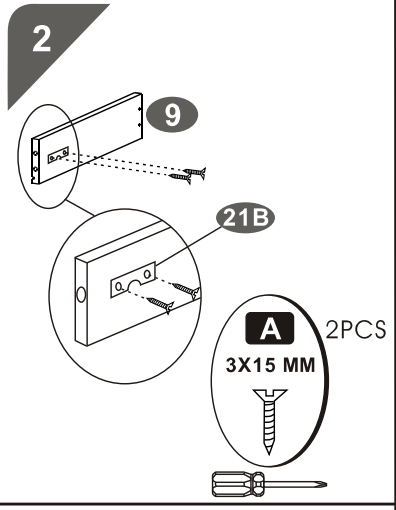

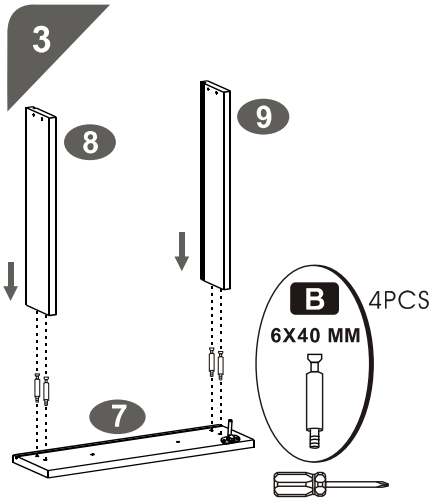

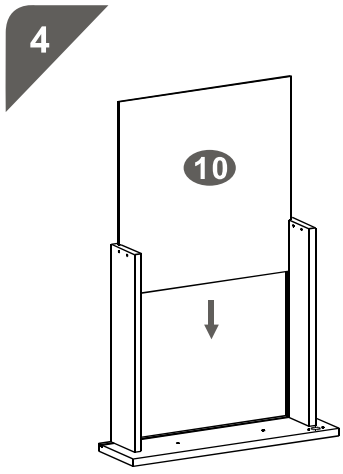

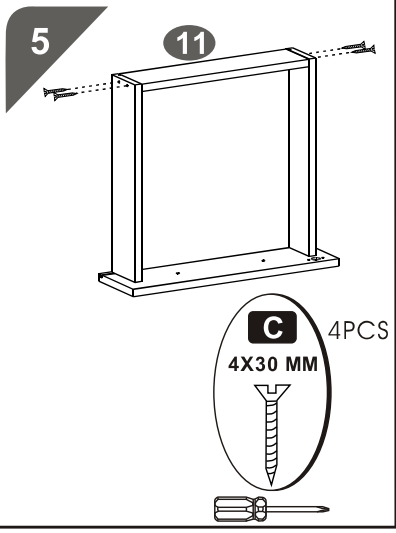

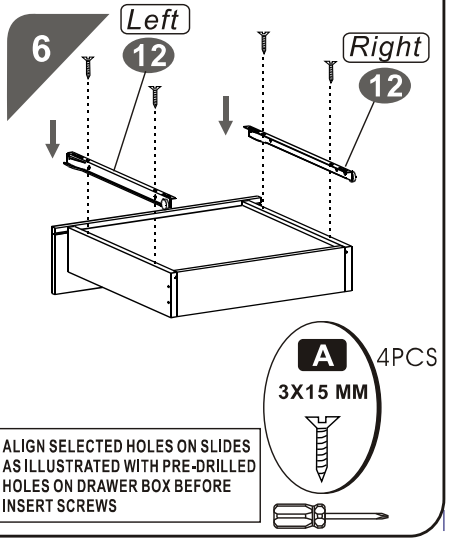

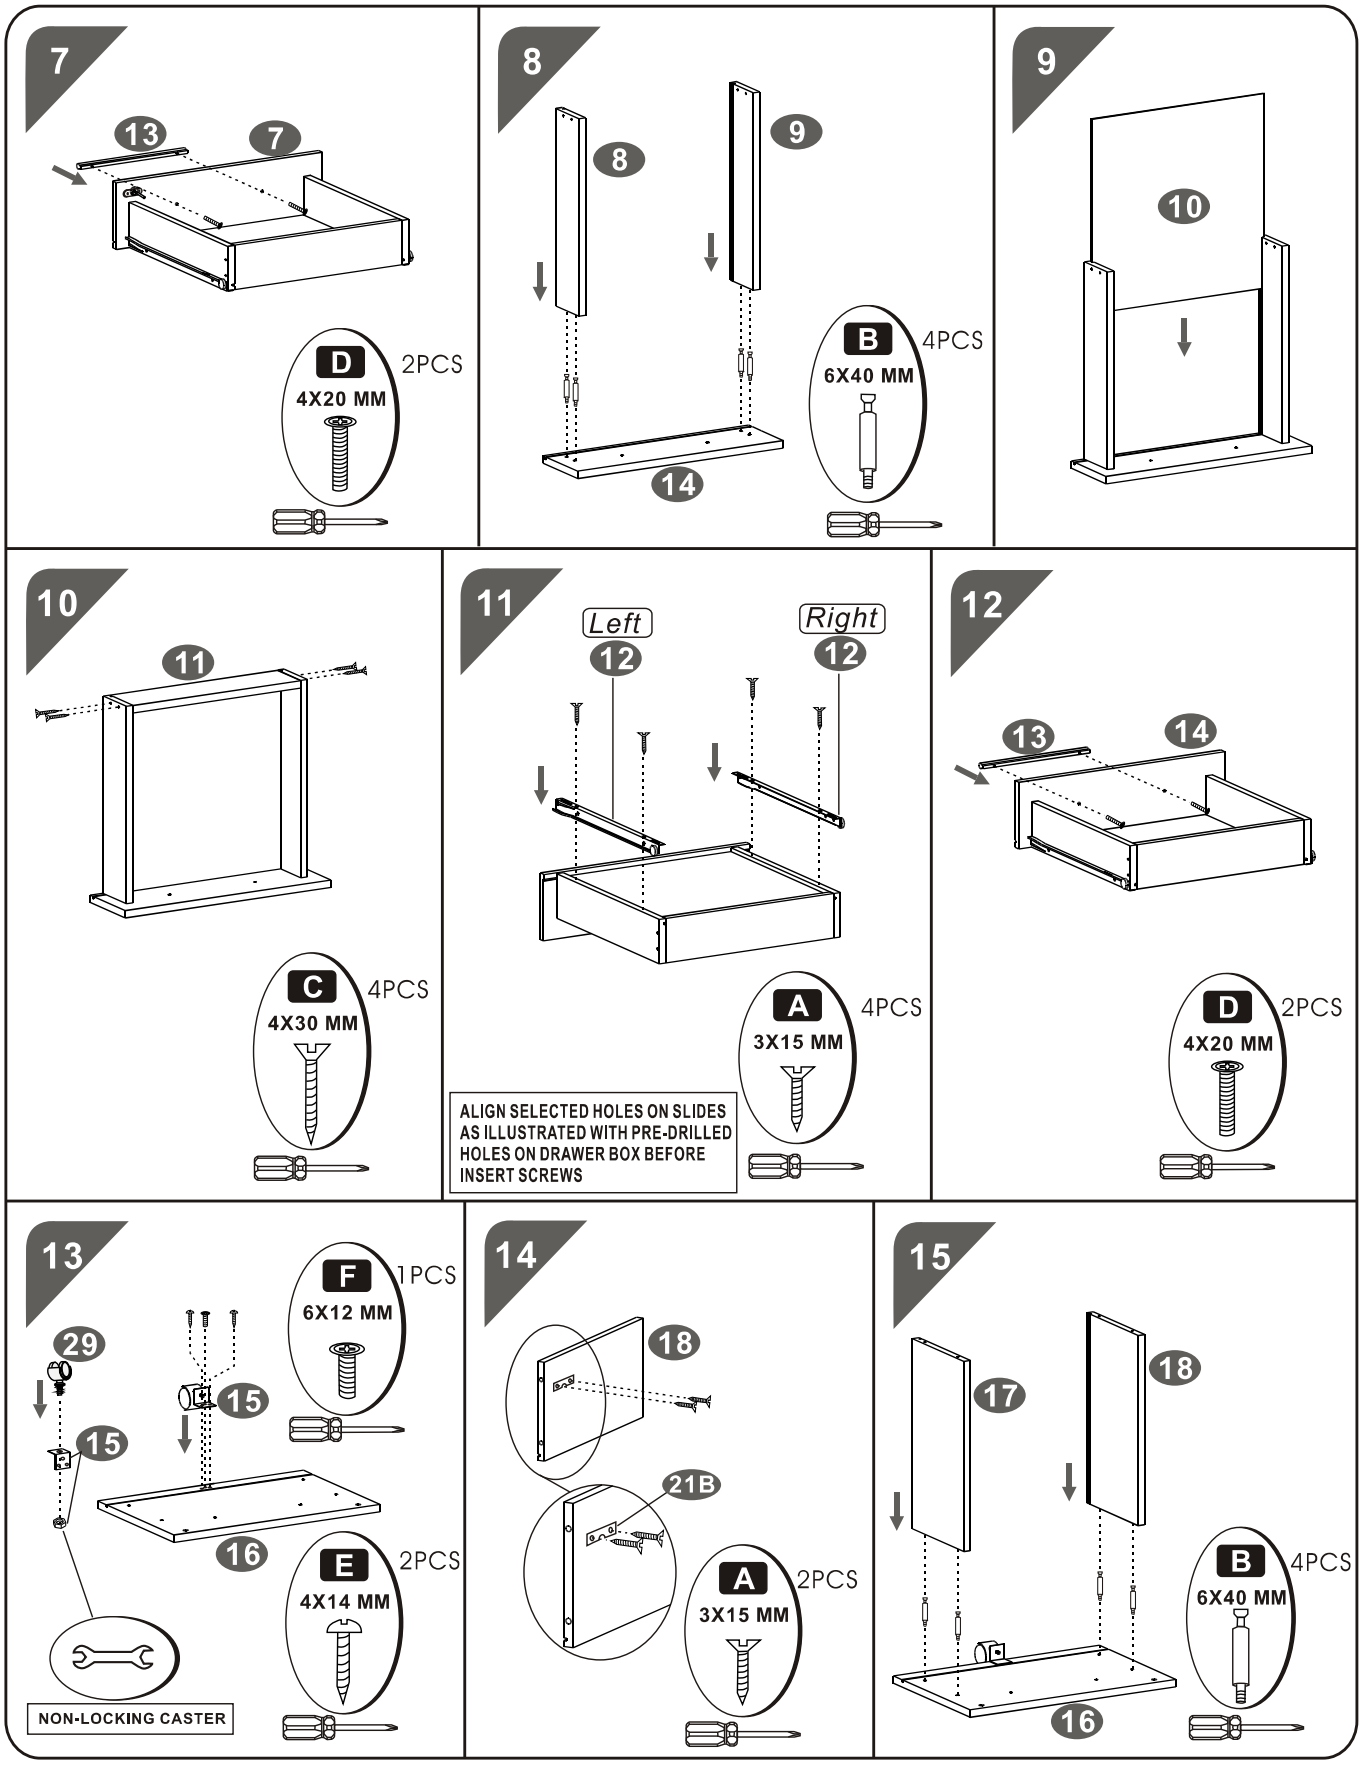
7
13
7
D
4X20 MM
2PCS
8
8
9
14
B
6X40 MM
4PCS
9
10
10
11
C
4X30 MM
4PCS
11
Left
12
Right
12
A
3X15 MM
4PCS
ALIGN SELECTED HOLES ON SLIDES AS ILLUSTRATED WITH PRE-DRILLED HOLES ON DRAWER BOX BEFORE INSERT SCREWS
12
13
14
D
4X20 MM
2PCS
13
29
15
15
16
F
6X12 MM
1PCS
E
4X14 MM
2PCS
NON-LOCKING CASTER
14
18
21B
A
3X15 MM
2PCS
15
17
18
16
B
6X40 MM
4PCS

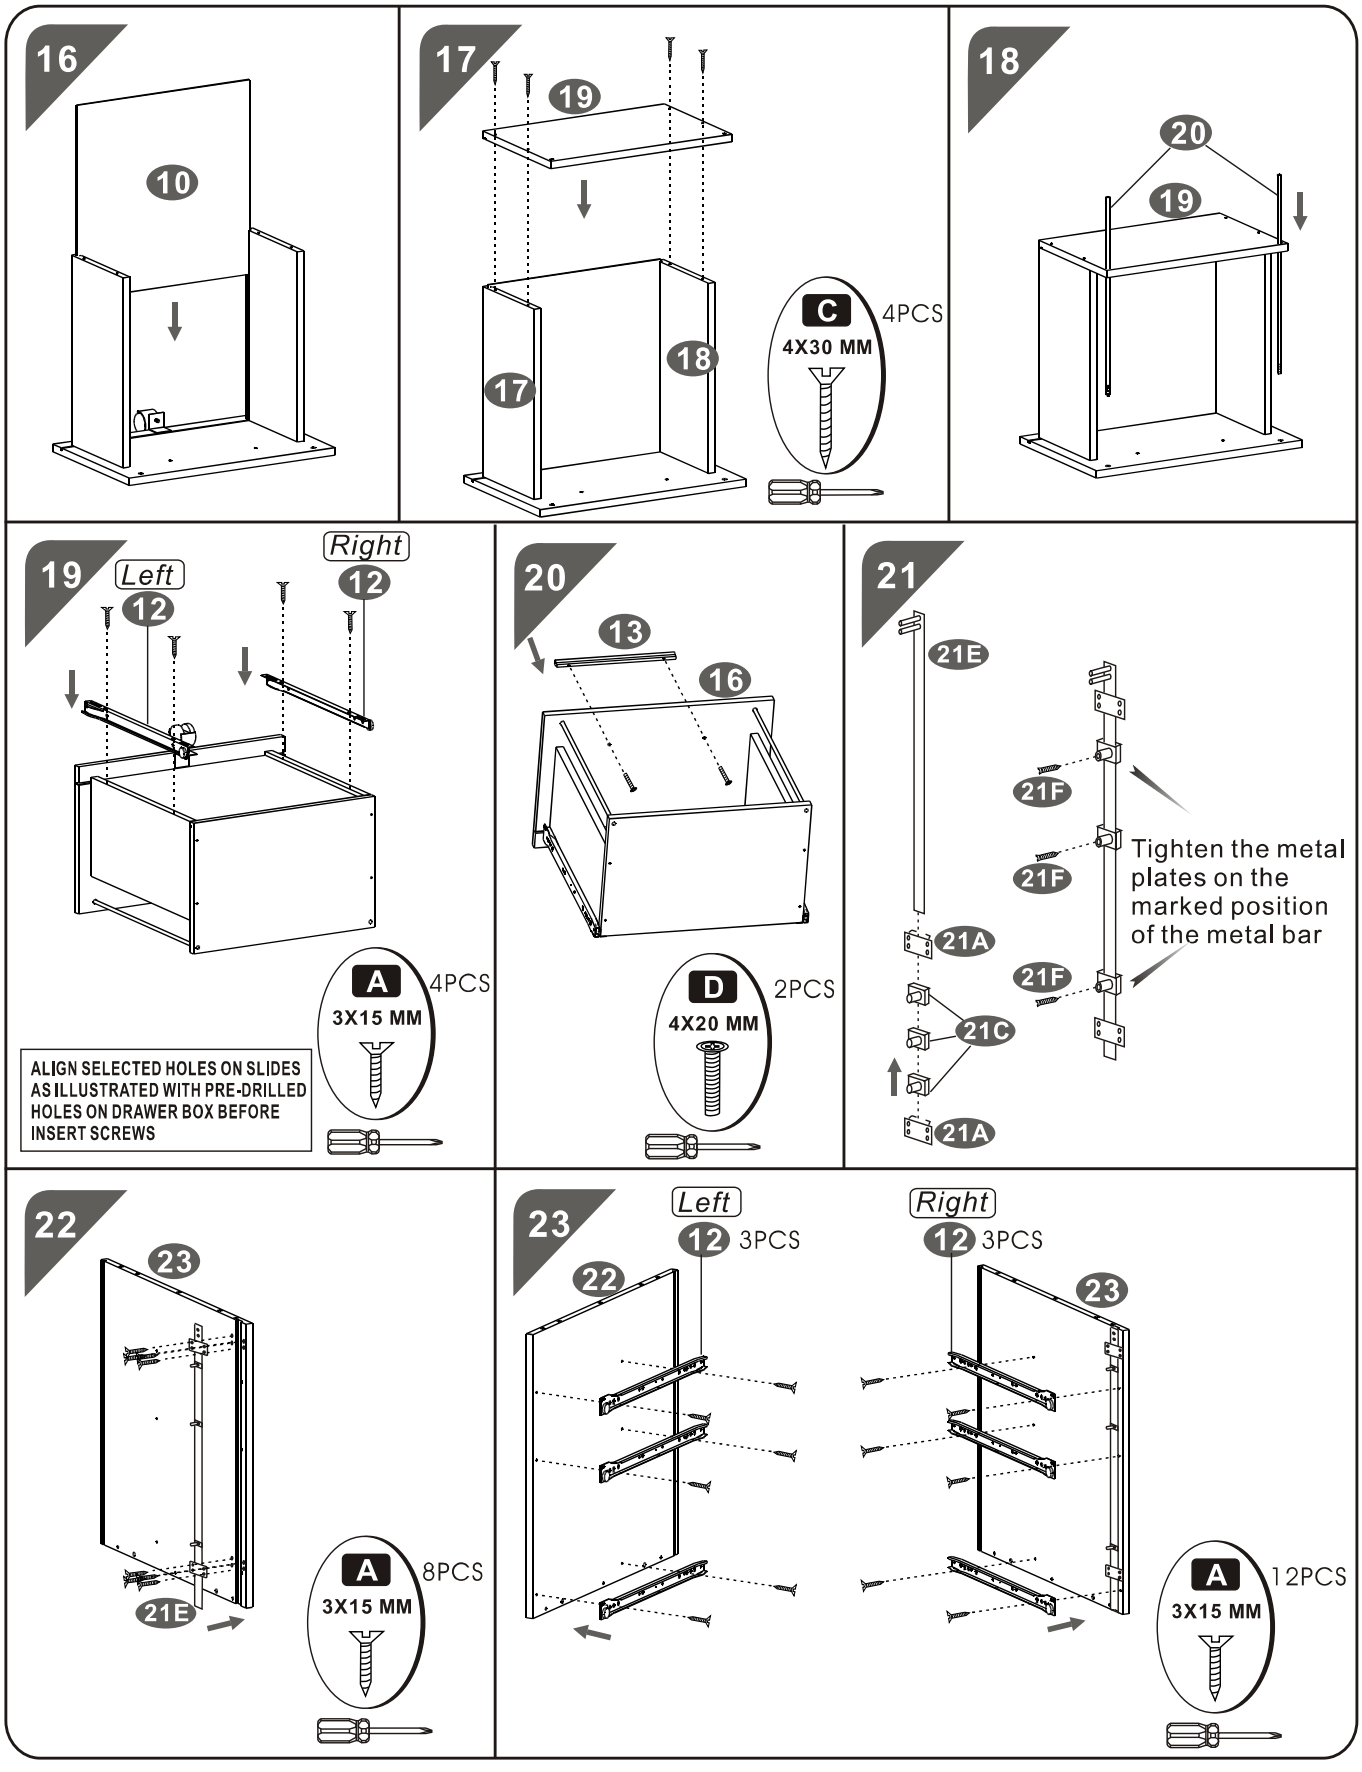
16
10
17
19
18
17
C
4X30 MM
4PCS
18
20
19
19
Left
12
Right
12
A
3X15 MM
4PCS
ALIGN SELECTED HOLES ON SLIDES AS ILLUSTRATED WITH PRE-DRILLED HOLES ON DRAWER BOX BEFORE INSERT SCREWS
20
13
16
D
4X20 MM
2PCS
21
21E
21F
21F
21F
21A
21C
21A
Tighten the metal plates on the marked position of the metal bar
22
23
21E
A
3X15 MM
8PCS
23
Left
12
3PCS
22
Right
12
3PCS
23
A
3X15 MM
12PCS

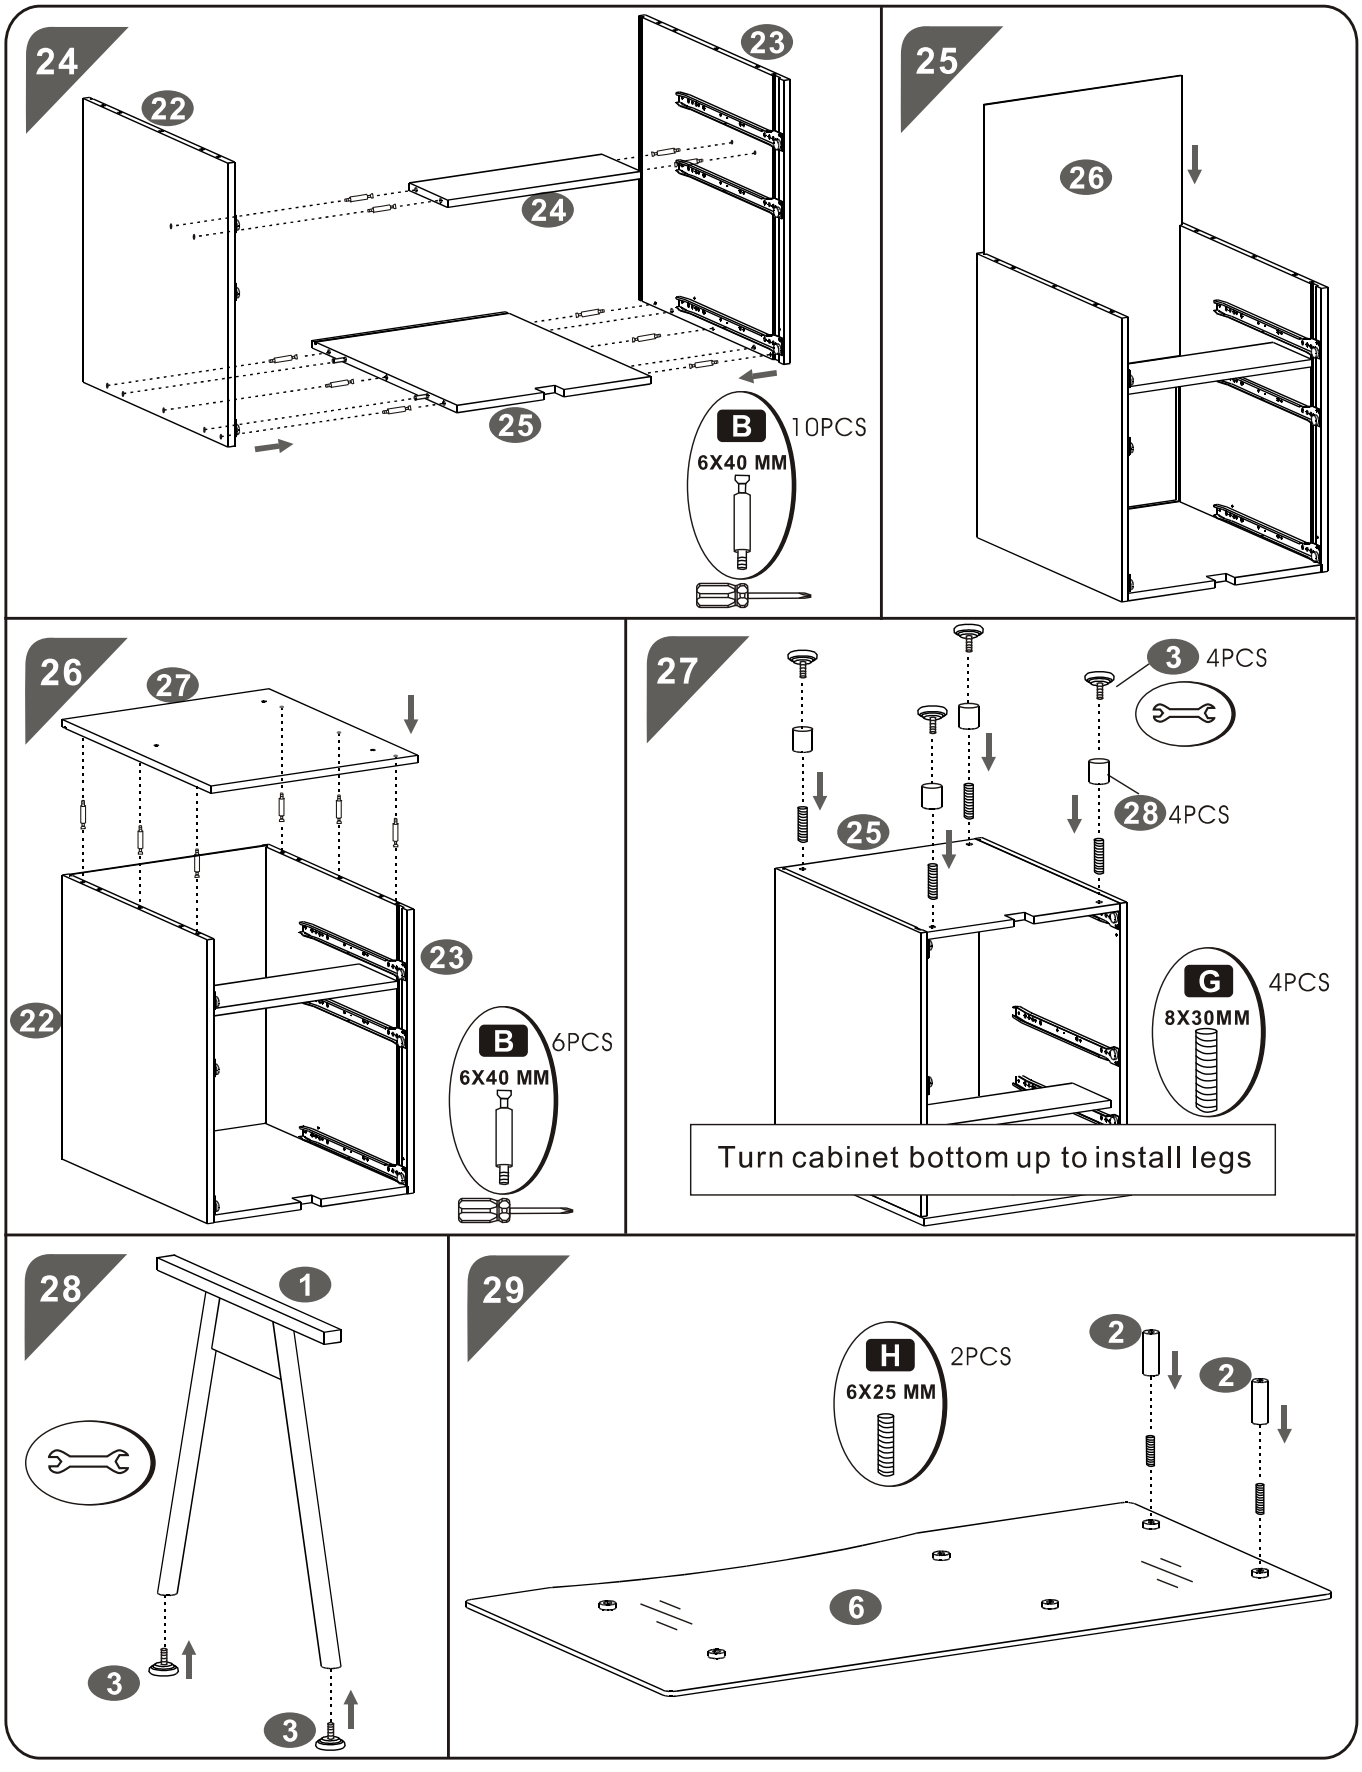
24
22
23
24
25
B
10PCS
6X40 MM
25
26
26
27
23
22
B
6PCS
6X40 MM
27
3
4PCS
28
4PCS
25
G
4PCS
8X30MM
Turn cabinet bottom up to install legs
28
1
3
3
29
H
2PCS
6X25 MM
2
2
6

30

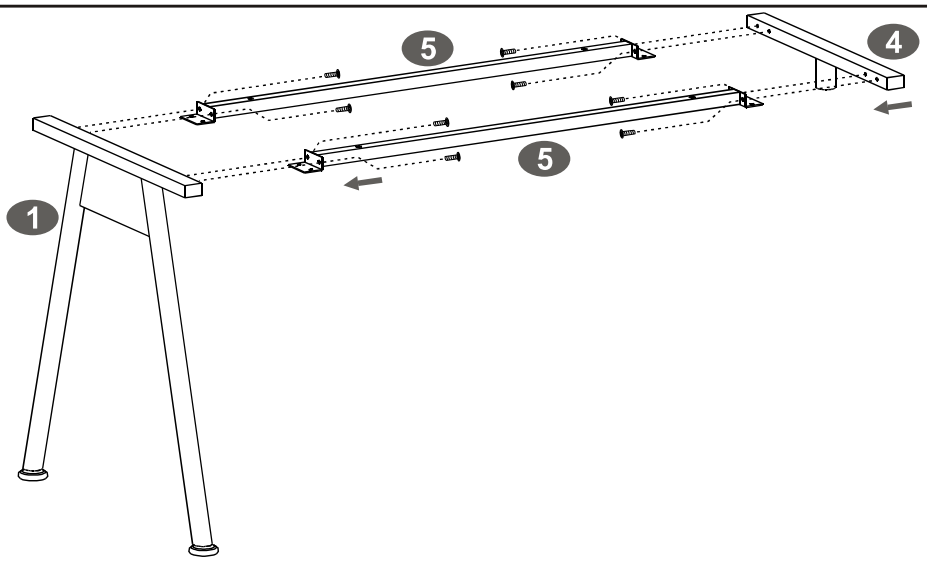

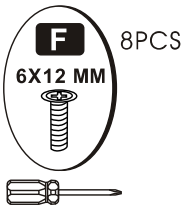

31

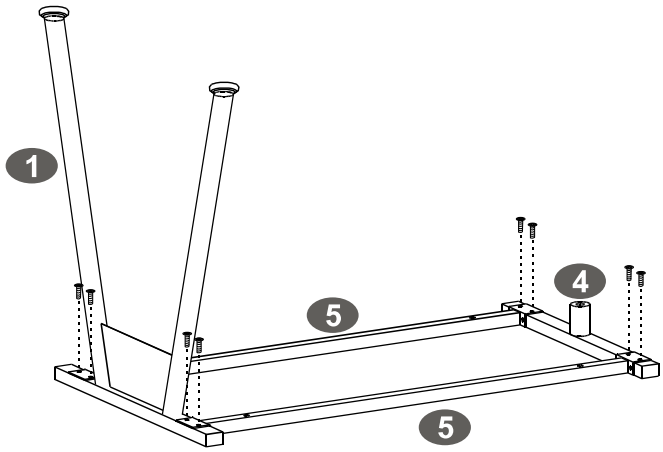

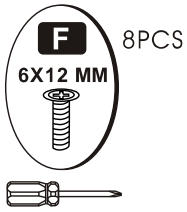

32

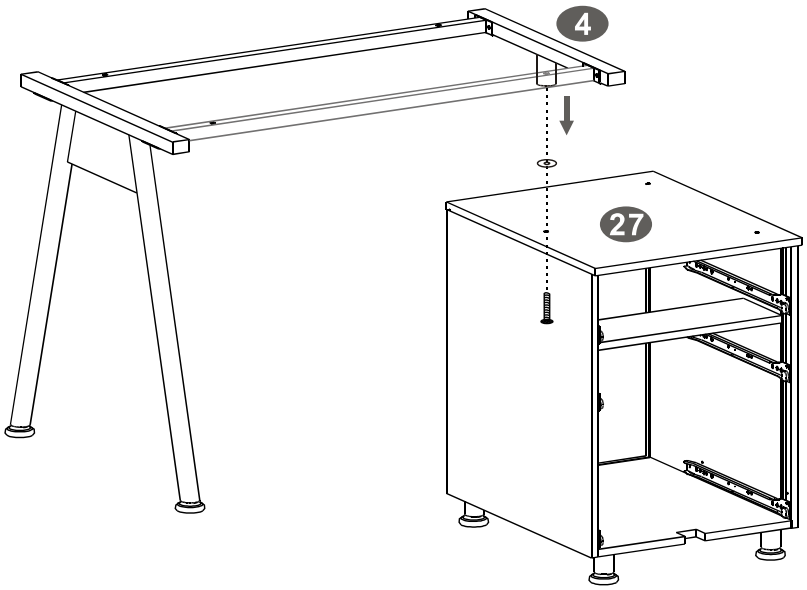

33

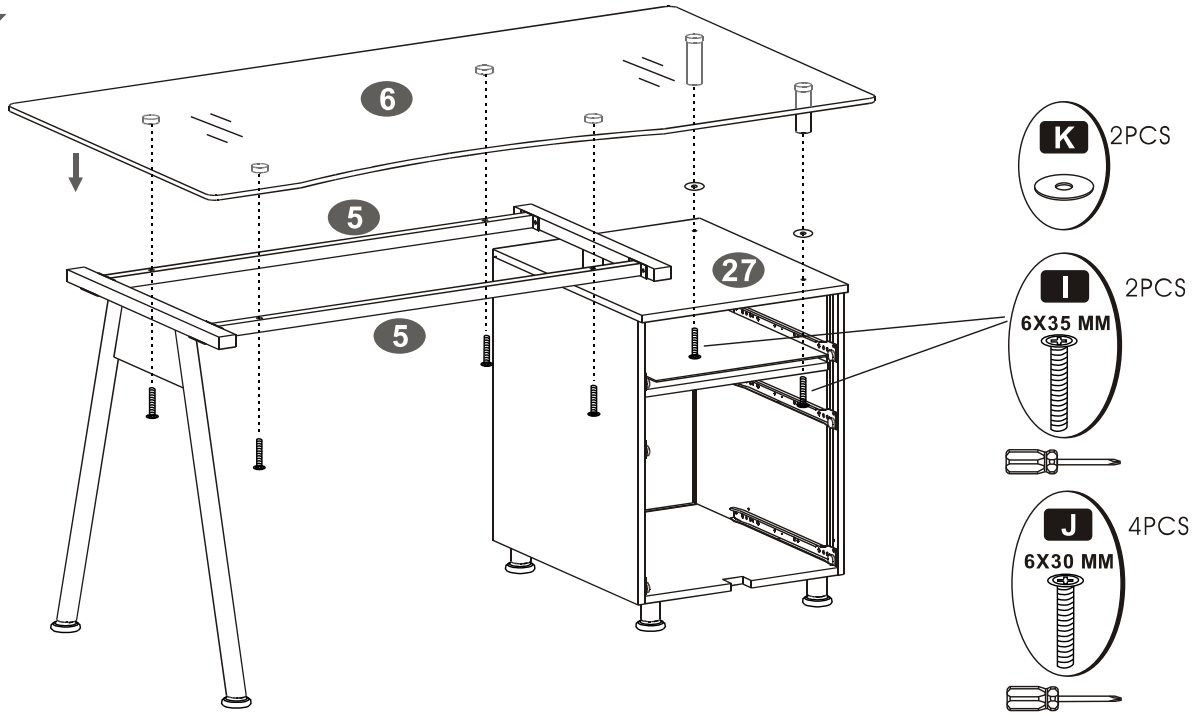
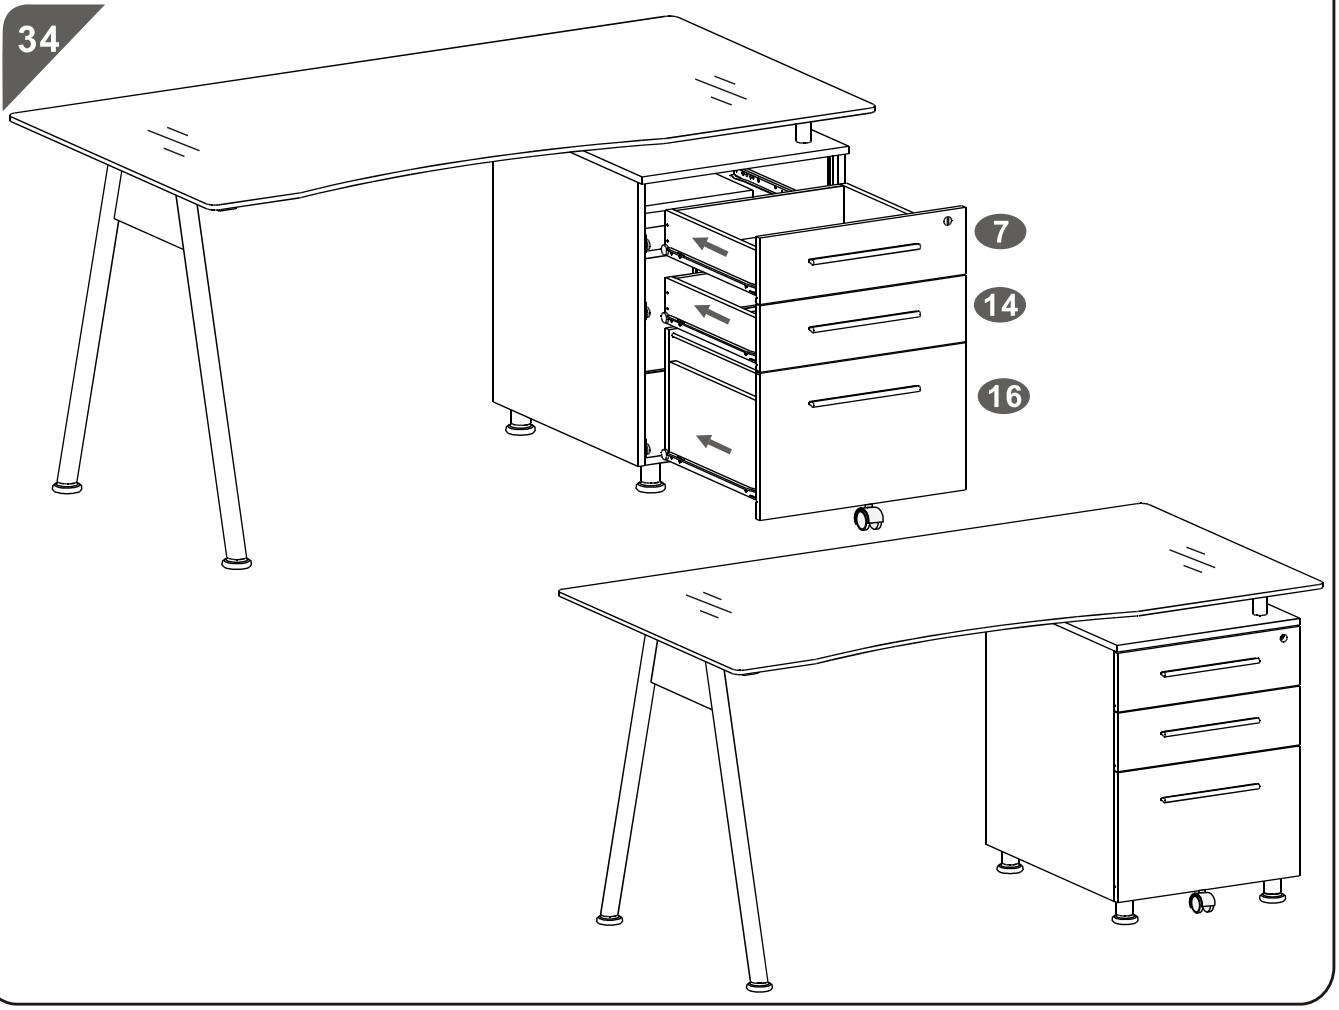
34