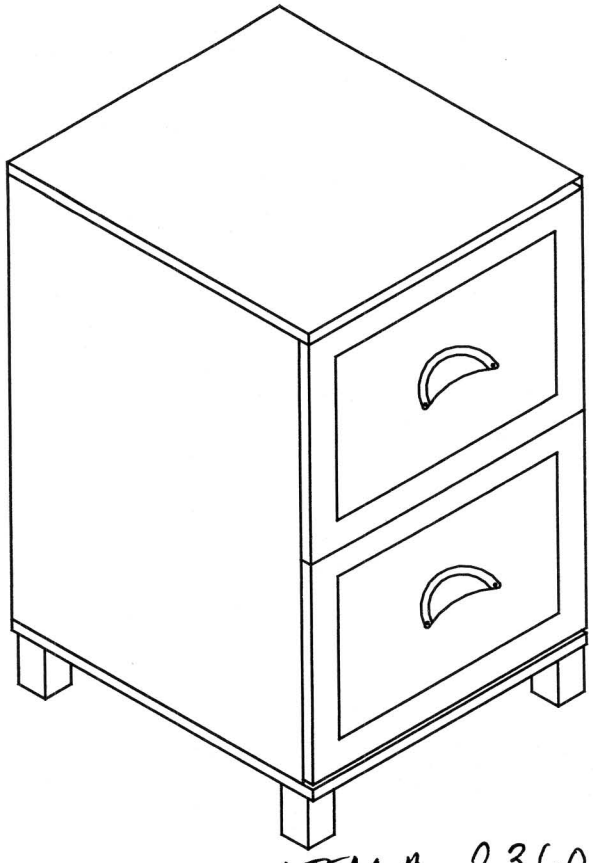

ITEM # 23602

Bradley 2 Drawer Filing Cabinet

Hardware List

ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
A	Cam Bolt 6X35mm		16pcs	G	Metal Rod 5X383mm		4pcs
B	Cam Lock 15X10mm		16pcs	H	Screw 4X30mm		8pcs
C	Wooden Dowel 8X30mm		8pcs	I	Screw 2.5X14mm		12pcs
D	Handle		2pcs	J	Allen Head Screw 5X45mm		8pcs
E	Screw 3X12mm		32pcs	K	Allen Key 115X30mm		1pc
F	Metal Drawer Glide 380X35X13mm		4pcs				

Part List

ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
1	Top Panel		1pc	7	Drawer Front Panel		2pcs
2	Left Side Panel	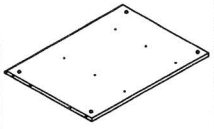	1pc	8	Drawer Left Side Panel		2pcs
3	Right Side Panel	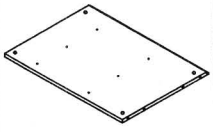	1pc	9	Drawer Right Side Panel		2pcs
4	Bottom Panel		1pc	10	Drawer Back Panel		2pcs
5	Wooden Leg		4pcs	11	Drawer Bottom Panel		2pcs
6	Back Panel		1pc				

STEP 1

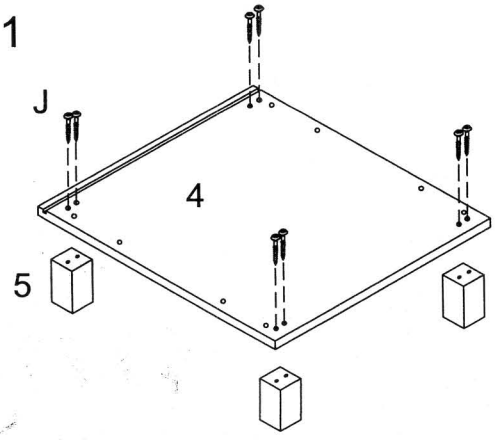

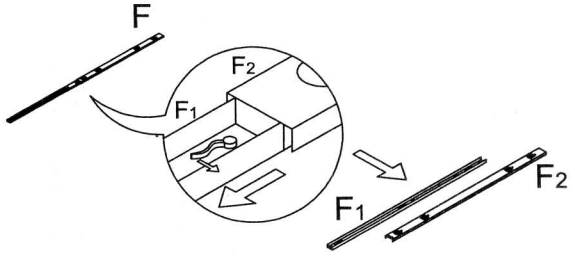

1. Assemble the wooden legs (5) to bottom panel (4) by using allen head screw (J), tighten with allen key (K).
2. Split metal drawer glide (F) to two parts (F1 and F2) as shown.

Made In China

STEP 2

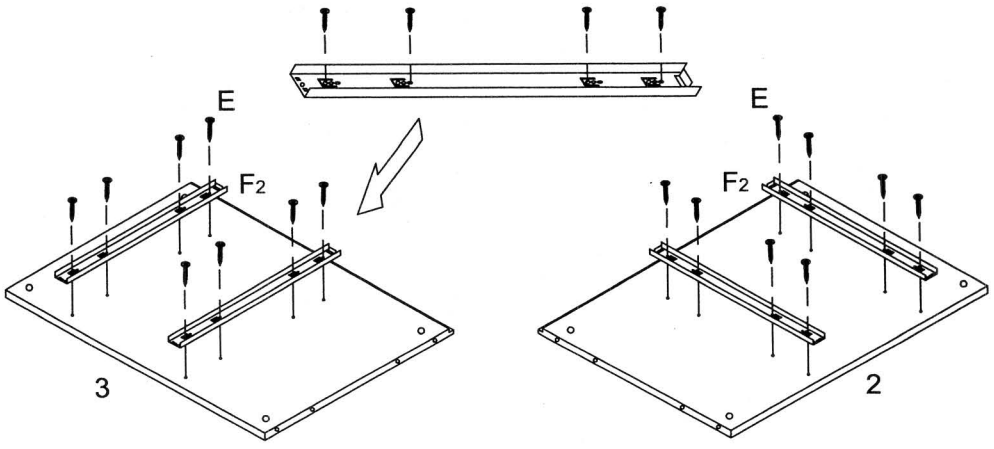

1. Assemble the metal drawer glide (F_2) to side panel (2 & 3) by using screw (E) as shown.

STEP 3

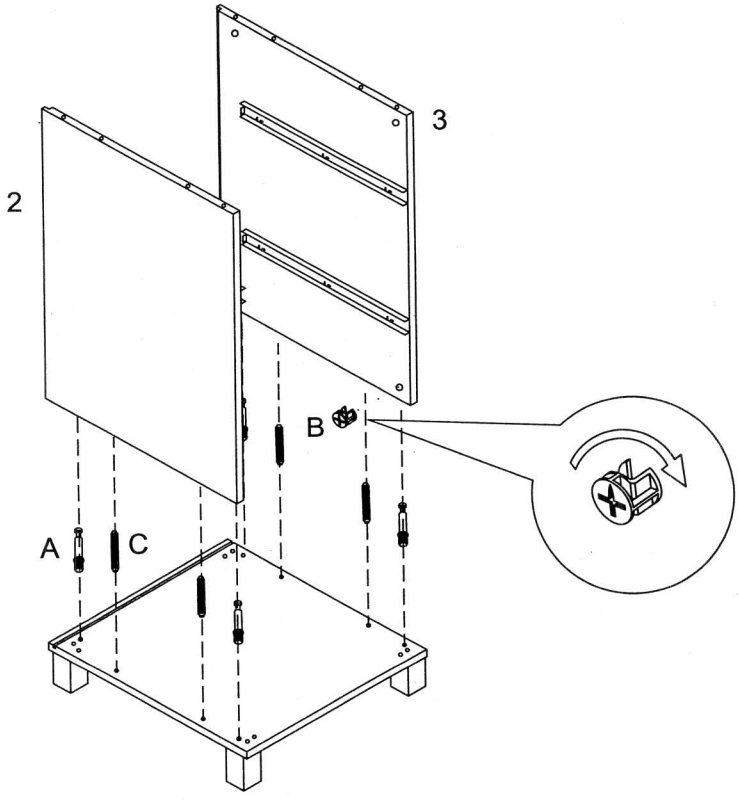

1. Insert wooden dowel (C) and screw the cam bolt (A) to the holes on bottom panel (4) as shown.
2. Attach the left side panel (2) and right side panel (3) to the bottom panel (4).
3. Insert the cam lock (B) to the holes on side panel (2 & 3) then rotate clockwise to secure cam bolt in place.

STEP 4

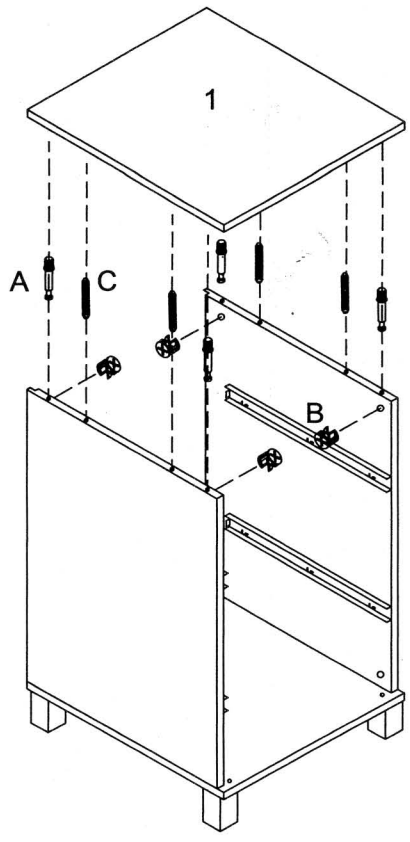

1. Insert wooden dowel (C) and screw the cam bolt (A) to the holes on top panel (1) as shown.
2. Attach the top panel (1) to the unit from step 3.
3. Insert the cam lock (B) to the holes from step 3 then rotate clockwise to secure cam bolt in place.

STEP 5

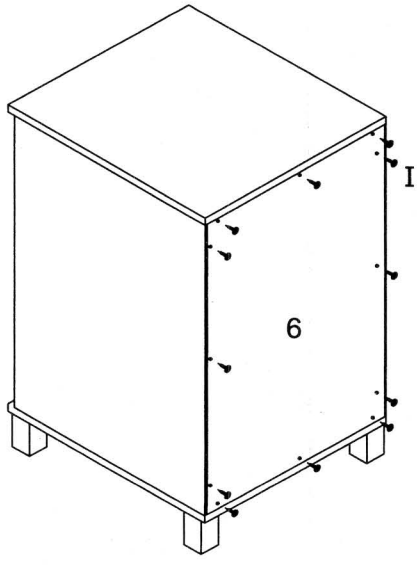

1. Attach the back panel (6) to the unit from step 4 by using screw (I).

STEP 6

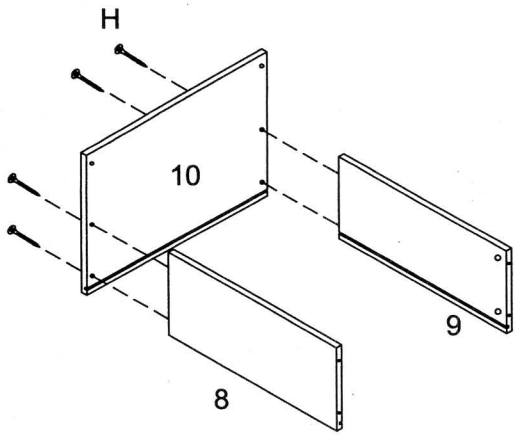

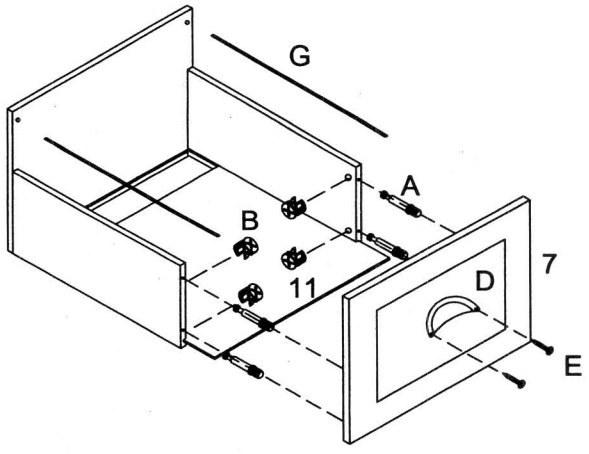

1. Assemble drawer side panel (8 & 9) and drawer back panel (10) together by using screw (H).Do not overtighten.
2. Screw the cam bolt (A) to drawer front panel (7).
3. Assemble the handle (D) to drawer front panel (7) by using screw (E).
4. Assemble the metal rod (G),drawer bottom panel (11) and drawer front panel (7) to the drawer.
5. Insert the cam lock (B) to the holes on drawer sid e panel (8 & 9) then rotate clockwise to secure cam bolt in place.

STEP 7

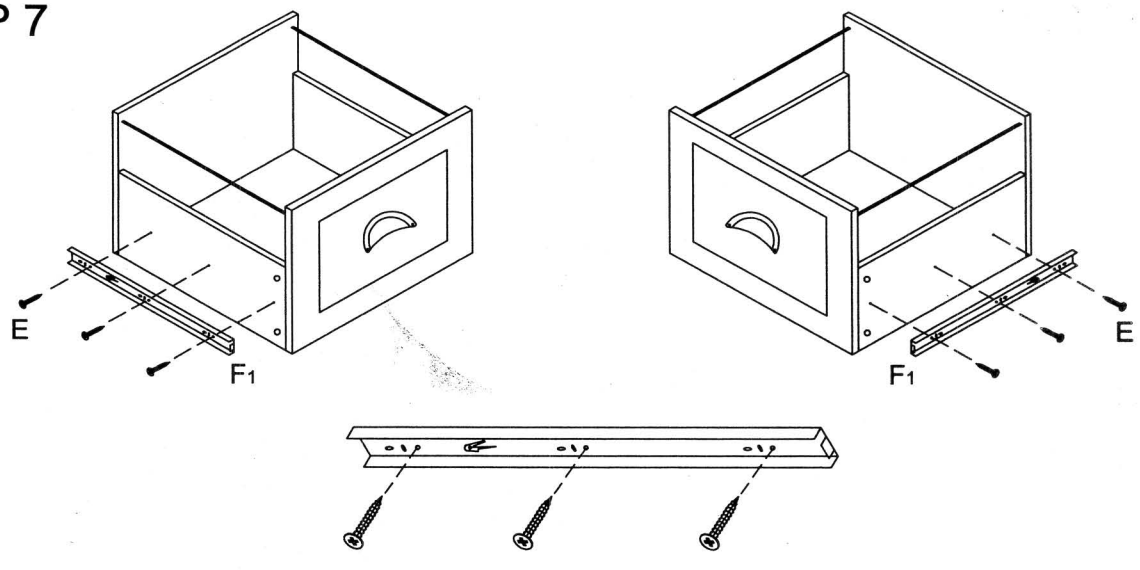

1. Assemble drawer metal glide (F 1) to drawer side panel (8 & 9) by using screw (E) as shown.

STEP 8

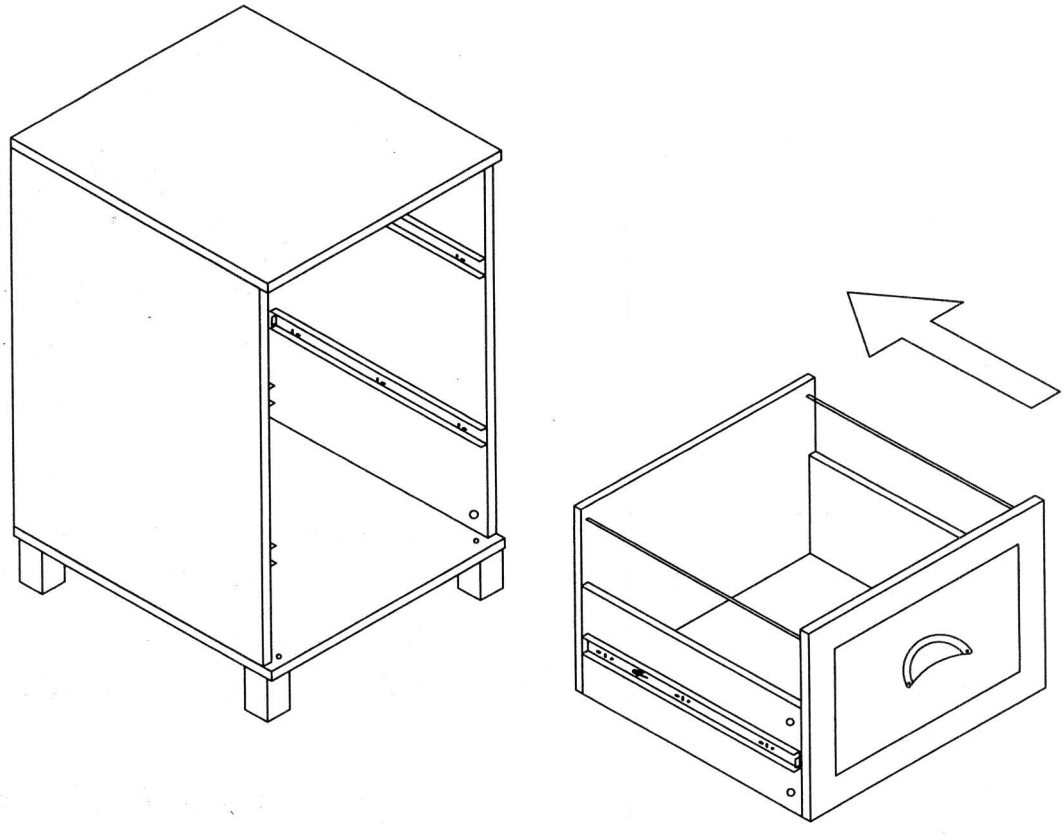

1. Insert the drawer into the cabinet.
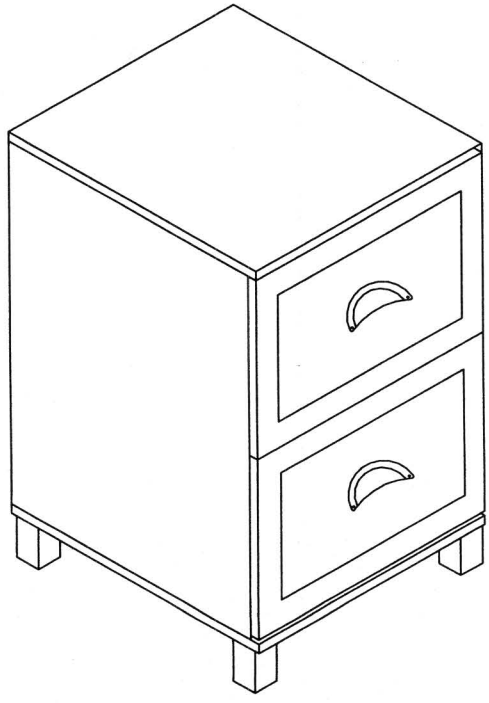
STEP 9