Contemporary Lighting™

Installation Instructions
Model E23144-10PC

1.Turn breaker off for circuit on outlet where fixture is to be installed.
2.Remove mounting bracket from fixture and install to electrical box.
3.Measure distance from ceiling that fixture is to hang. Adjust support cables accordingly by pushing spring loaded pin and pushing cable through. When pin is release it will lock onto cable. Extra cable can be cut but leave at least 10" extra. Reattach safety stops to end of cable.
4.Wire fixture to wires in outlet box. Green wire is for Ground.
5.Install fixture to outlet box and secure with center lock up knob.
6.Level fixture by adjusting 4 cables. Attach power wire to cable using clips supplied.
7.Remove protective coating from inner pan.
8.Install inner crystal strings to metal loops on bottom of pan per diagram below. It is recommended to use glove included and not touch crystal with bare fingers.
9.Install 40 watt G9 xenon bulbs by gently pushing into socket.

(Caution: Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum 10 minutes before handling.)

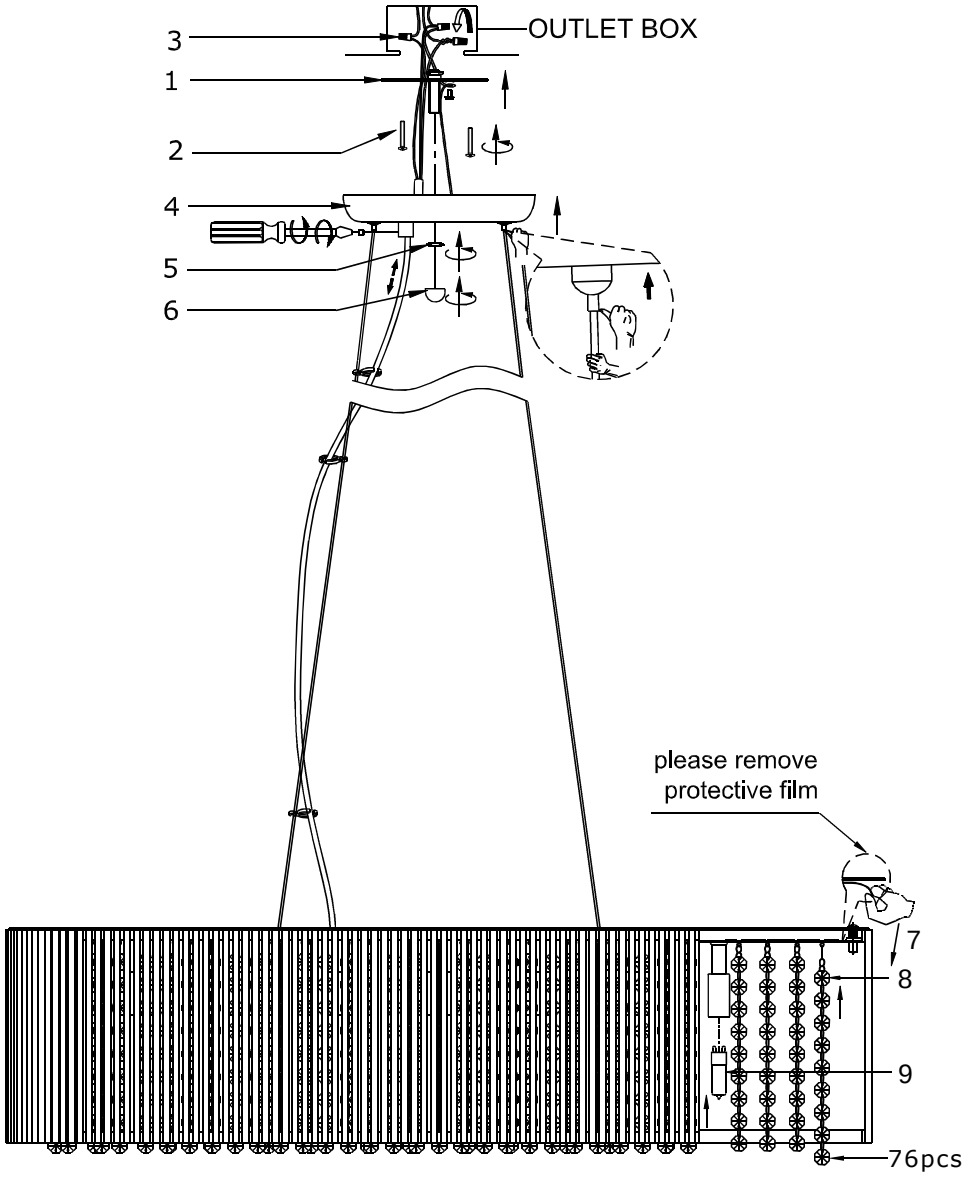
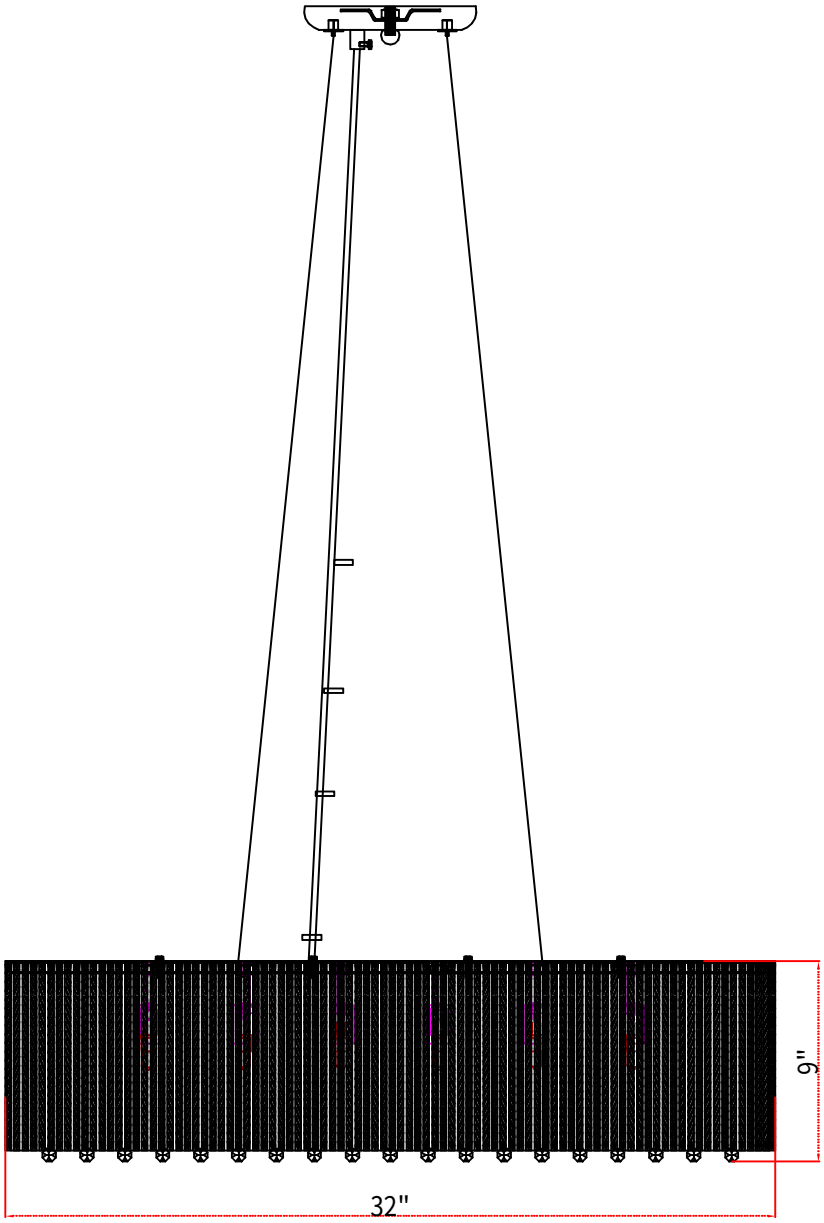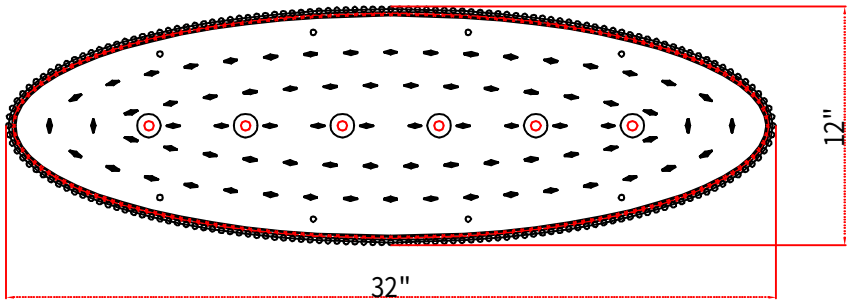
Model E23144-10PC