


## ASSEMBLY INSTRUCTIONS: 6 SIDED PERIPHERAL STAND (1020XL/EL12XL)

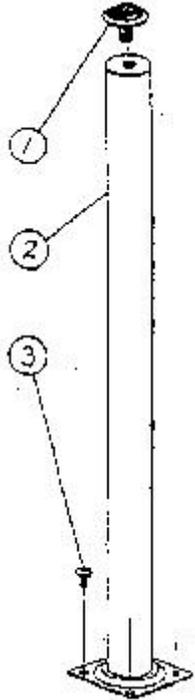

HARDWARE		
QUANTITY	PART NUMBER	DESCRIPTION
5	1010528	PERIPHERAL STAND GLIDE
24	1010555	10/32 X 1/2" MACHINE SCREW

### INSTRUCTIONS

NOTE: Your peripheral stand will come with a quantity of predrilled leg mounting holes. The quantity of the four hole pattern varies with the table style you purchased. The quantity of four hole patterns varies from four to six.

1. Lay the top upside down on a clean, scratch free surface.
2. Place leg over on predrilled four hole pattern and fasten in place using four 10/32 X 1/2" machine screws.
3. Fasten glide to leg bottom. This glide can be used for leveling the stand.
4. Repeat steps 2 and 3 as required to place all legs on your table.