
Q UOTZZEL GOOSE CREEK, SC. 29445 www. quoizel. com

INSTRUCTION SHEET : IS-DH1718 STYLE NUMBER : DH1718PN, DH1718AN DH1722PN, DH1722AN

PACKAGE CONTENTS

ISSUED 09-2008



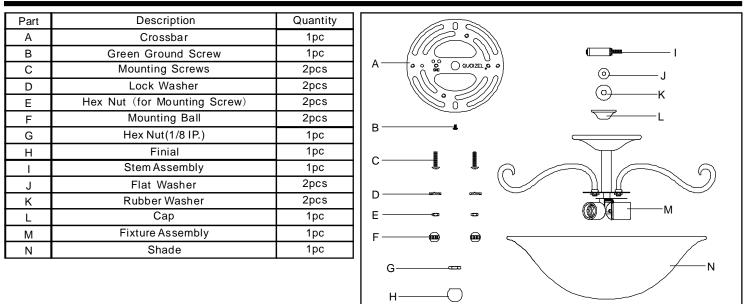

WARNINGS AND CAUTIONS

WARNING:

• Before beginning the installation, turn off electricity at the circuit breaker box or the main fuse box by switching off the circuit breaker or removing the fuse.

CAUTION:

• These instructions are provided for your safety. It is very important that they are read completely before the installation of your fixture. We strongly recommend that a professional electrician install the fixture.

- Disconnect fixture from the power source before replacing the bulb(s), making sure the bulb(s) had
- sufficient time to cool down. DO NOT subject the lamp to any shock while lit as shattering of lamp may result.


PREPARATION

- Before beginning installation of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement part.
- Estimated Assembly Time : 15 30 minutes
- Tools Required for Assembly (not included) : Flathead Screwdriver, Phillips Screwdriver, Pliers,
- Electrical Tape, Wire Cutters, Safety Glasses &3, 100 Watt, Type A Medium Base Bulbs.
- Helpful Tools (not included) : Wire Strippers.

INSTALLATION INSTRUCTIONS

STEP 1:

- a. Screw the Mounting Screws into the Crossbar, place the Lock Washers over the Mounting Screws and thread the Hex Nuts onto the Mounting Screws as shown. Secure the position of the Mounting Screws by tightening the Hex Nuts against the Crossbar.
- b. Secure the Crossbar to the Outlet Box with Outlet Box Screws.

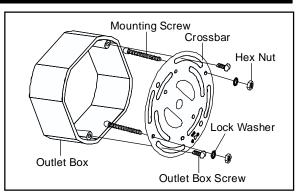


STEP 2:


 $\ast \textsc{Use}$ Wire Connectors (not supplied) to connect the wires.

- a. Connect the House Ground Wire to the Fixture Ground Wire.
- b. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).
- c. Connect the House Black(or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
- d. Wrap each connection with approved electrical tape and carefully stuff all of the connected wires into the Outlet Box.

STEP 3 :


- a. Unfold Side Arms at 120 degree locations.
- b. Place the Ceiling Canopy onto Outlet Box aligning 2 holes in the Ceiling Canopy with 2 Mounting screws threaded on the Crossbar and secure it against wall with Mounting Balls.

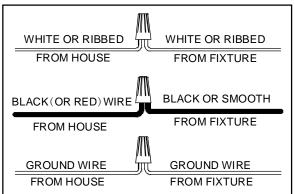

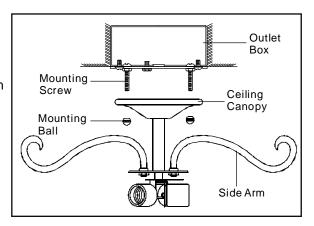

STEP 4 :

 a. Thread the beaded end of the Stem Assembly into the Coupling underside of the Socket Cluster. Hand tighten until snug.

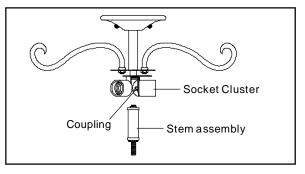


STEP 5 :

a. Locate the following components over the end of the Stem Assembly in turn: Flat Washer, Rubber Washer, Shade, Rubber Washer and

Flat Washer, Rubber Washer, Shade, Rubber Washer and Flat Washer.

- b. Thread the Hex Nut onto the end of the Stem Assembly to secure the above parts. Tighten until snug.
- c. Locate the Cap over the end of the Stem Assembly and secure by threading the Finial onto the Stem. Hand tighten until snug.

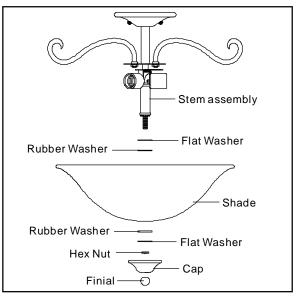

STEP 6 :

a. Install correct bulbs referring to fixture markings and/or labels for maximum wattage.

Your installation is completed now. Restore electricity. Retain this sheet for future reference.