


ASSEMBLY INSTRUCTION

Remove all items from the carton. Verify all pieces before assembly

PART	QTY		PART	QTY		PART	QTY	
1	1	Star Base	5	1	Back Support+Arm(pre-assembled)	E	5	Caster
2	1	Cylinder Column	A	4	Allen Bolt 6 x 25 x10 mm	F	2	Cap cover (Upper)
3	1	Seat+Mechanism(pre-assembled)	B	4	Allen Bolt 8 x 25 x 10 mm	G	2	Allen Wrench (Lower)
4	1	Back Frame	C	4	Washer			


NOTE:The discarded packaging for the unit can be used as a helpful way to support it during the assembly process.

STEP 1.

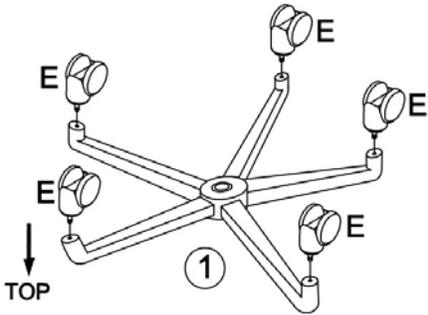


(UNDERSIDE)

STEP 2.

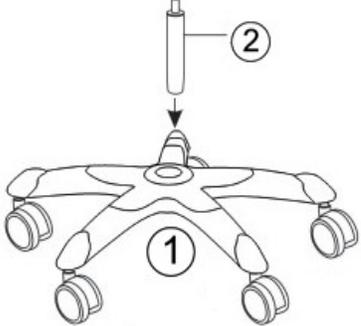


STEP 3.

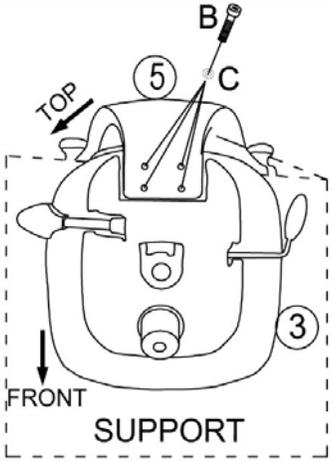

UNDERSIDE OF CHAIR

STEP 4.

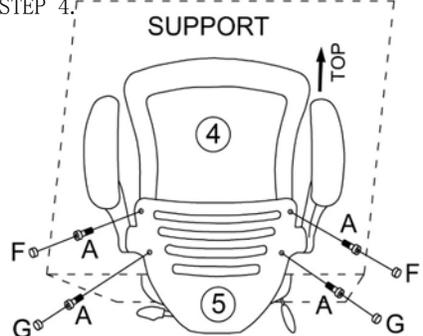


BACK OF CHAIR

NOTICE:
ATTACH BACK TO BACK SUPPORT,
AND FULLY TIGHTEN ALL SCREWS.



AS WITH ALL MOVABLE MECANICAL DEVICES; IT IS ADVISED TO PERIODICALLY CHECK TO MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.

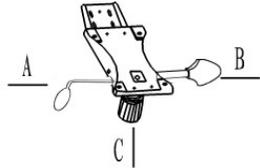

MECHANISM OPERATION INSTRUCTION
WHILE SEATED:

(A) SEAT HEIGHT ADJUSTMENT:
Pull lever up. Release lever when desired position is reached

(B) BACK TILT ADJUSTMENT:
Push lever up to release; pull lever down to lock.

(C) TILT TENSION ADJUSTMENT KNOB:
Rotate knob clockwise/counterclockwise to adjust tilt tension based on body weight.

PREVENTIVE MAINTENANCE AND WARNING!


- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE THIS CHAIR AS A STEP STOOL/LADDER.
- DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT.
- DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE TIGHT.
- **IT'S ADVISED TO PERIODICALLY CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.**
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- **WARNING: TO AVOID DANGER OF SUFFOCATION, KEEP THIS PLASTIC BAG AWAY FROM BABIES & CHILDREN. DO NOT USE THIS BAG IN CRIBS, BEDS, CARRIAGES, PLAY PENS OR AS HEAD COVERING.**
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

Edge office chair - EEI595/EEI594 KEEP THIS PAGE FOR FUTURE REFERENCE.




ZP-801 Assembling Instruction


First Step

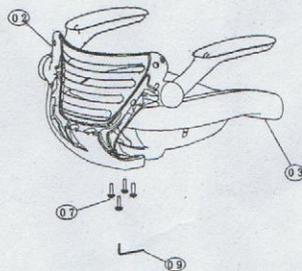

Second Step

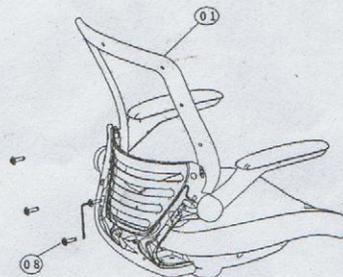

Third Step

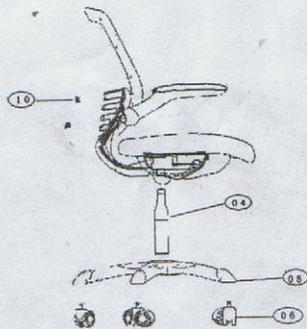

Assembling steps:

First step: Put 03 on the table, then get out 02 and 4 pcs M8*35 with gasket 07, aim the bottom of 02 with holes on the bottom of 03, then screw it with wrench; Adjust the space between 02 and 03, then locking the screws.

Second step: Get out 01 and 4 pcs M6*25 from the screw box. Aim 01 at the 4 holes of 02, then locking the screws.

Third Step: Get out 4 soft cap from the screw box, cover them on the back of back support respectively; then plug gas lift into the hole of 03; finally, insert base and castors.

No.	Description	Size	Quantity
01	back		1set
02	Backsupport and armrest		1set
03	Seating		1pc
04	Gas lift	80/100	1pc
05	Base	ZP-330	1pc
06	Castor	Ø50	5pcs
07	Screw box	M8*35 ø 8 *2	4 sets
08	Screw box	M6*30	4 pcs
09	Screw box	Wrench	1 pc
10	Screw box	Cap	4 pcs
11	Instruction paper		1 pc